

Catalog Number 58

 
PARTS CATALOG

 
Hydraquadder

• LINOTYPE •

MERGENTHALER LINOTYPE COMPANY

LEADERSHIP THROUGH RESEARCH

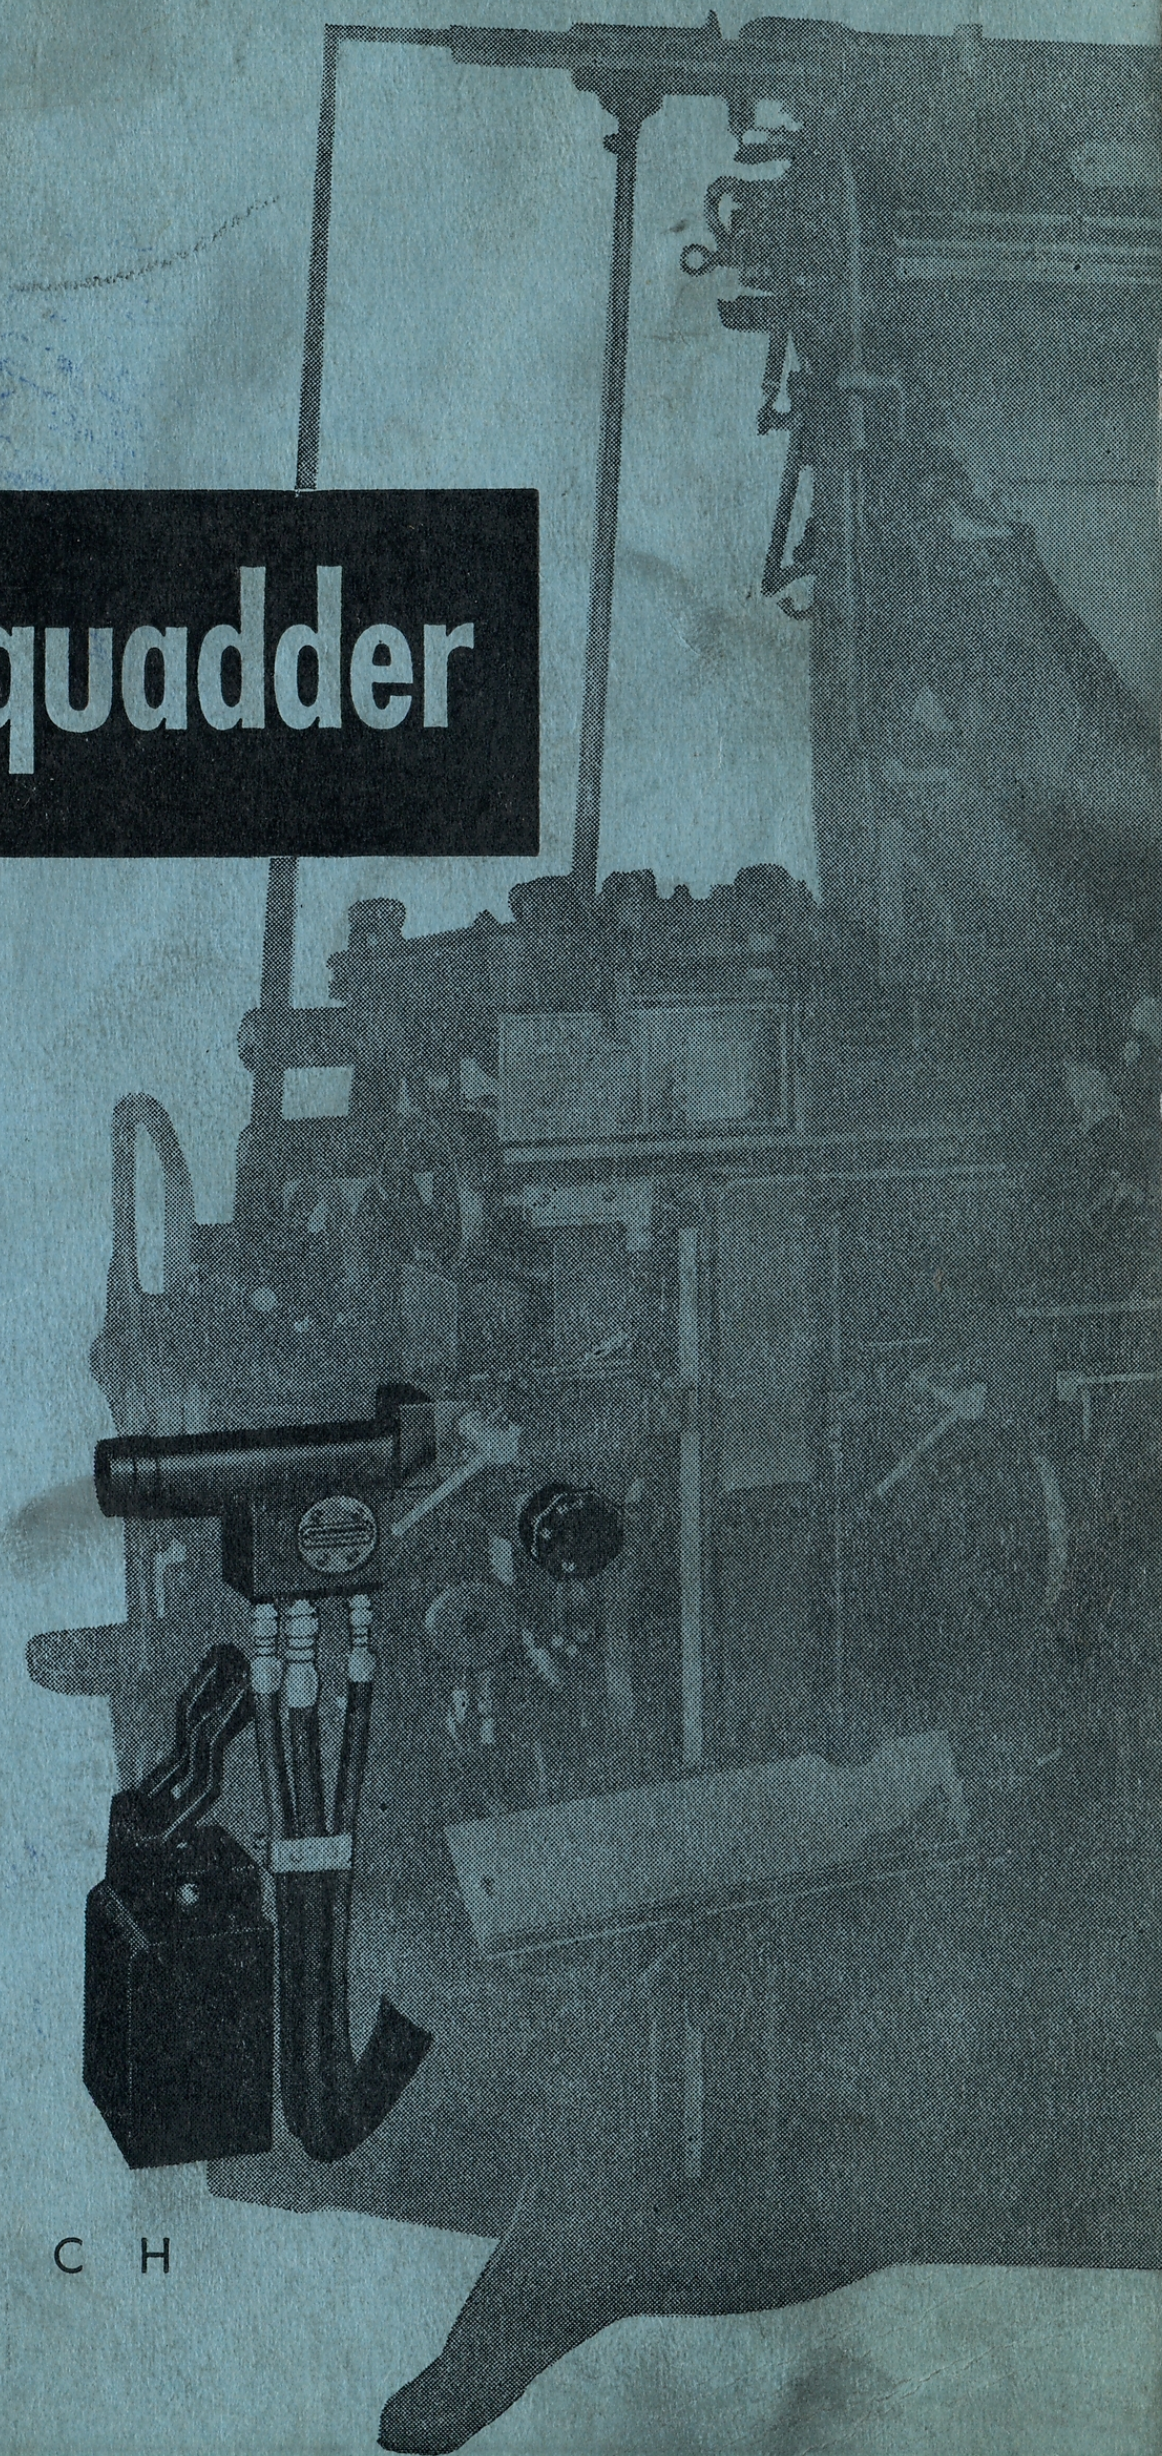


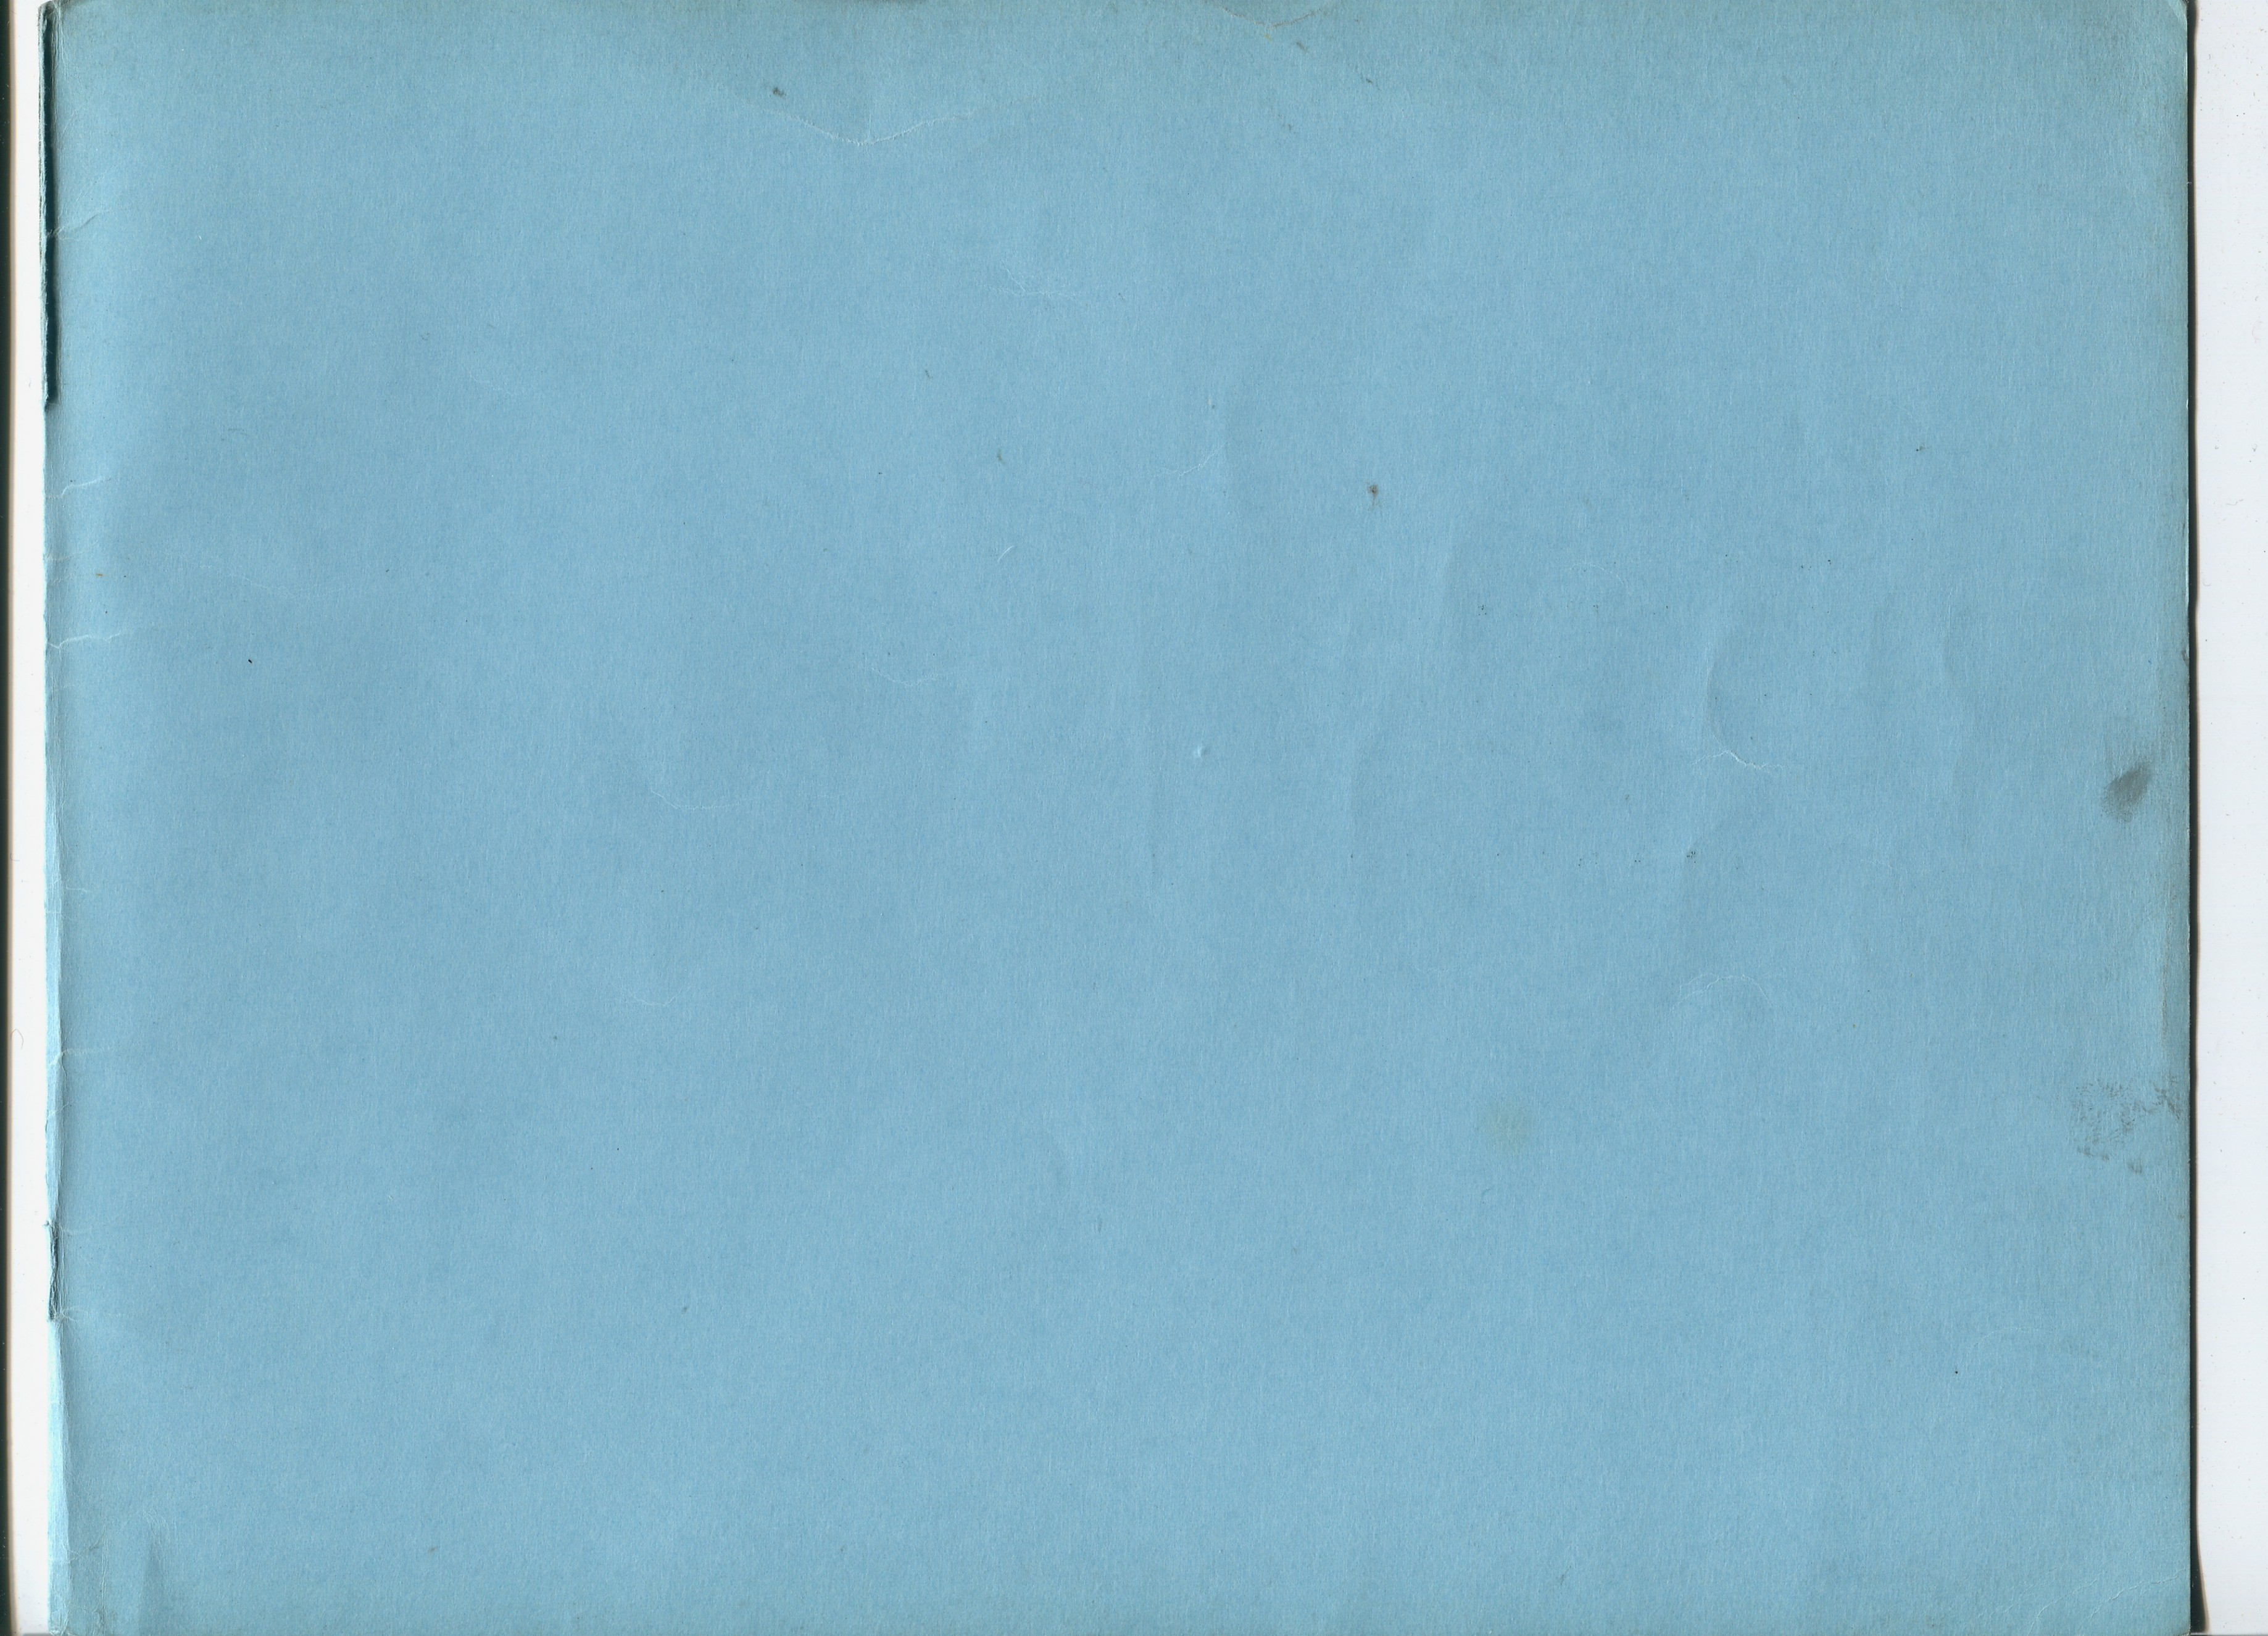

Parts Catalog for the
LINOTYPE HYDRAQUADDER

Manual Hydraquadder—Front Section, Pages 2-20

 Electrically Controlled Hydraquadder—Rear Section, Pages 21-38

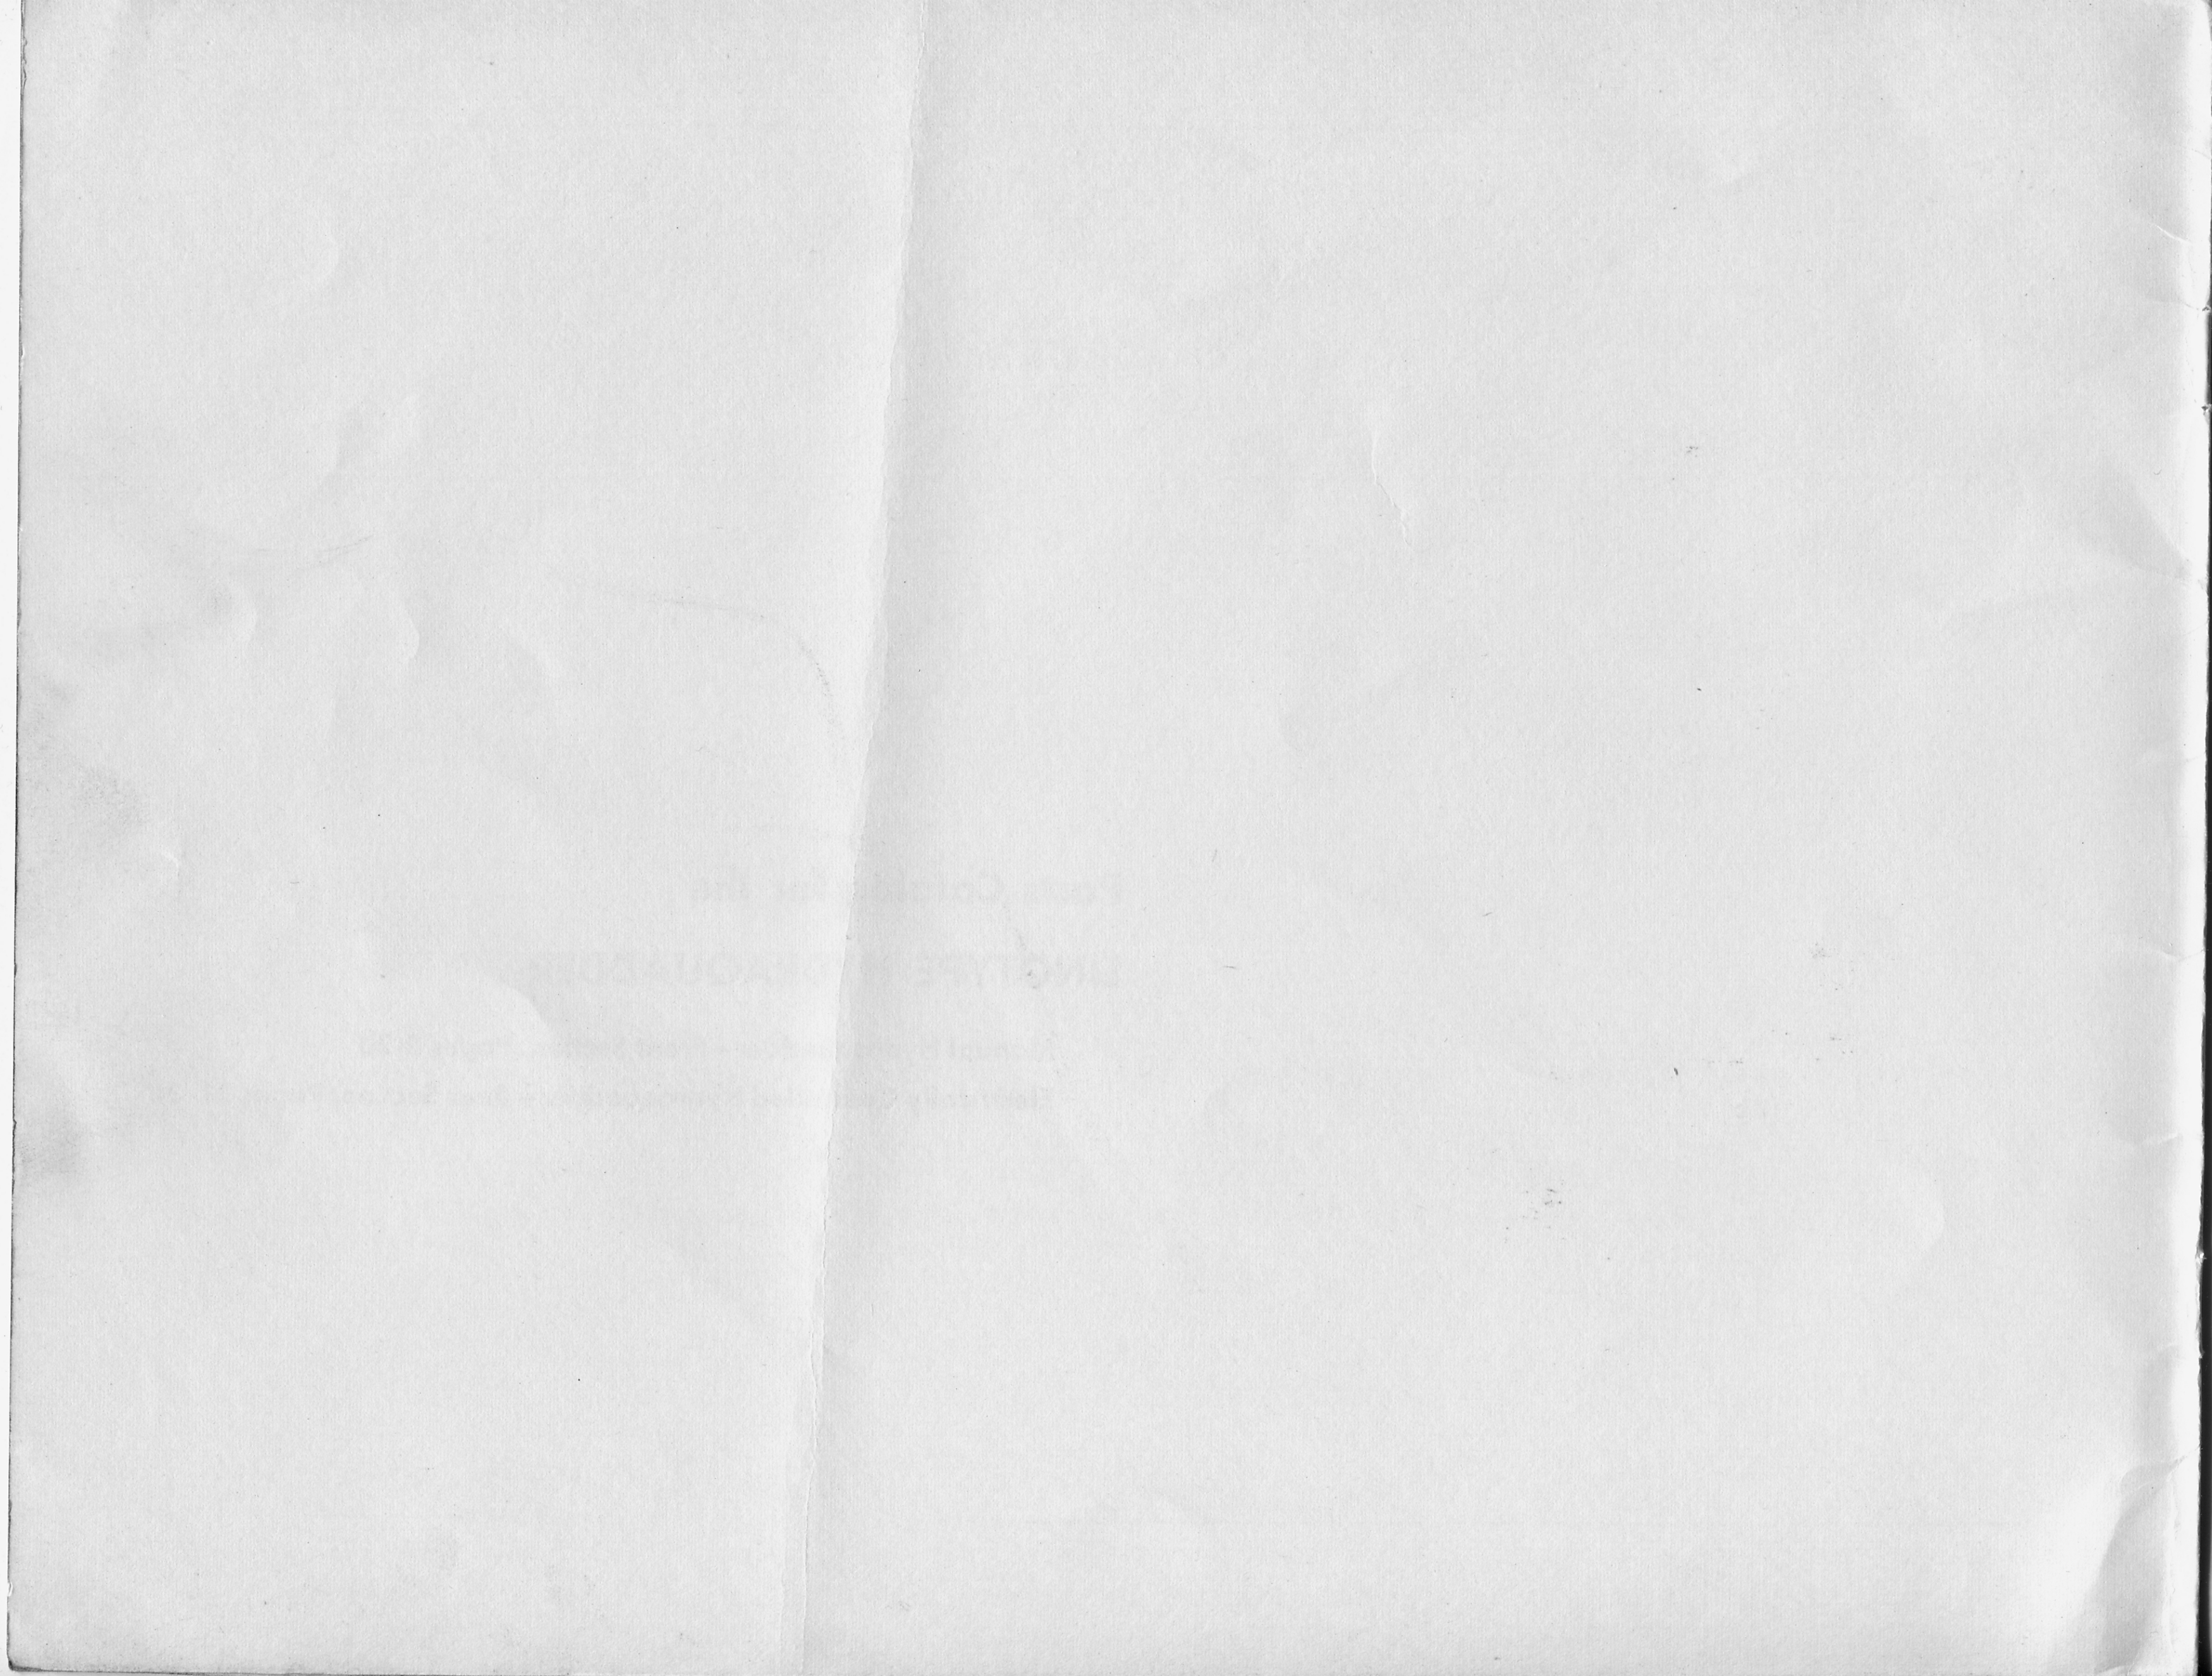

GENERAL INFORMATION

THIS CATALOG is for use in ordering replacement parts for the Linotype Hydraquadder. The parts are shown as assemblies in most instances with individual parts being "exploded" out of the assembly for easy identification.

In addition to being identified by part number, each part is named and the quantity used in the particular assembly is indicated by the digit following the name, if more than one of the part is used.

The index lists each part by number, name, and the page or pages on which the part is shown.

The heading at the top of each page identifies the general assembly in which the parts shown on the page are included.

INSTRUCTIONS FOR ORDERING

1. Always use Linotype Company standard order forms which are supplied free of charge on request.

2. State plainly the letter, number and full name of the part desired. Give company name and address in full.

3. Always give the model and serial number of the Linotype for which the parts are required. The model and serial number appear on the patent plate of the ma-

chine. The Hydraquadder also has a serial number stamped on the face of the cylinder housing and this number should be specified.

4. When ordering an electrical part always specify the electrical characteristics of the power source on which it operates.

5. If unable to locate a part in the catalog please make a rough sketch of what is wanted, stating where it is used, and its function.

6. Give Shipping Instructions: Freight, Express, Parcel Post or Air Service. If Freight, state preferred route of shipment. If no shipping instructions are indicated, our Traffic Department will determine the best and most economical manner of shipment.

7. Special and careful attention is given to the inspection, packing and shipping of all parts and supplies. Goods sent by parcel post, valued at \$1.00 or more, will be insured at our expense.

8. Parts and supplies furnished in accordance with written orders are not returnable for credit. If for any reason it is necessary to return goods, they should be insured if sent by Parcel Post. The Linotype Company

should be advised as to the reason for the return and the Linotype order number on which the part was supplied.

Careful preparation of your order will facilitate shipment.

DAMAGE OR LOSS IN TRANSIT

When express or freight shipments are delivered by us to the transportation company, our responsibility ceases. However, we offer you every assistance in tracing and recovering lost goods and collecting just claims. Such claims are not to be deducted from our invoice and payment should not be withheld awaiting adjustment of such claim, as the transportation company is responsible to the consignee for safe delivery.

Damage or Loss:

If shipment is not delivered to you in good order and in accordance with quantity shown on bill-of-lading,

have the shortage or damage noted by carrier's agent on receipt or freight bill.

If you accept shipment from transportation company short of what is enumerated on bill-of-lading, or damaged, without having proper notations made by the carrier's agent, you do so at your own risk.

Damage Discovered While Unpacking:

If any damage is discovered when unpacking, leave the shipment in the exact condition in which it was received until the carrier's agent examines the shipment and makes a notation, on your freight bill, of concealed damage.

File Claims Promptly:

The transportation company will not consider claims unless presented within four months from date of shipment of goods.

• **LINOTYPE** •

Mergenthaler Linotype Company, 29 Ryerson Street, Brooklyn 5, N. Y.


INDEX TO MECHANISMS


Linotype Manual Hydraquadder

	<u>Page</u>
Control Valve	5
Cylinder Piston, Piston Rods, and L. H. Vise Jaw Adjustment	3
Delivery Slide	9
First Elevator Jaw	14, 15
Hydraulic Pump	10
Miscellaneous Parts	16, 17
Pot Pump Solenoid and Bracket	11
Power Supply Box	12
Selector Handle, Centering Pinion, and Justification Blockout	6
Selector Valve and Housing	4
Sump, Hoses, Operating Levers, and Operating Cam	2
Vise Jaw and Blocks	7, 8
Vise Locking Studs and Screws	13


For Index to Parts, See Pages 19, 20

  Sump, Hoses, Operating Levers, and Operating Cam

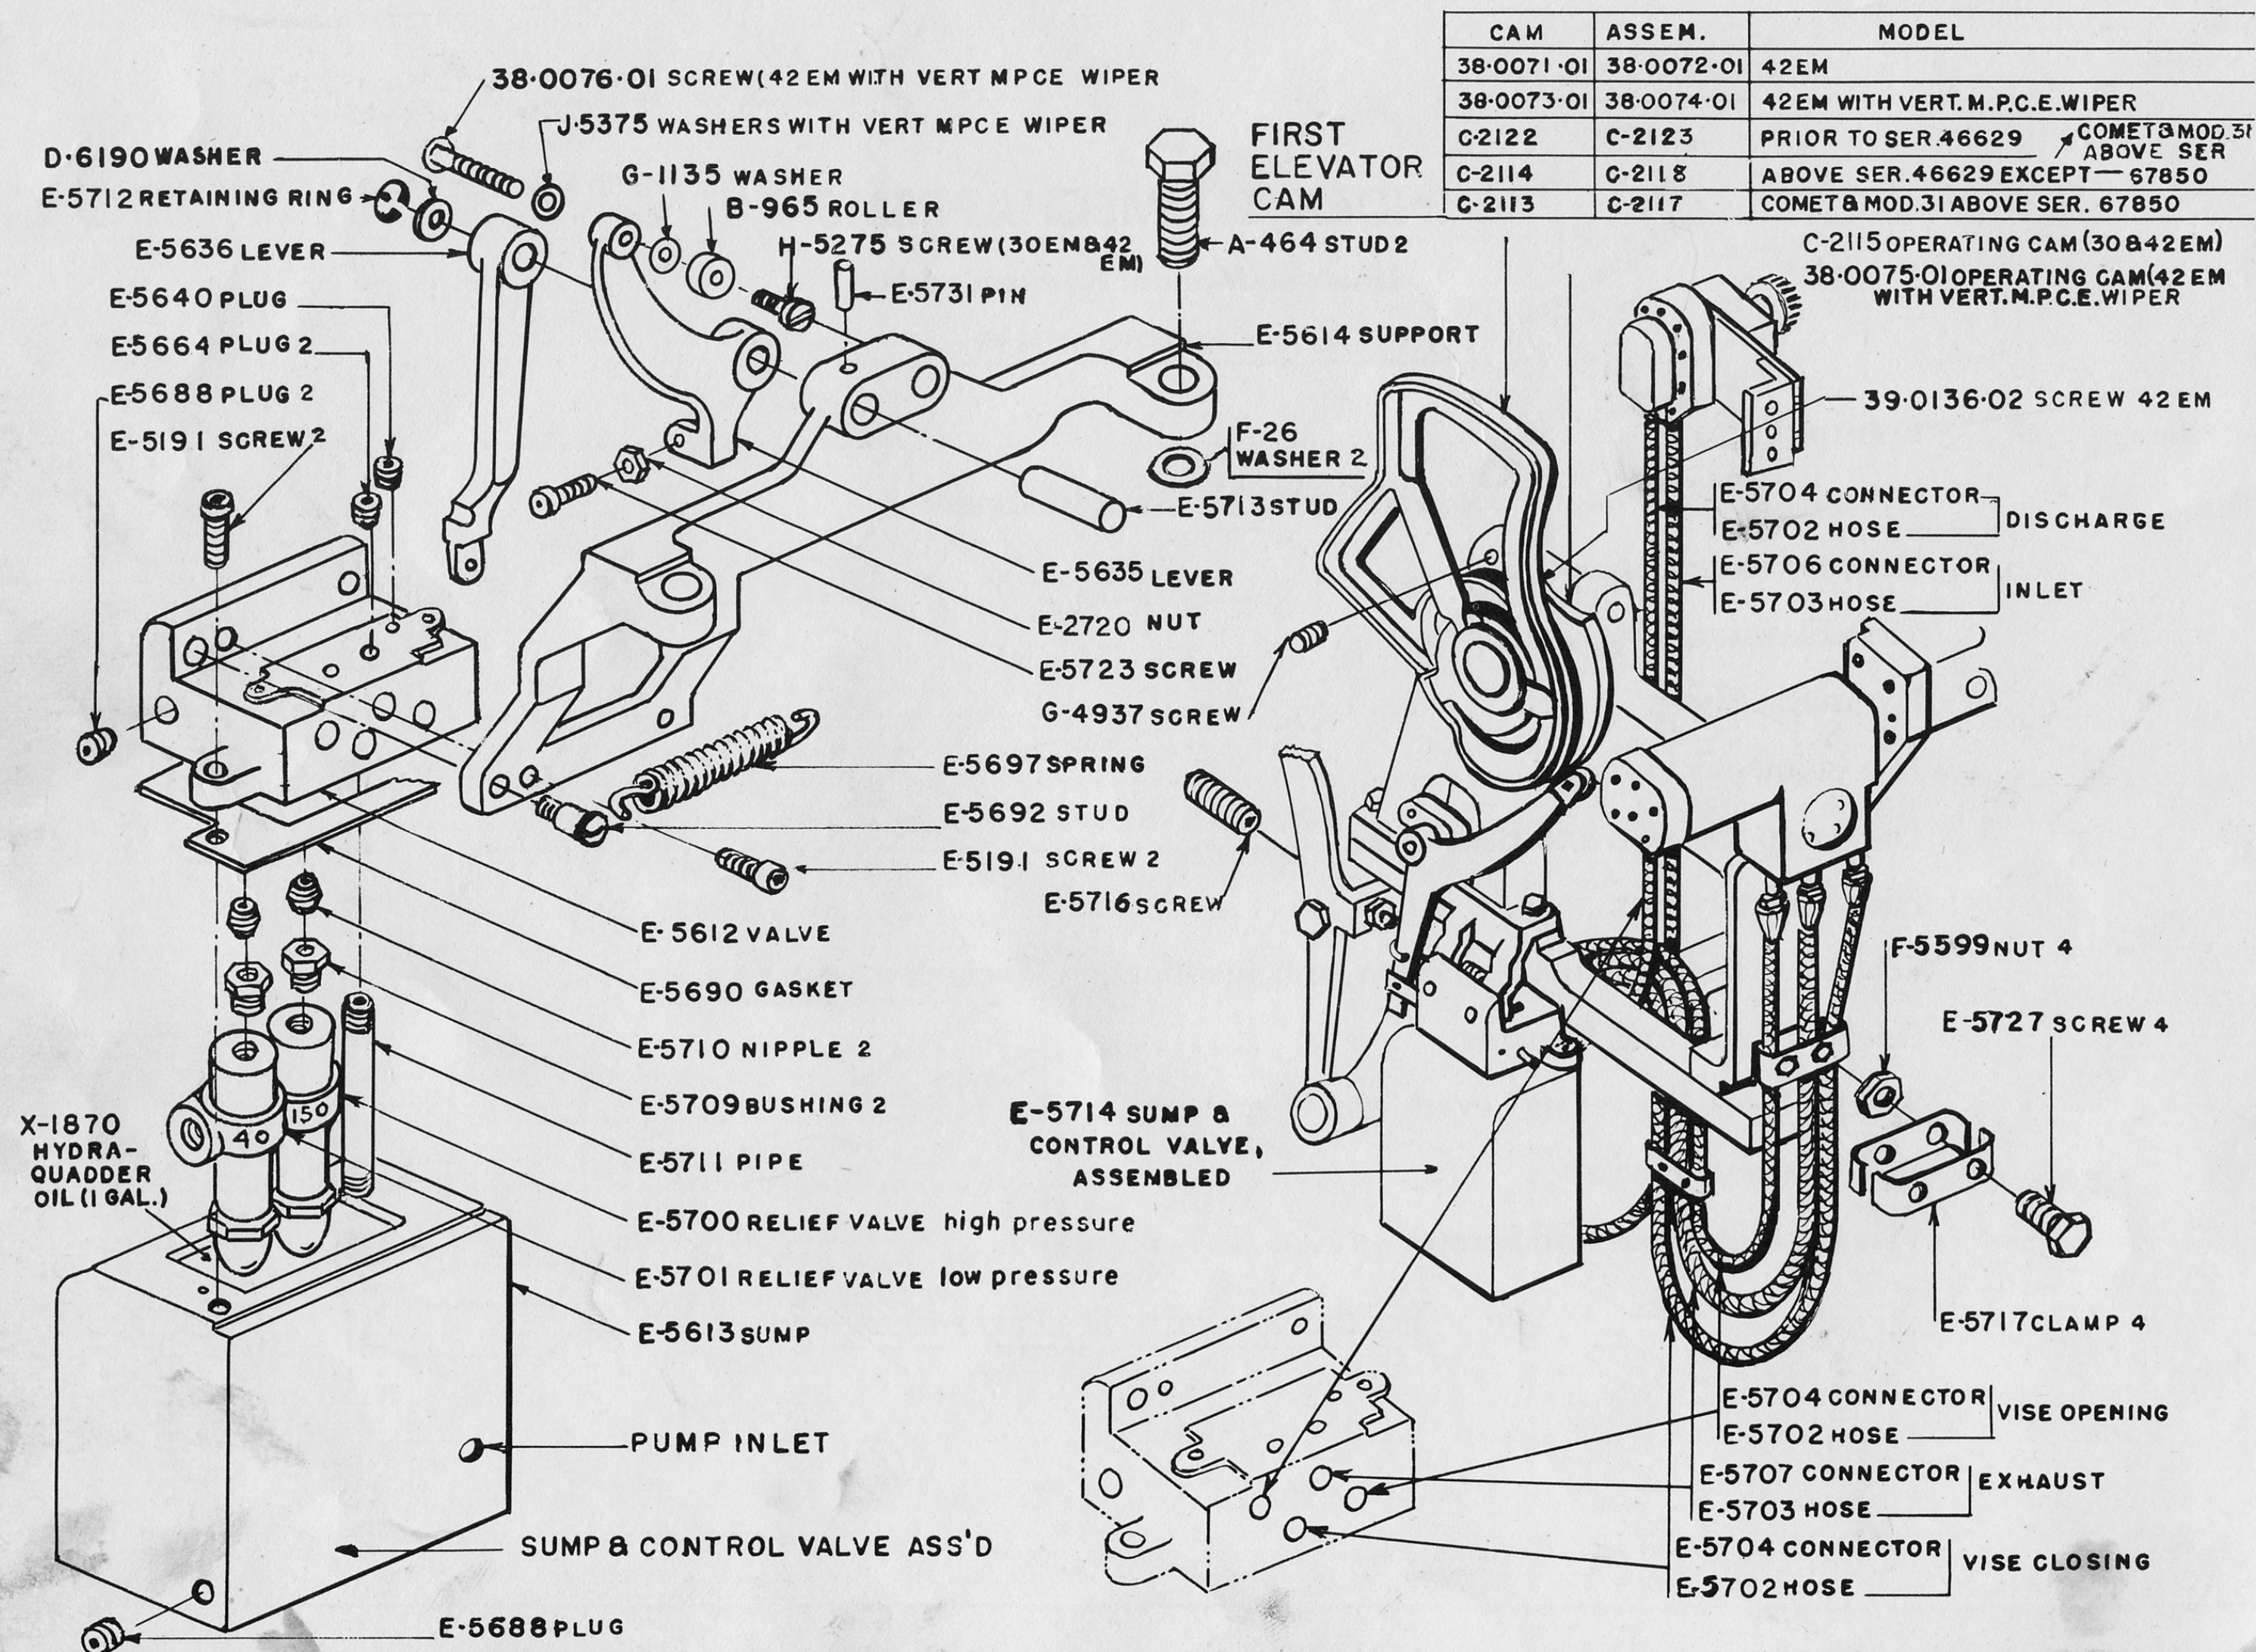


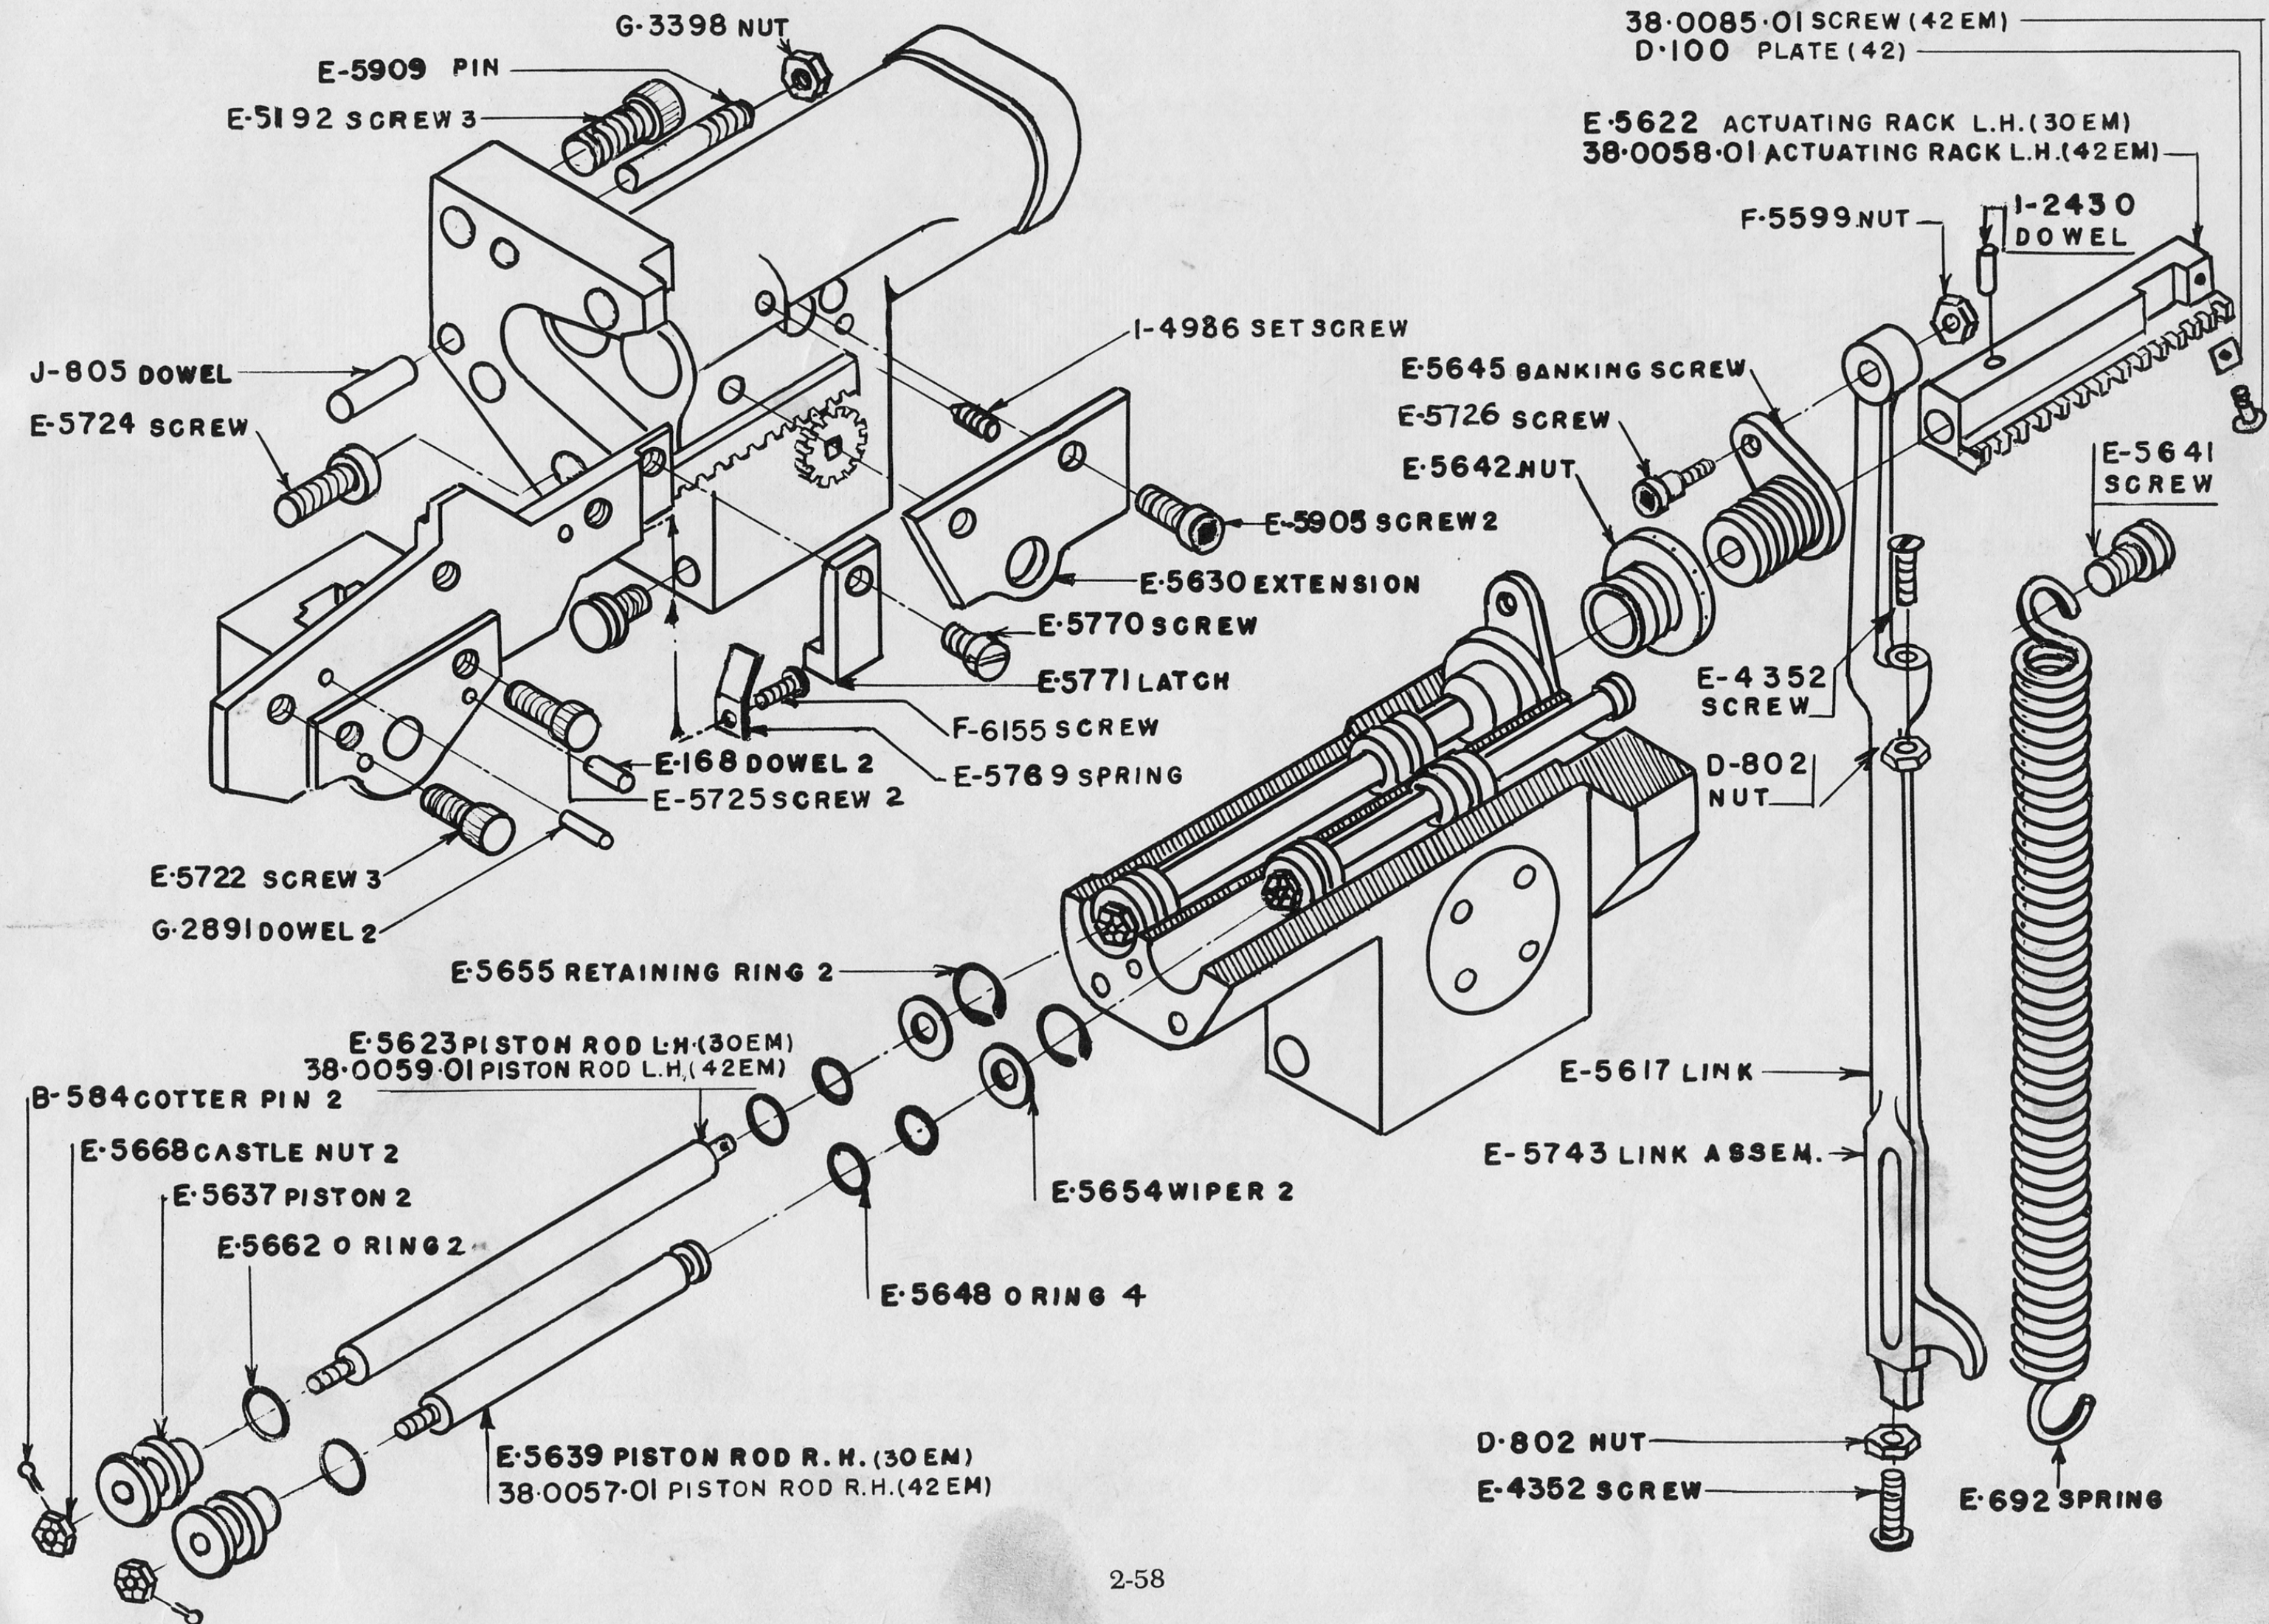

Selector Valve and Housing

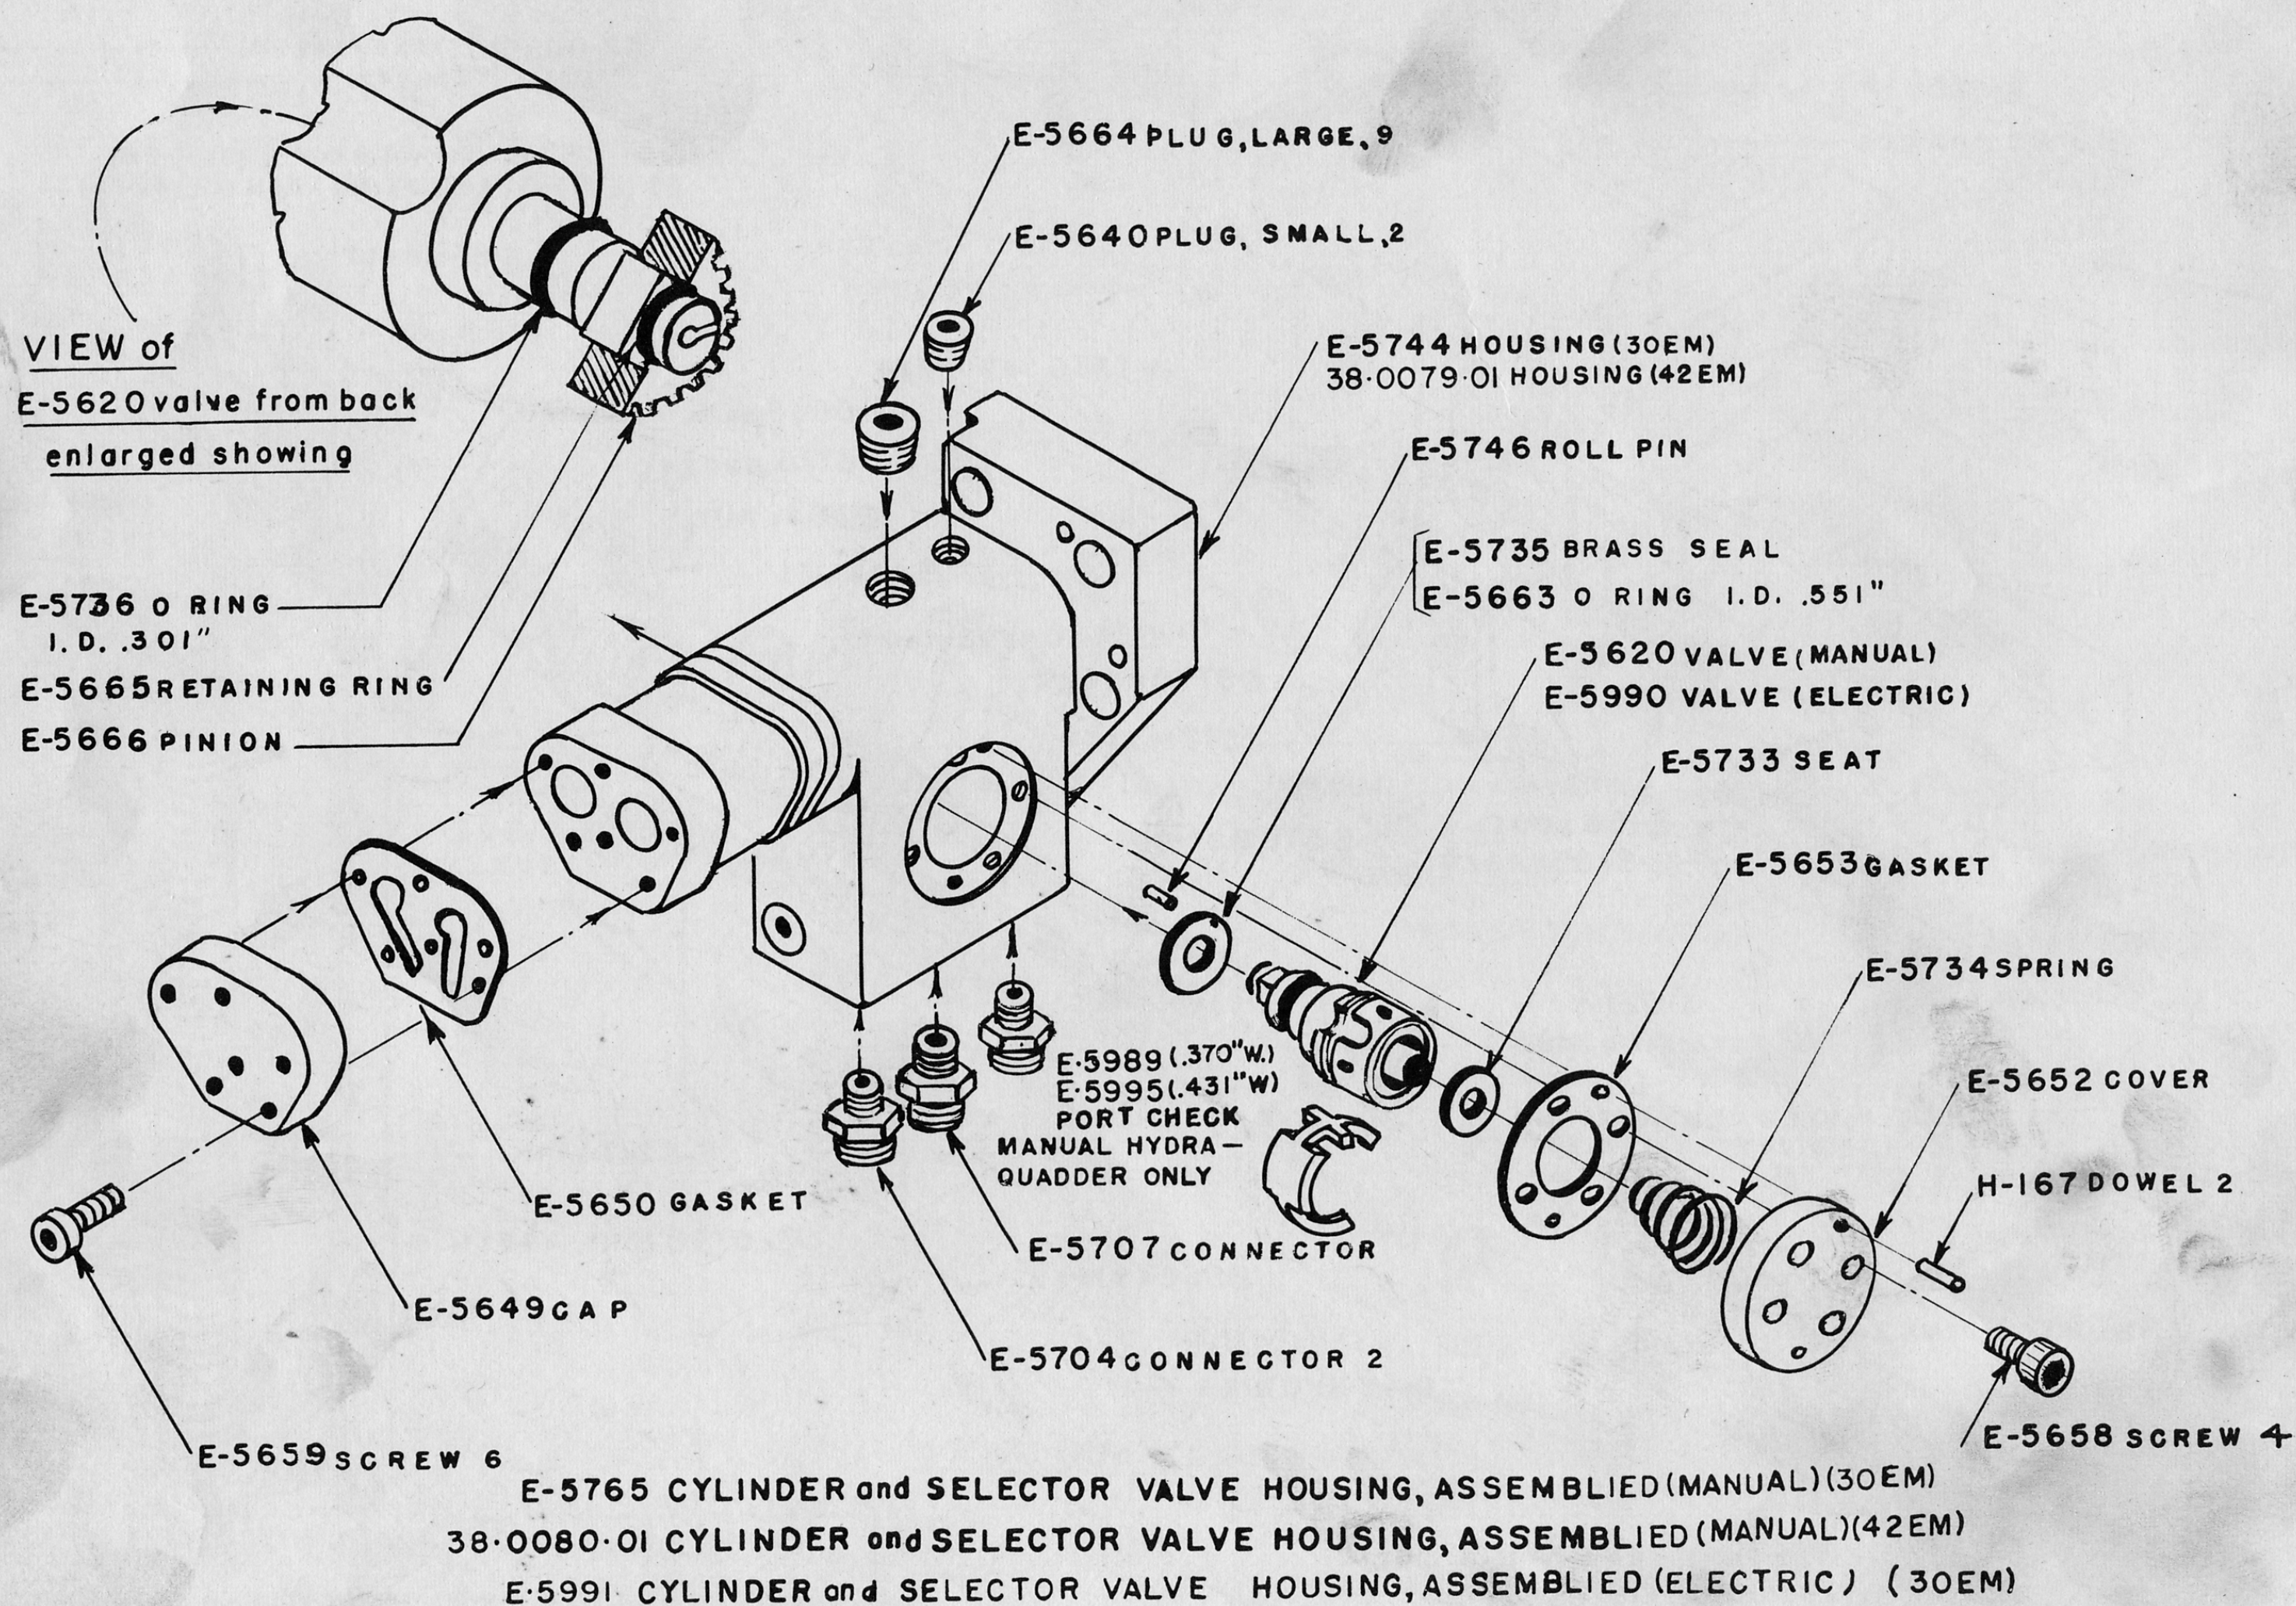 


 Selector Handle, Centering Pinion, and Justification Blockout

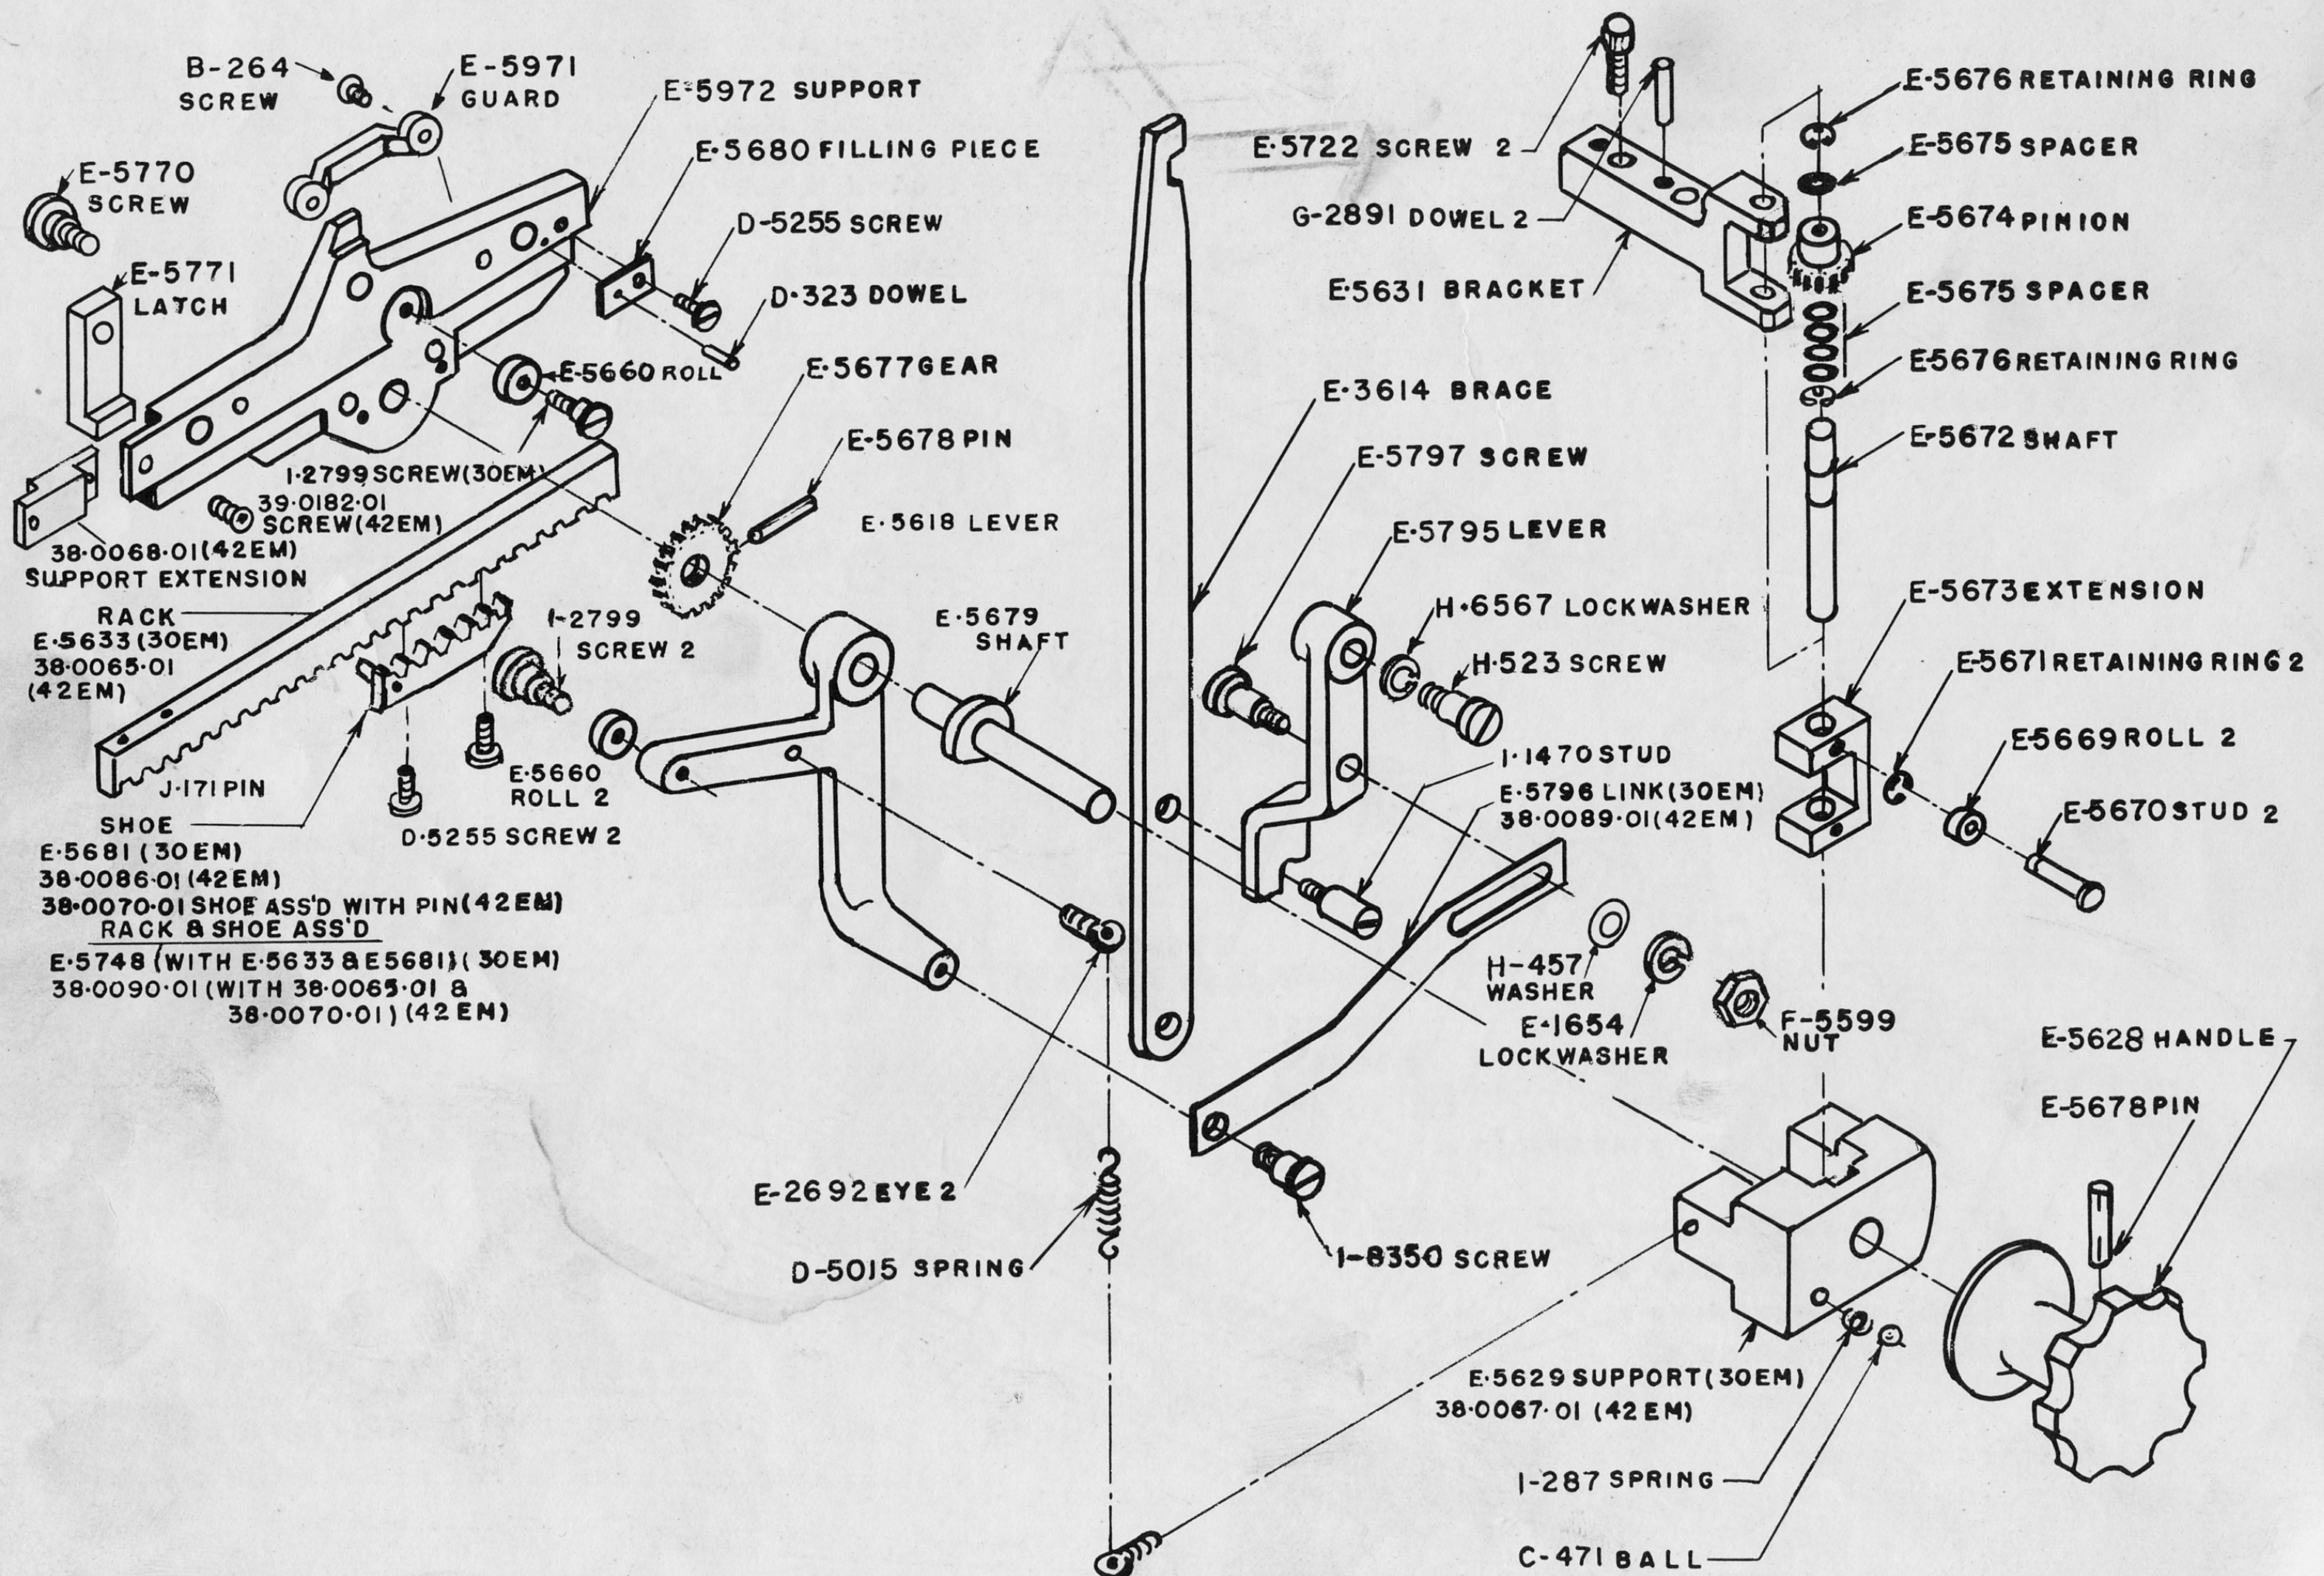



Vise Jaws and Blocks

 7

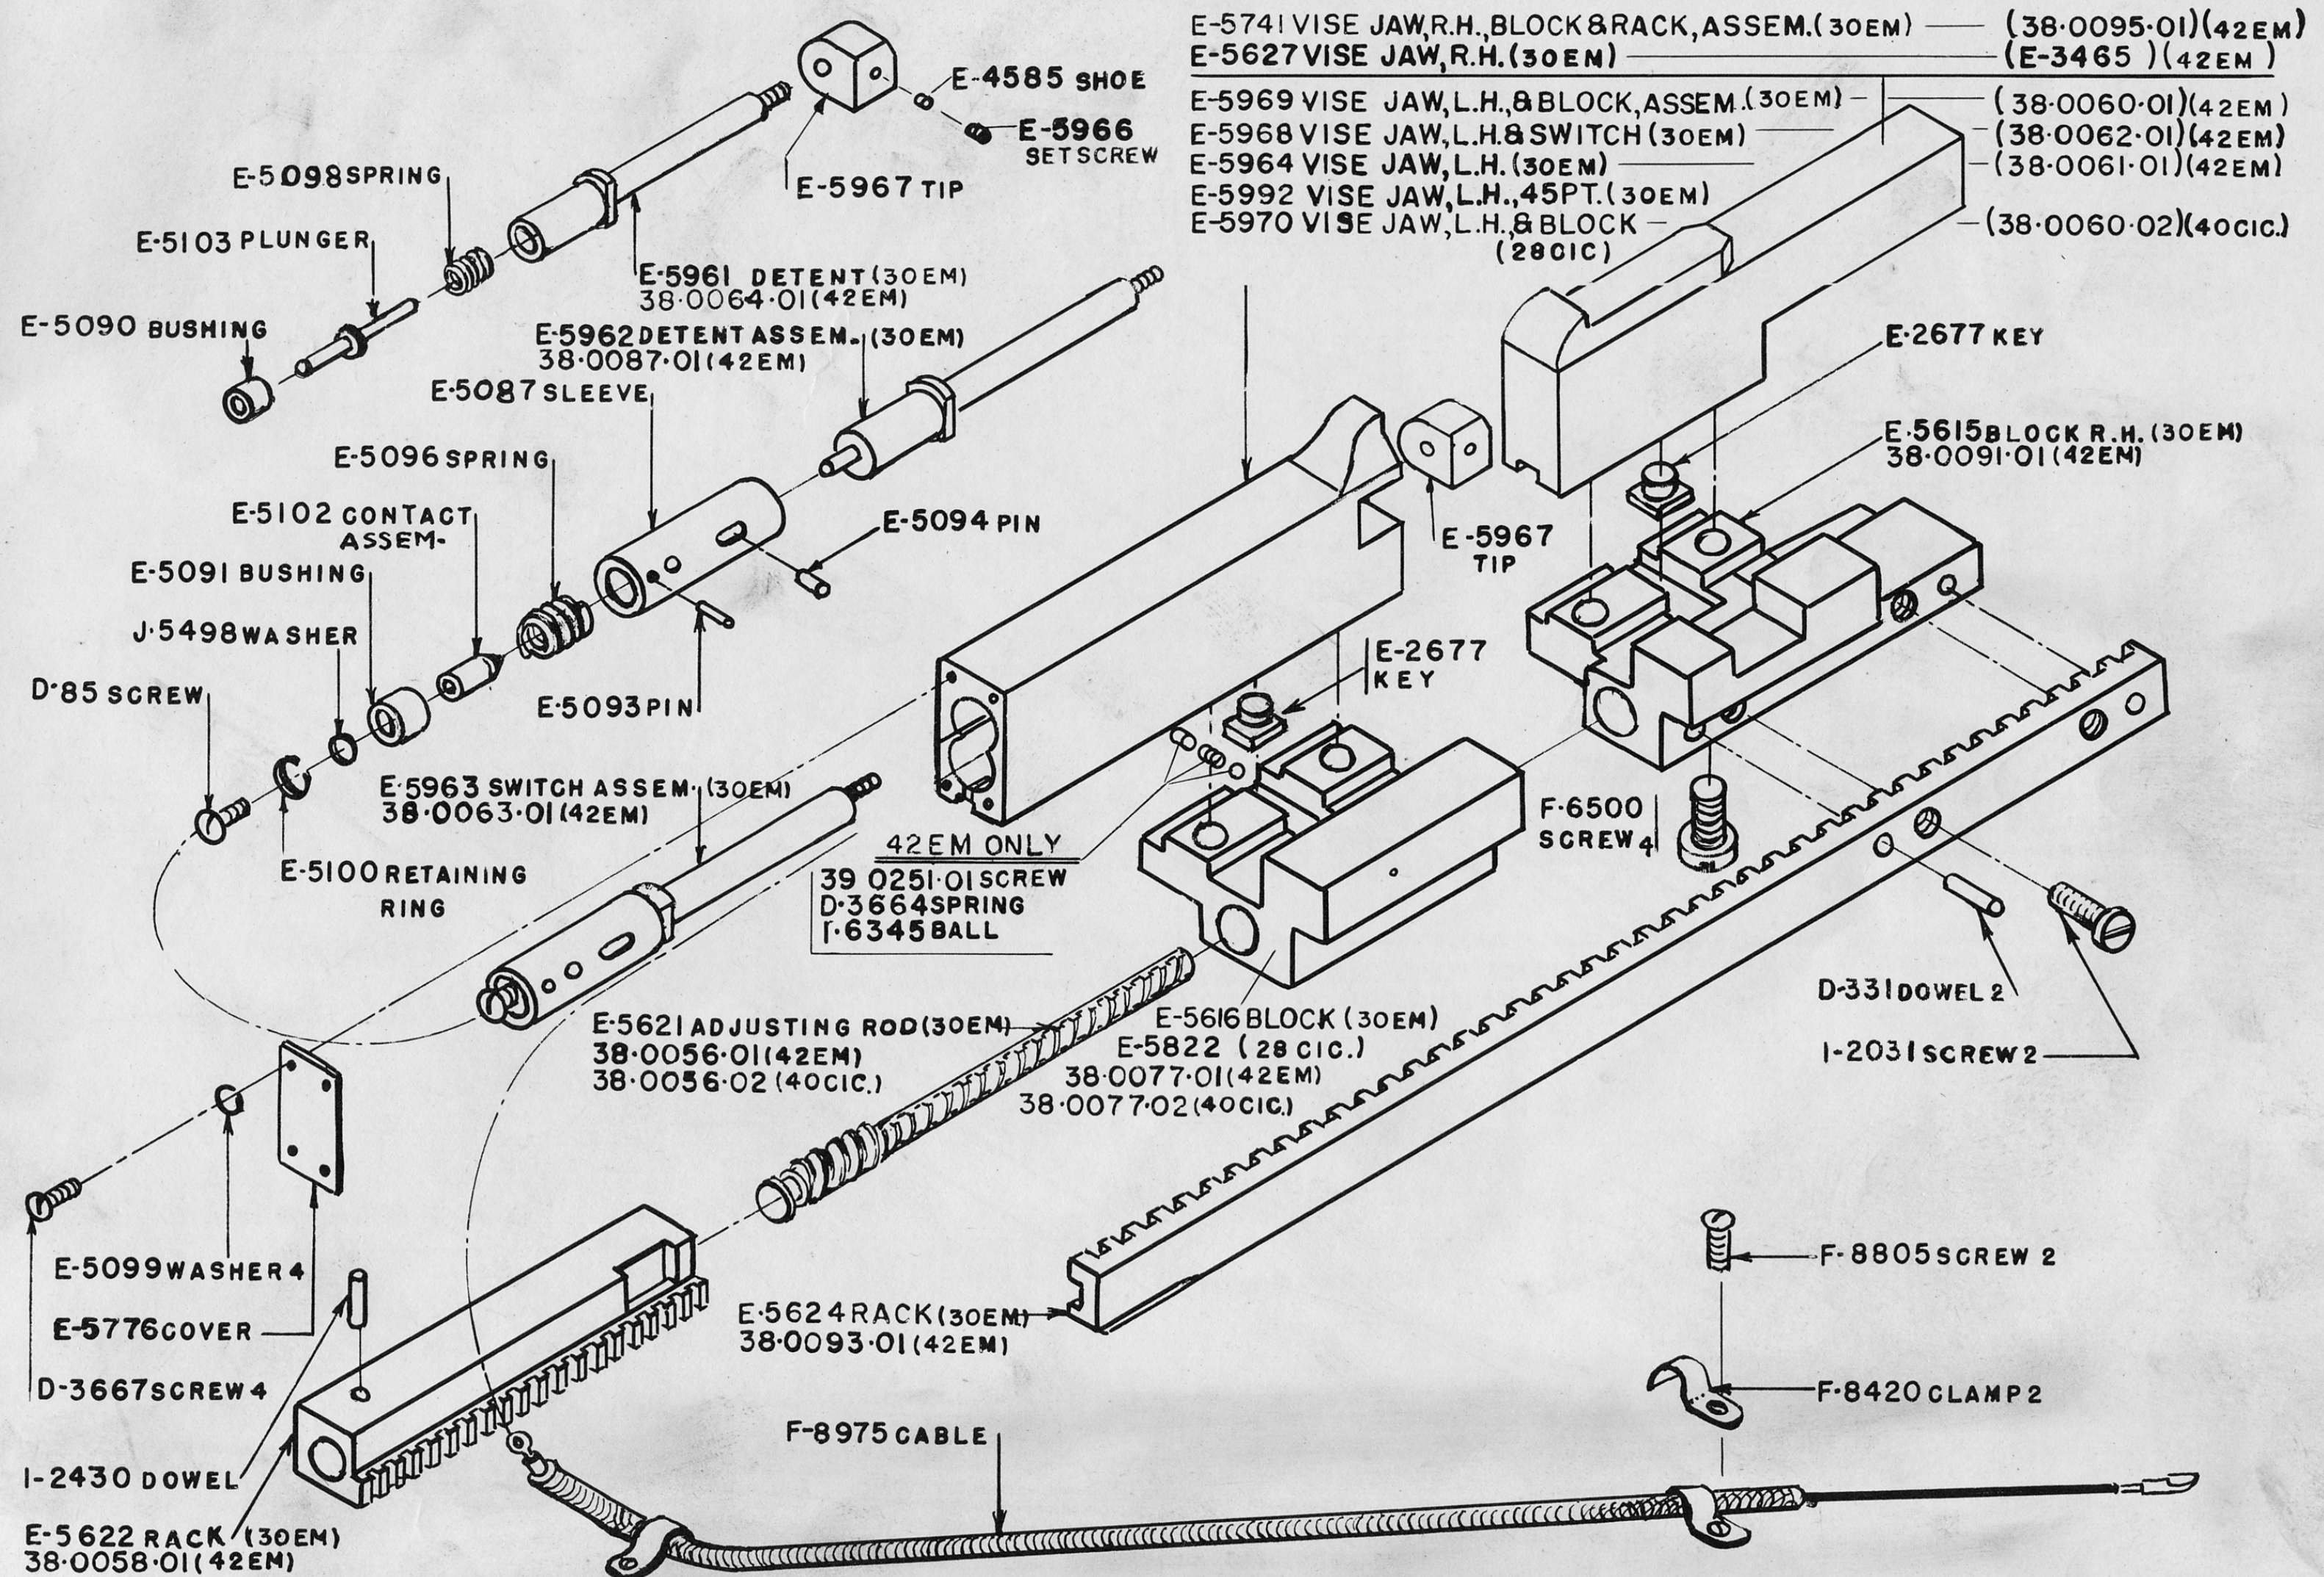



Vise Jaws and Blocks

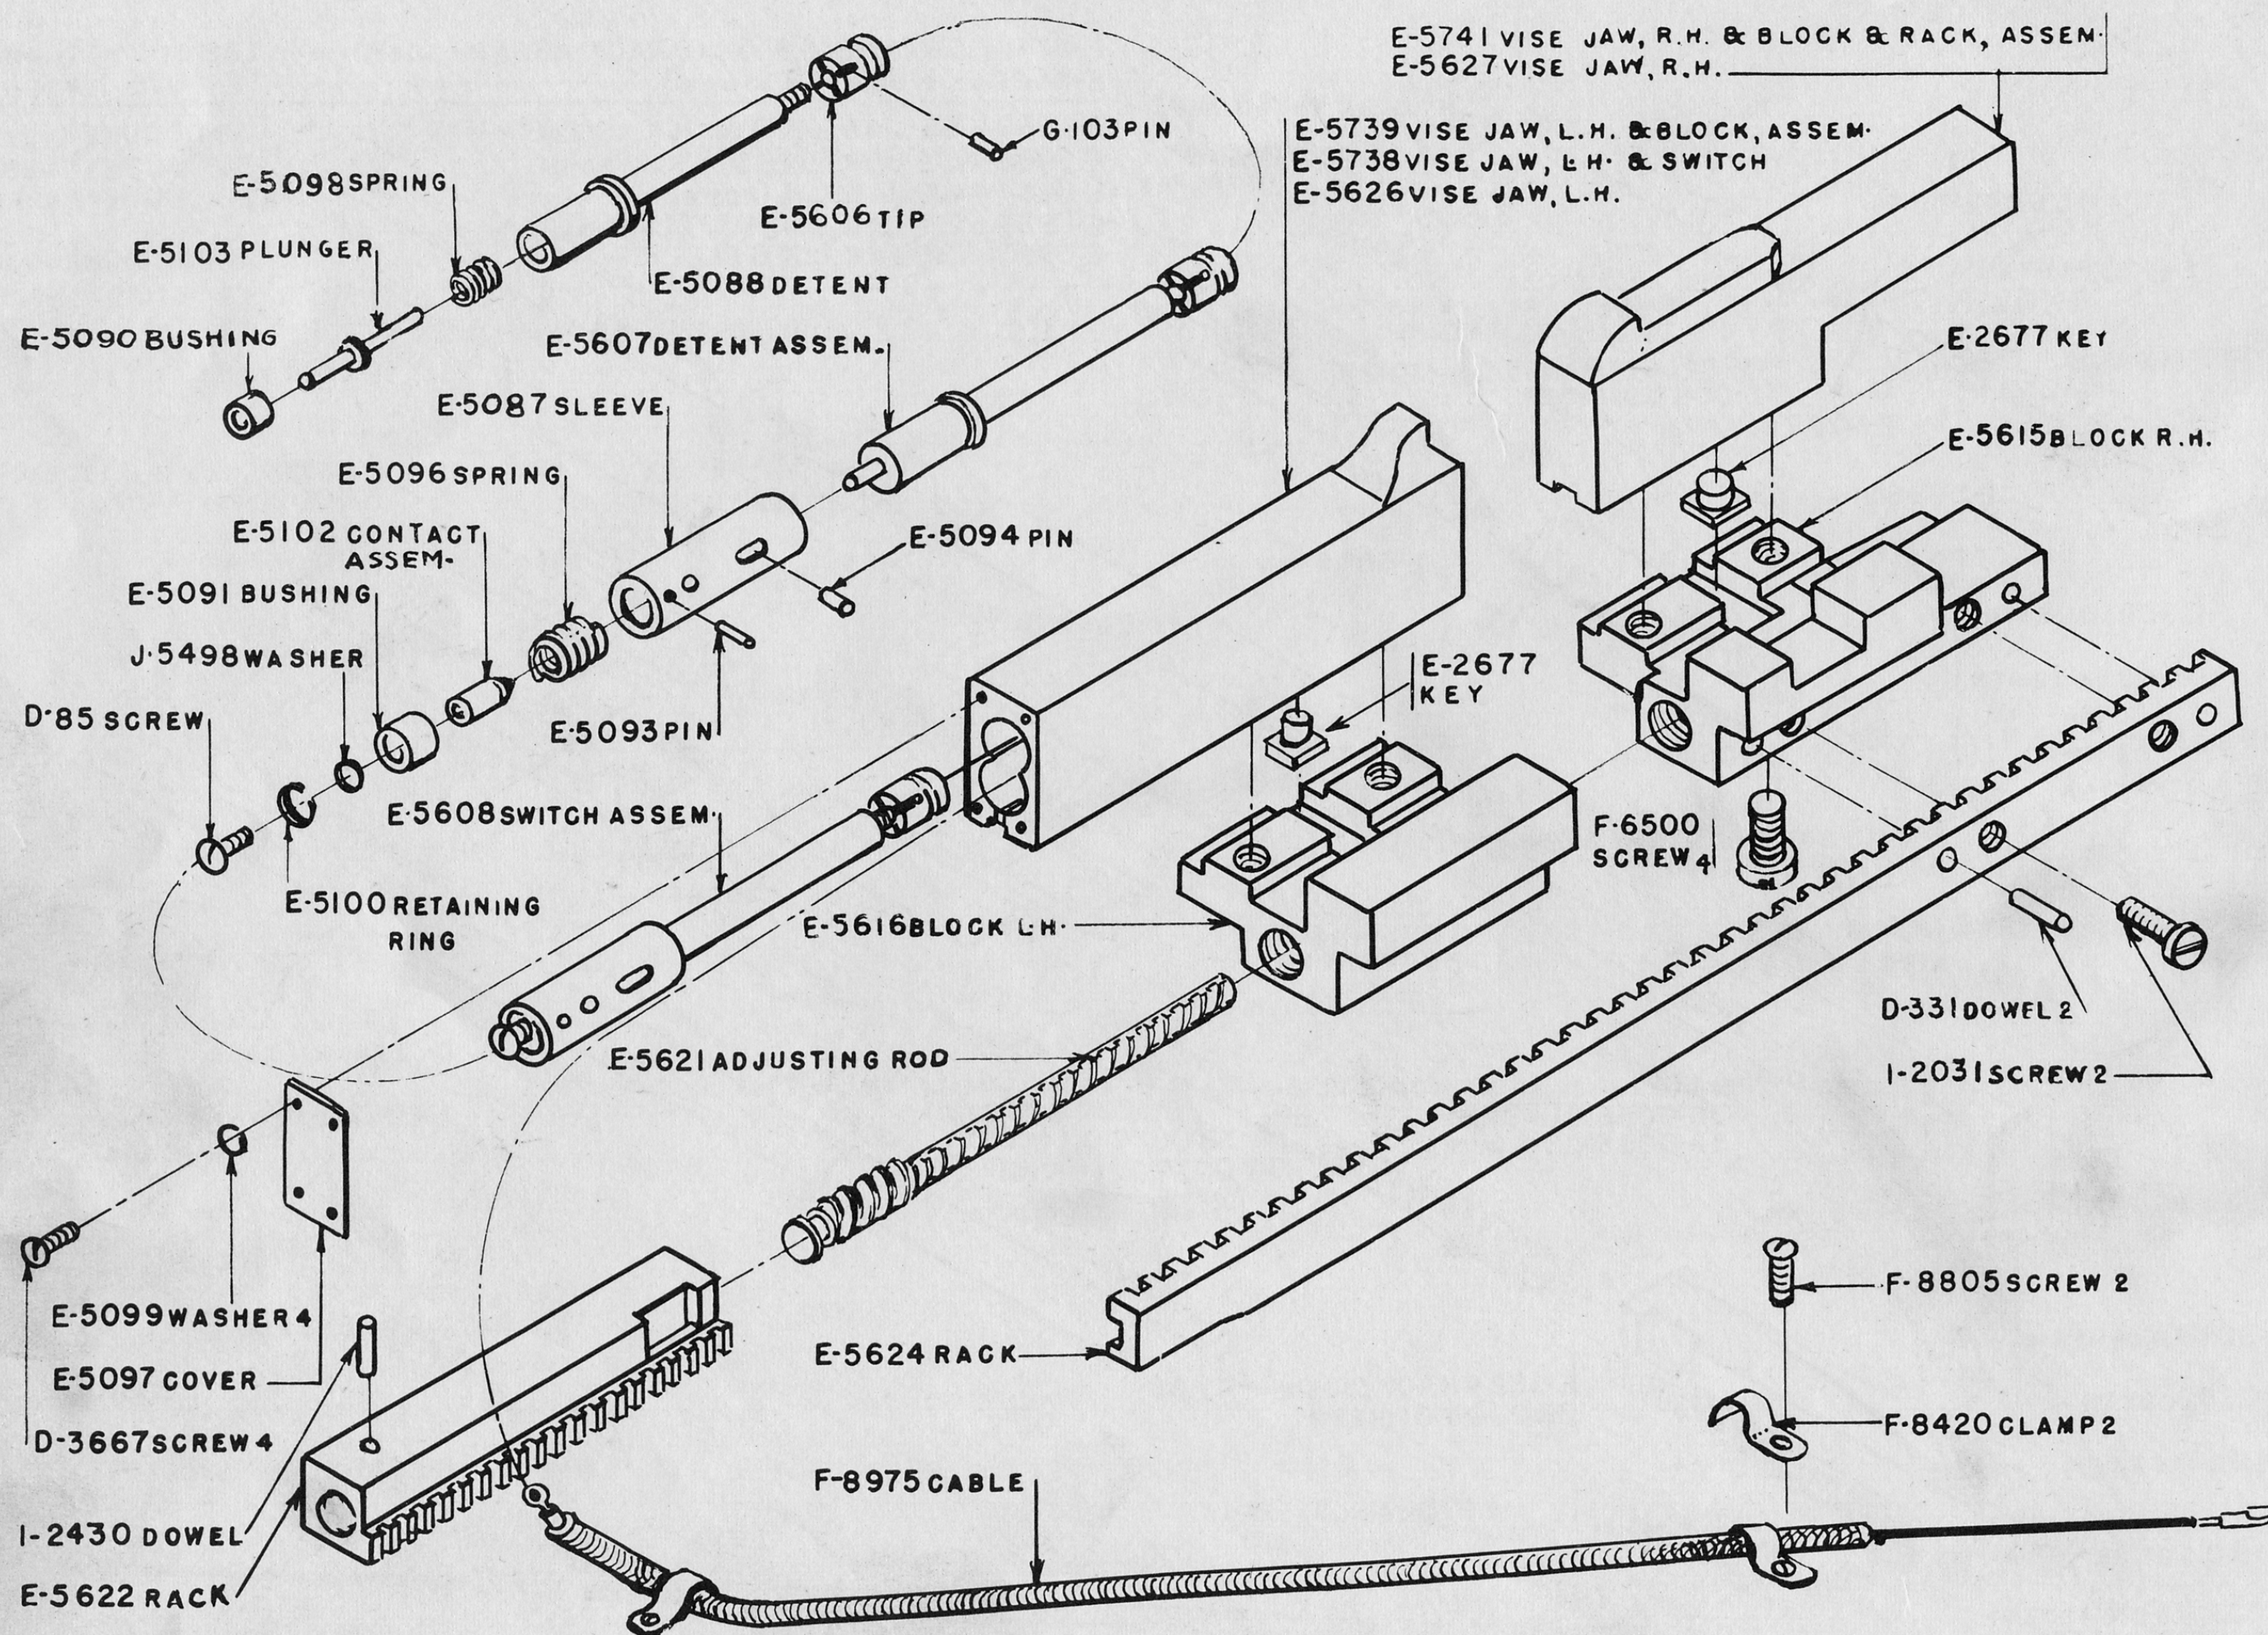 

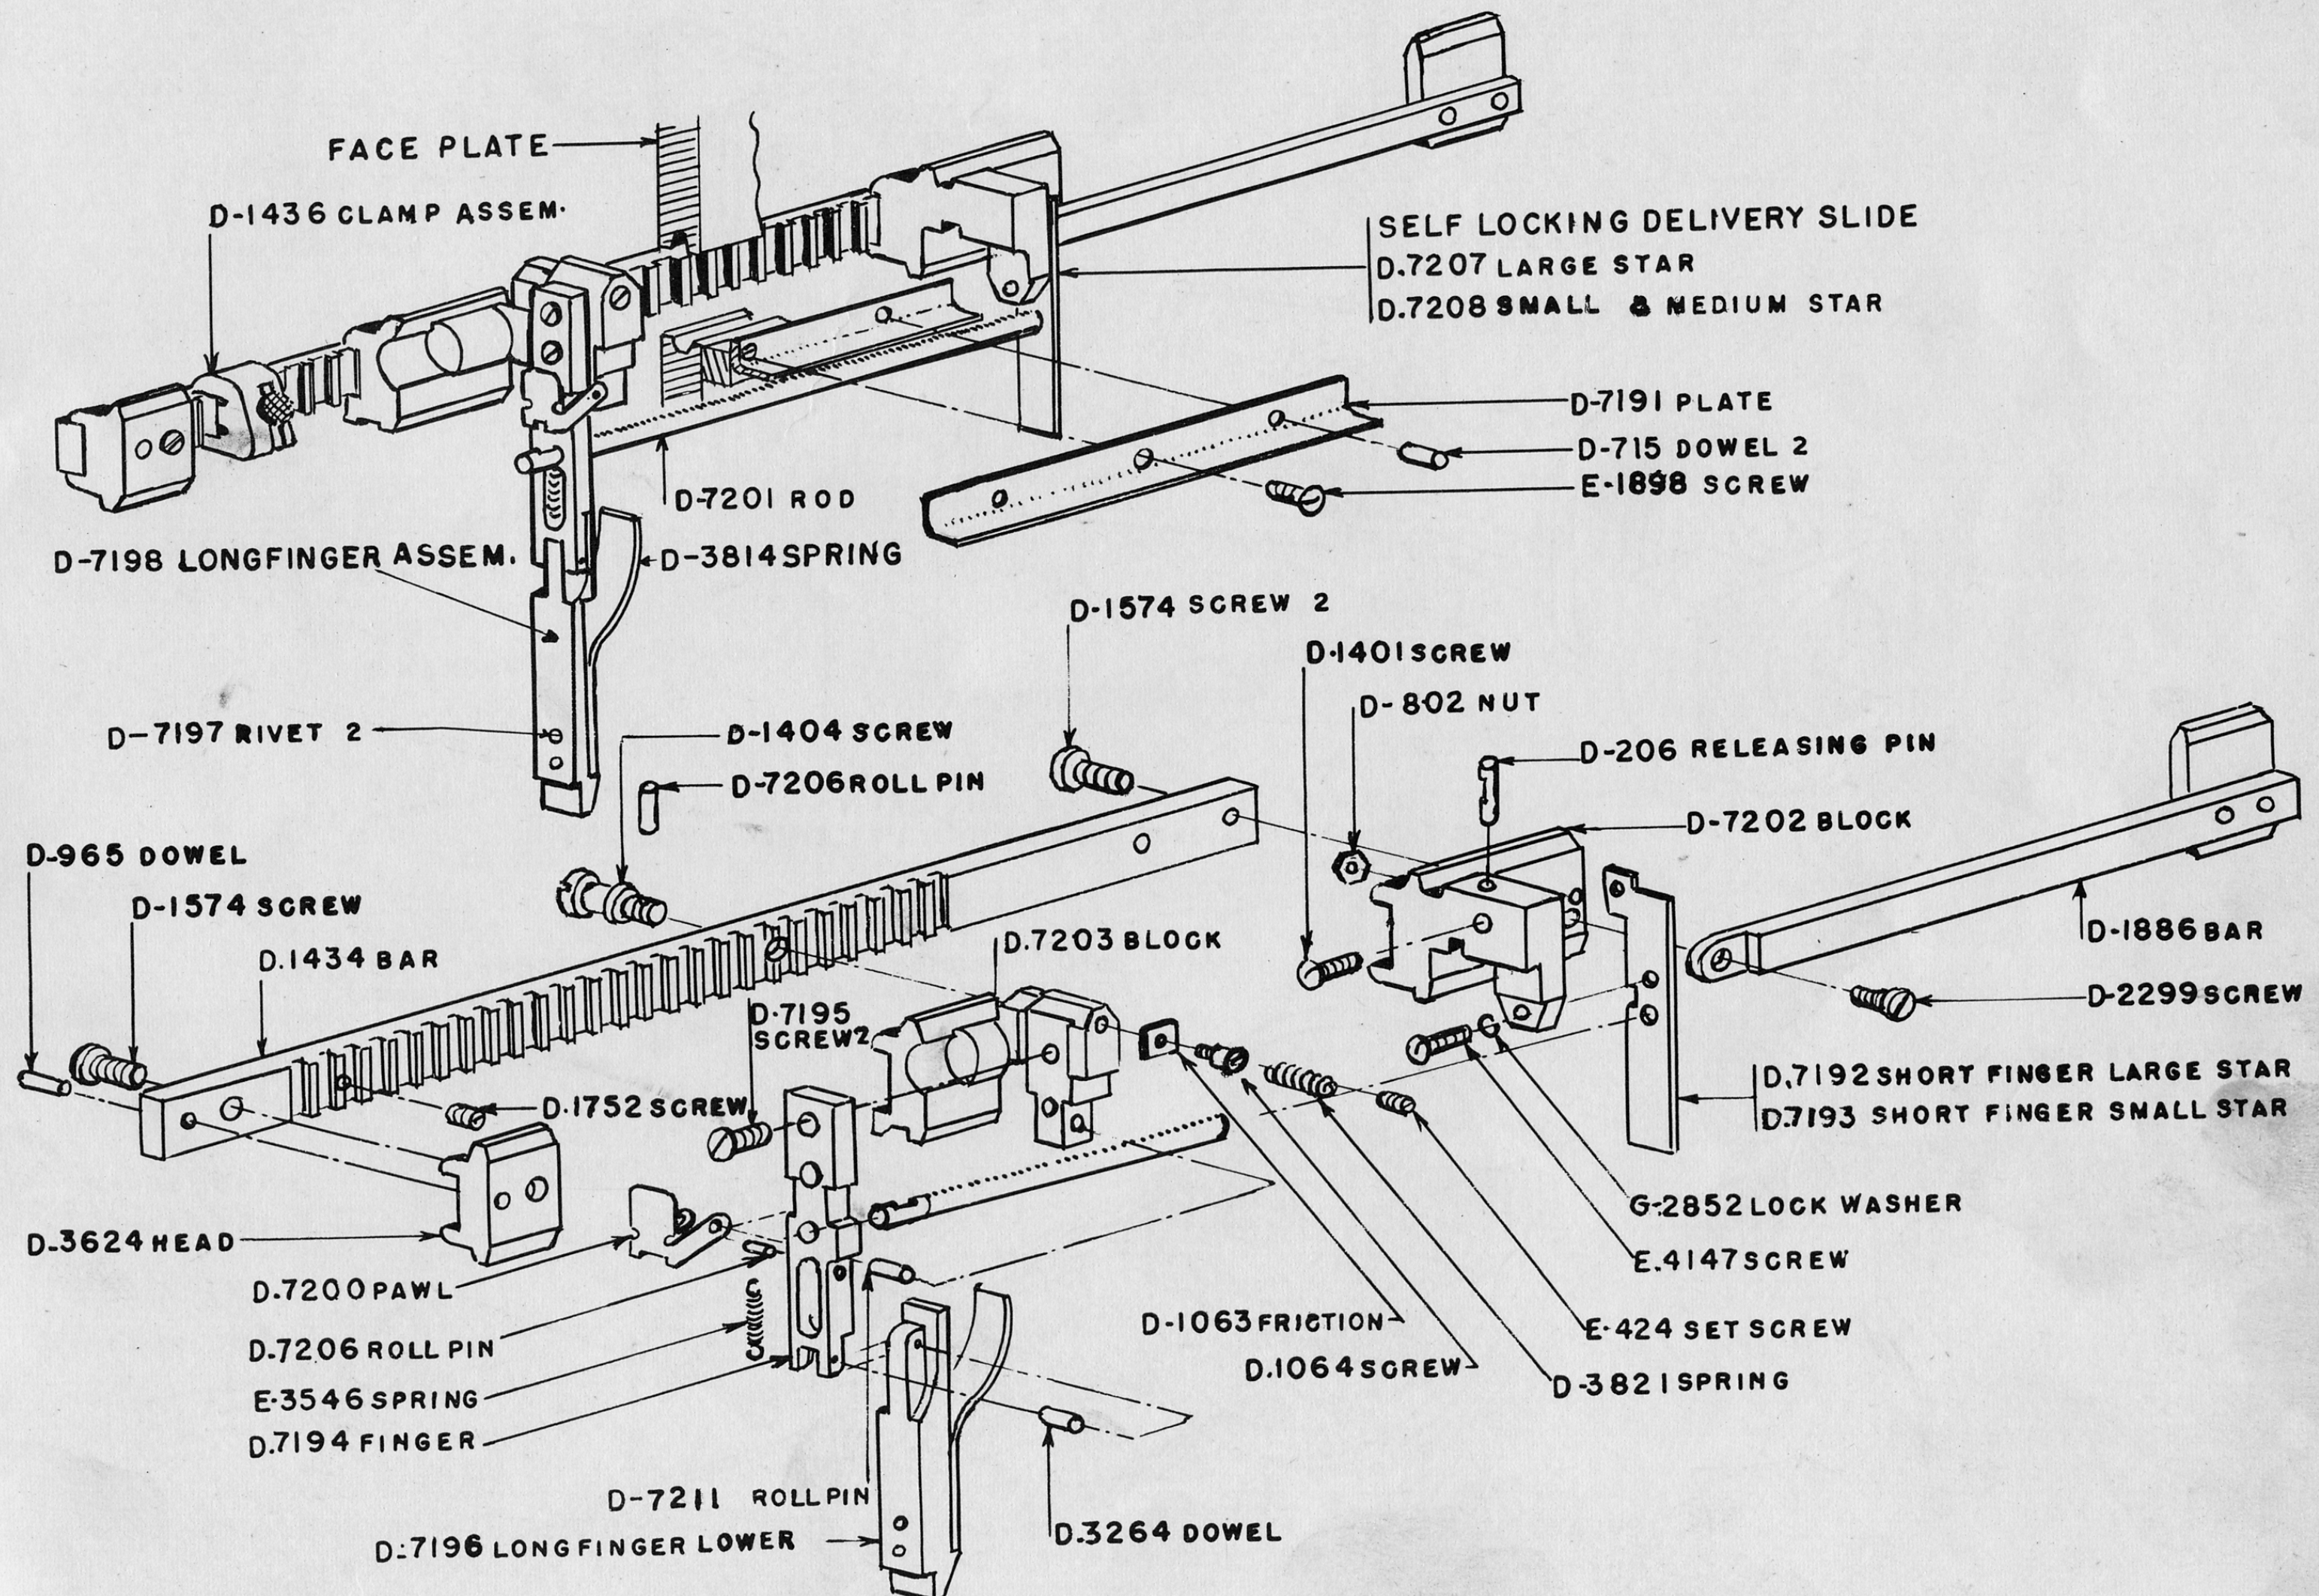 



Hydraulic Pump

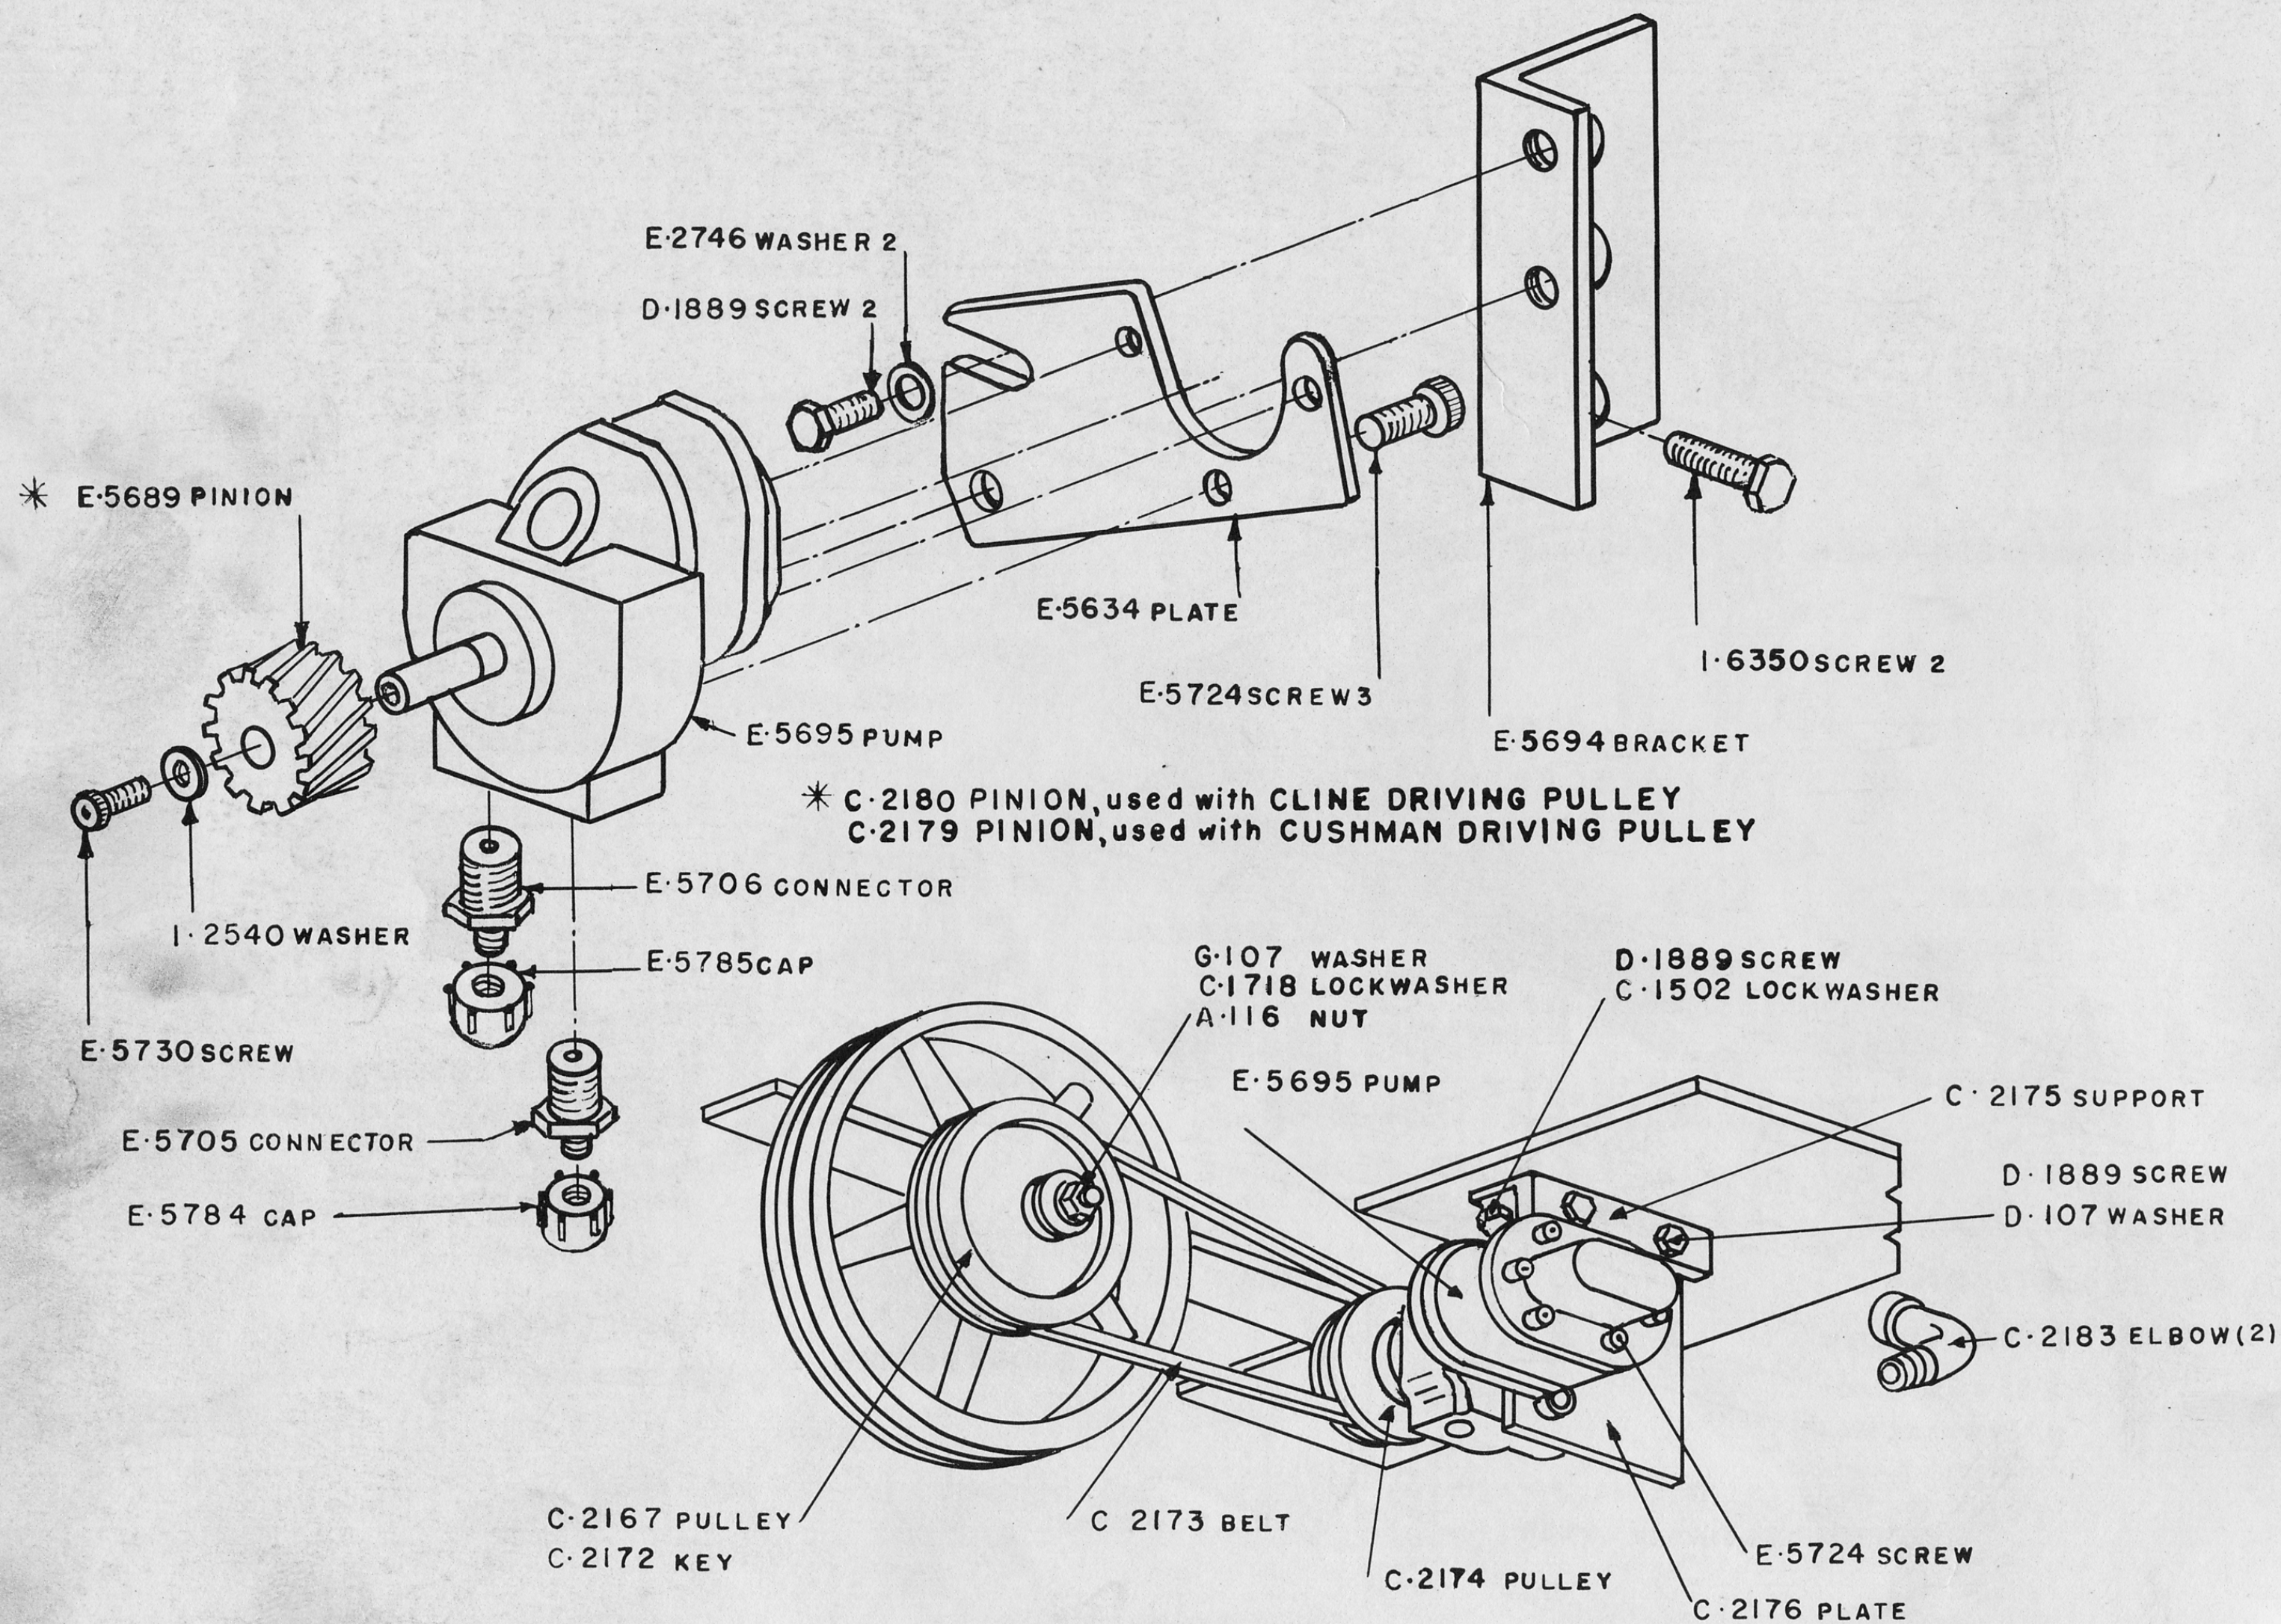 

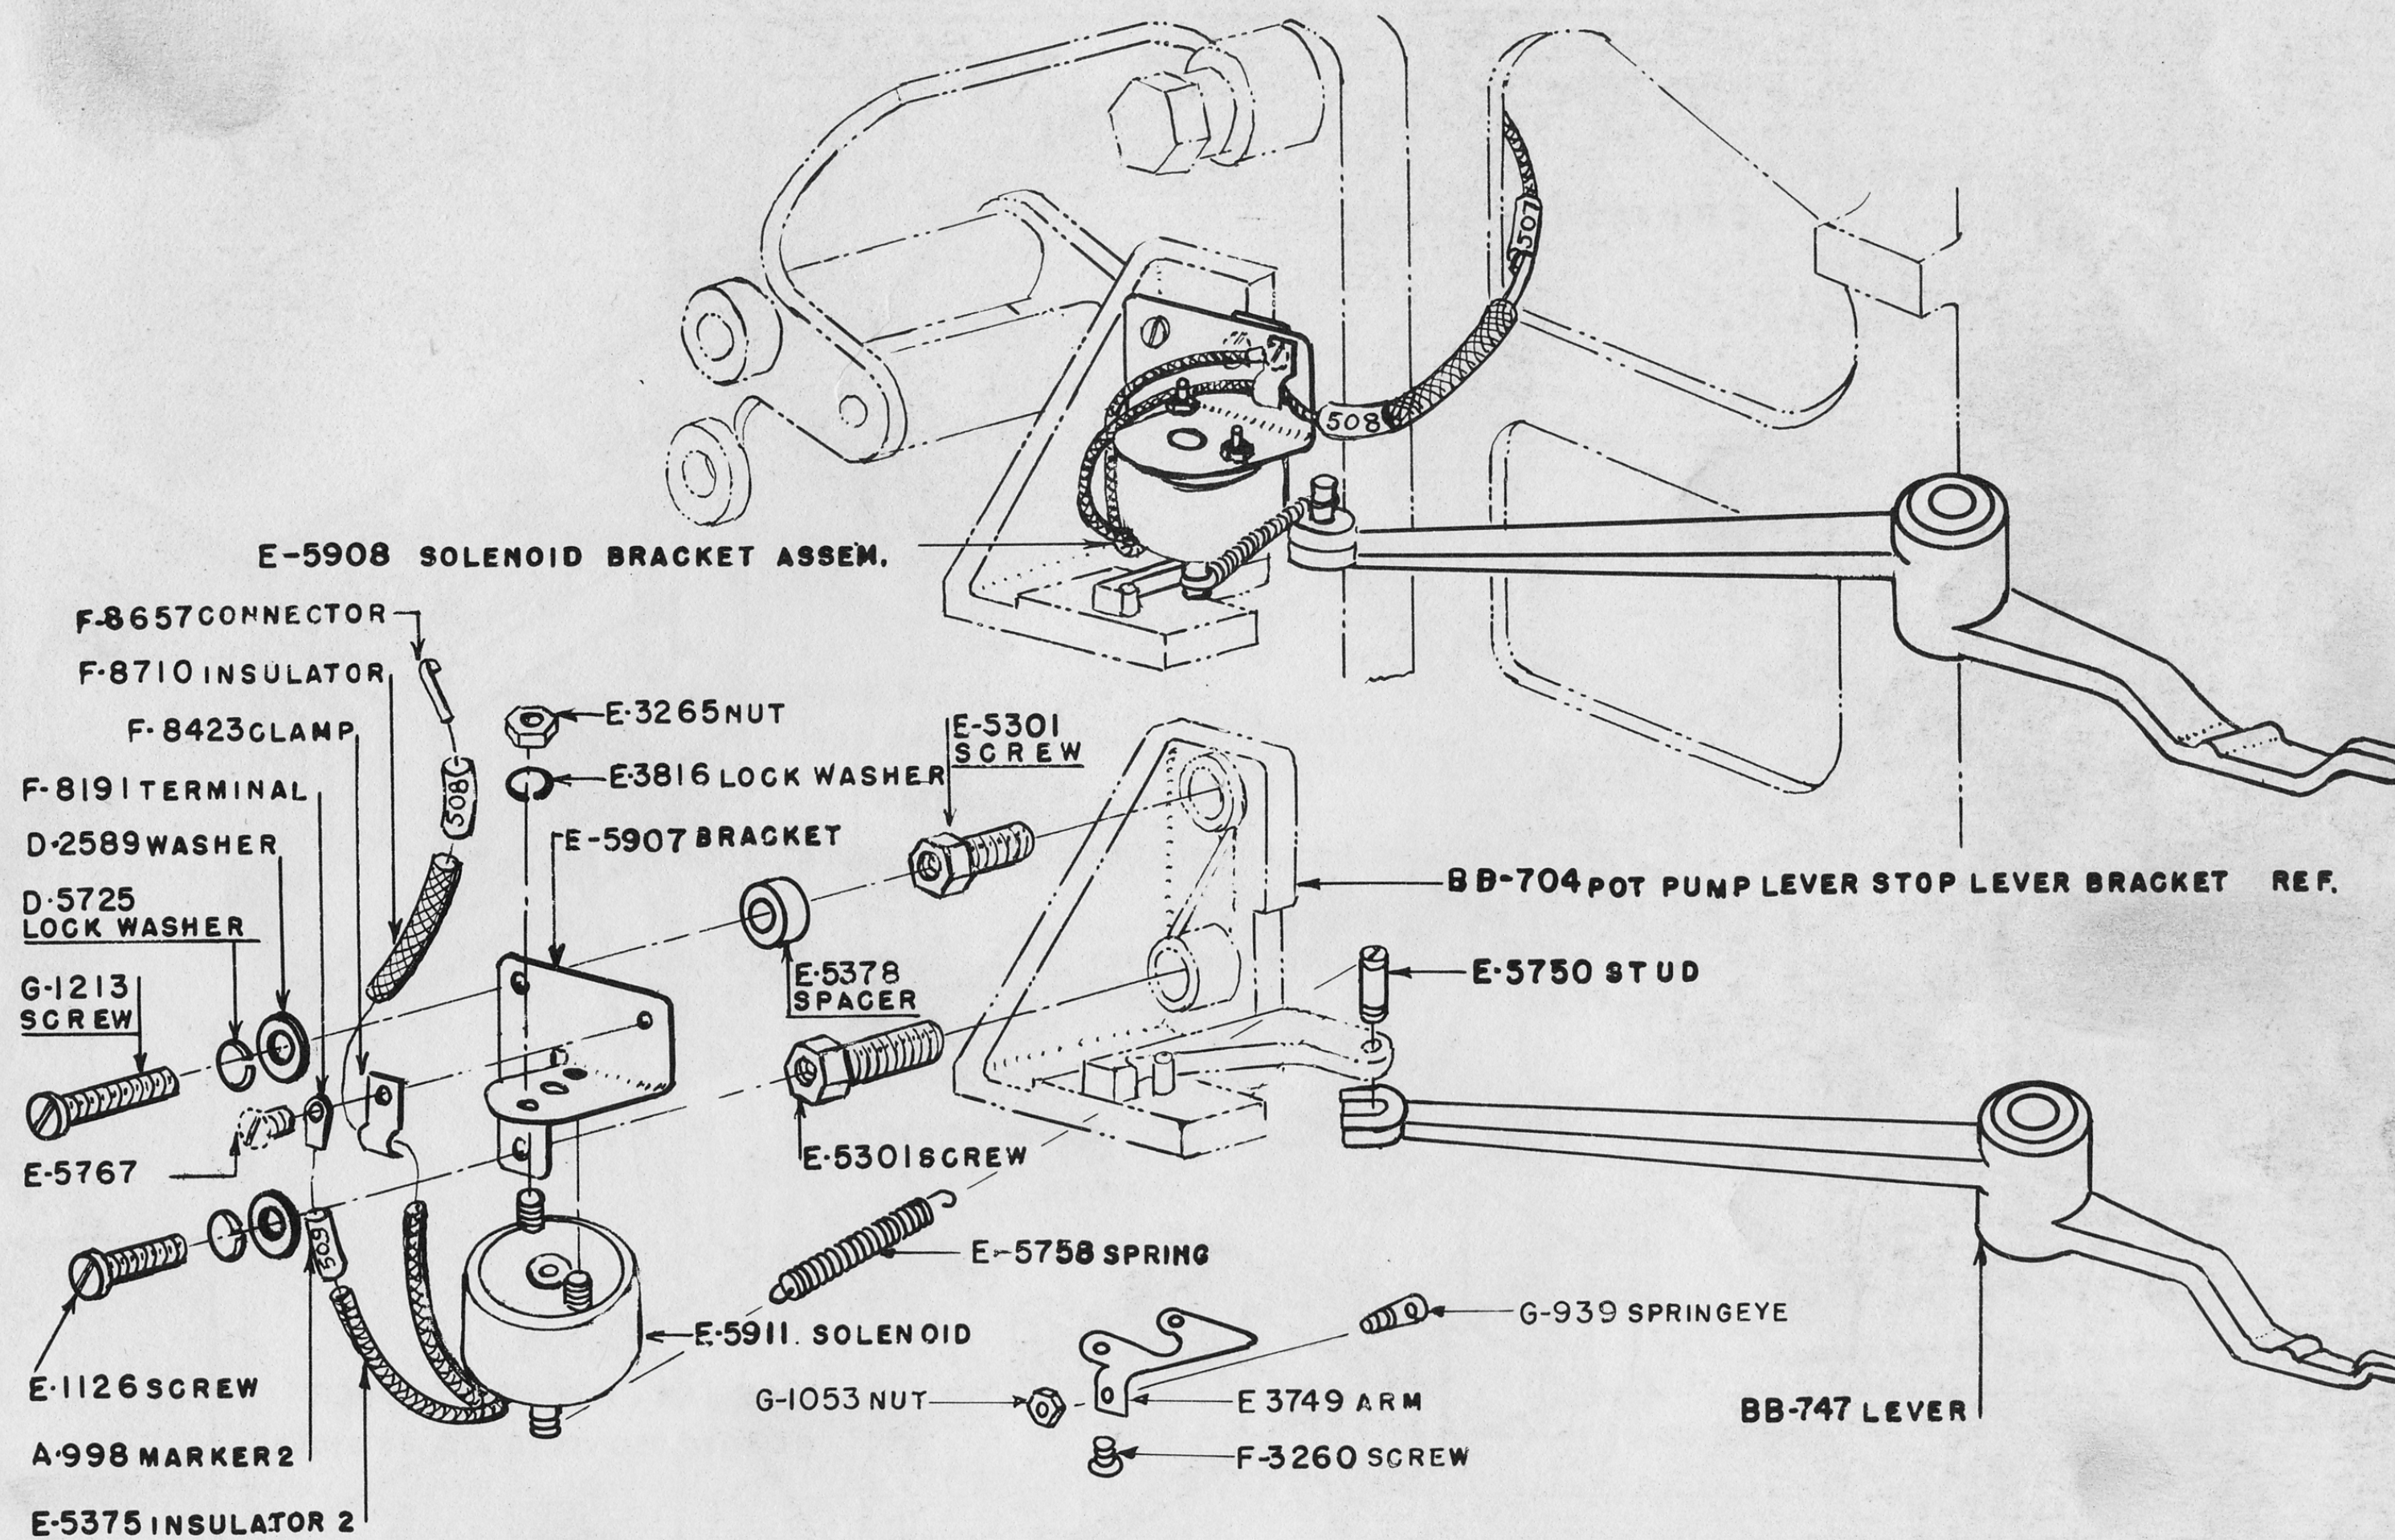 



Power Supply Box

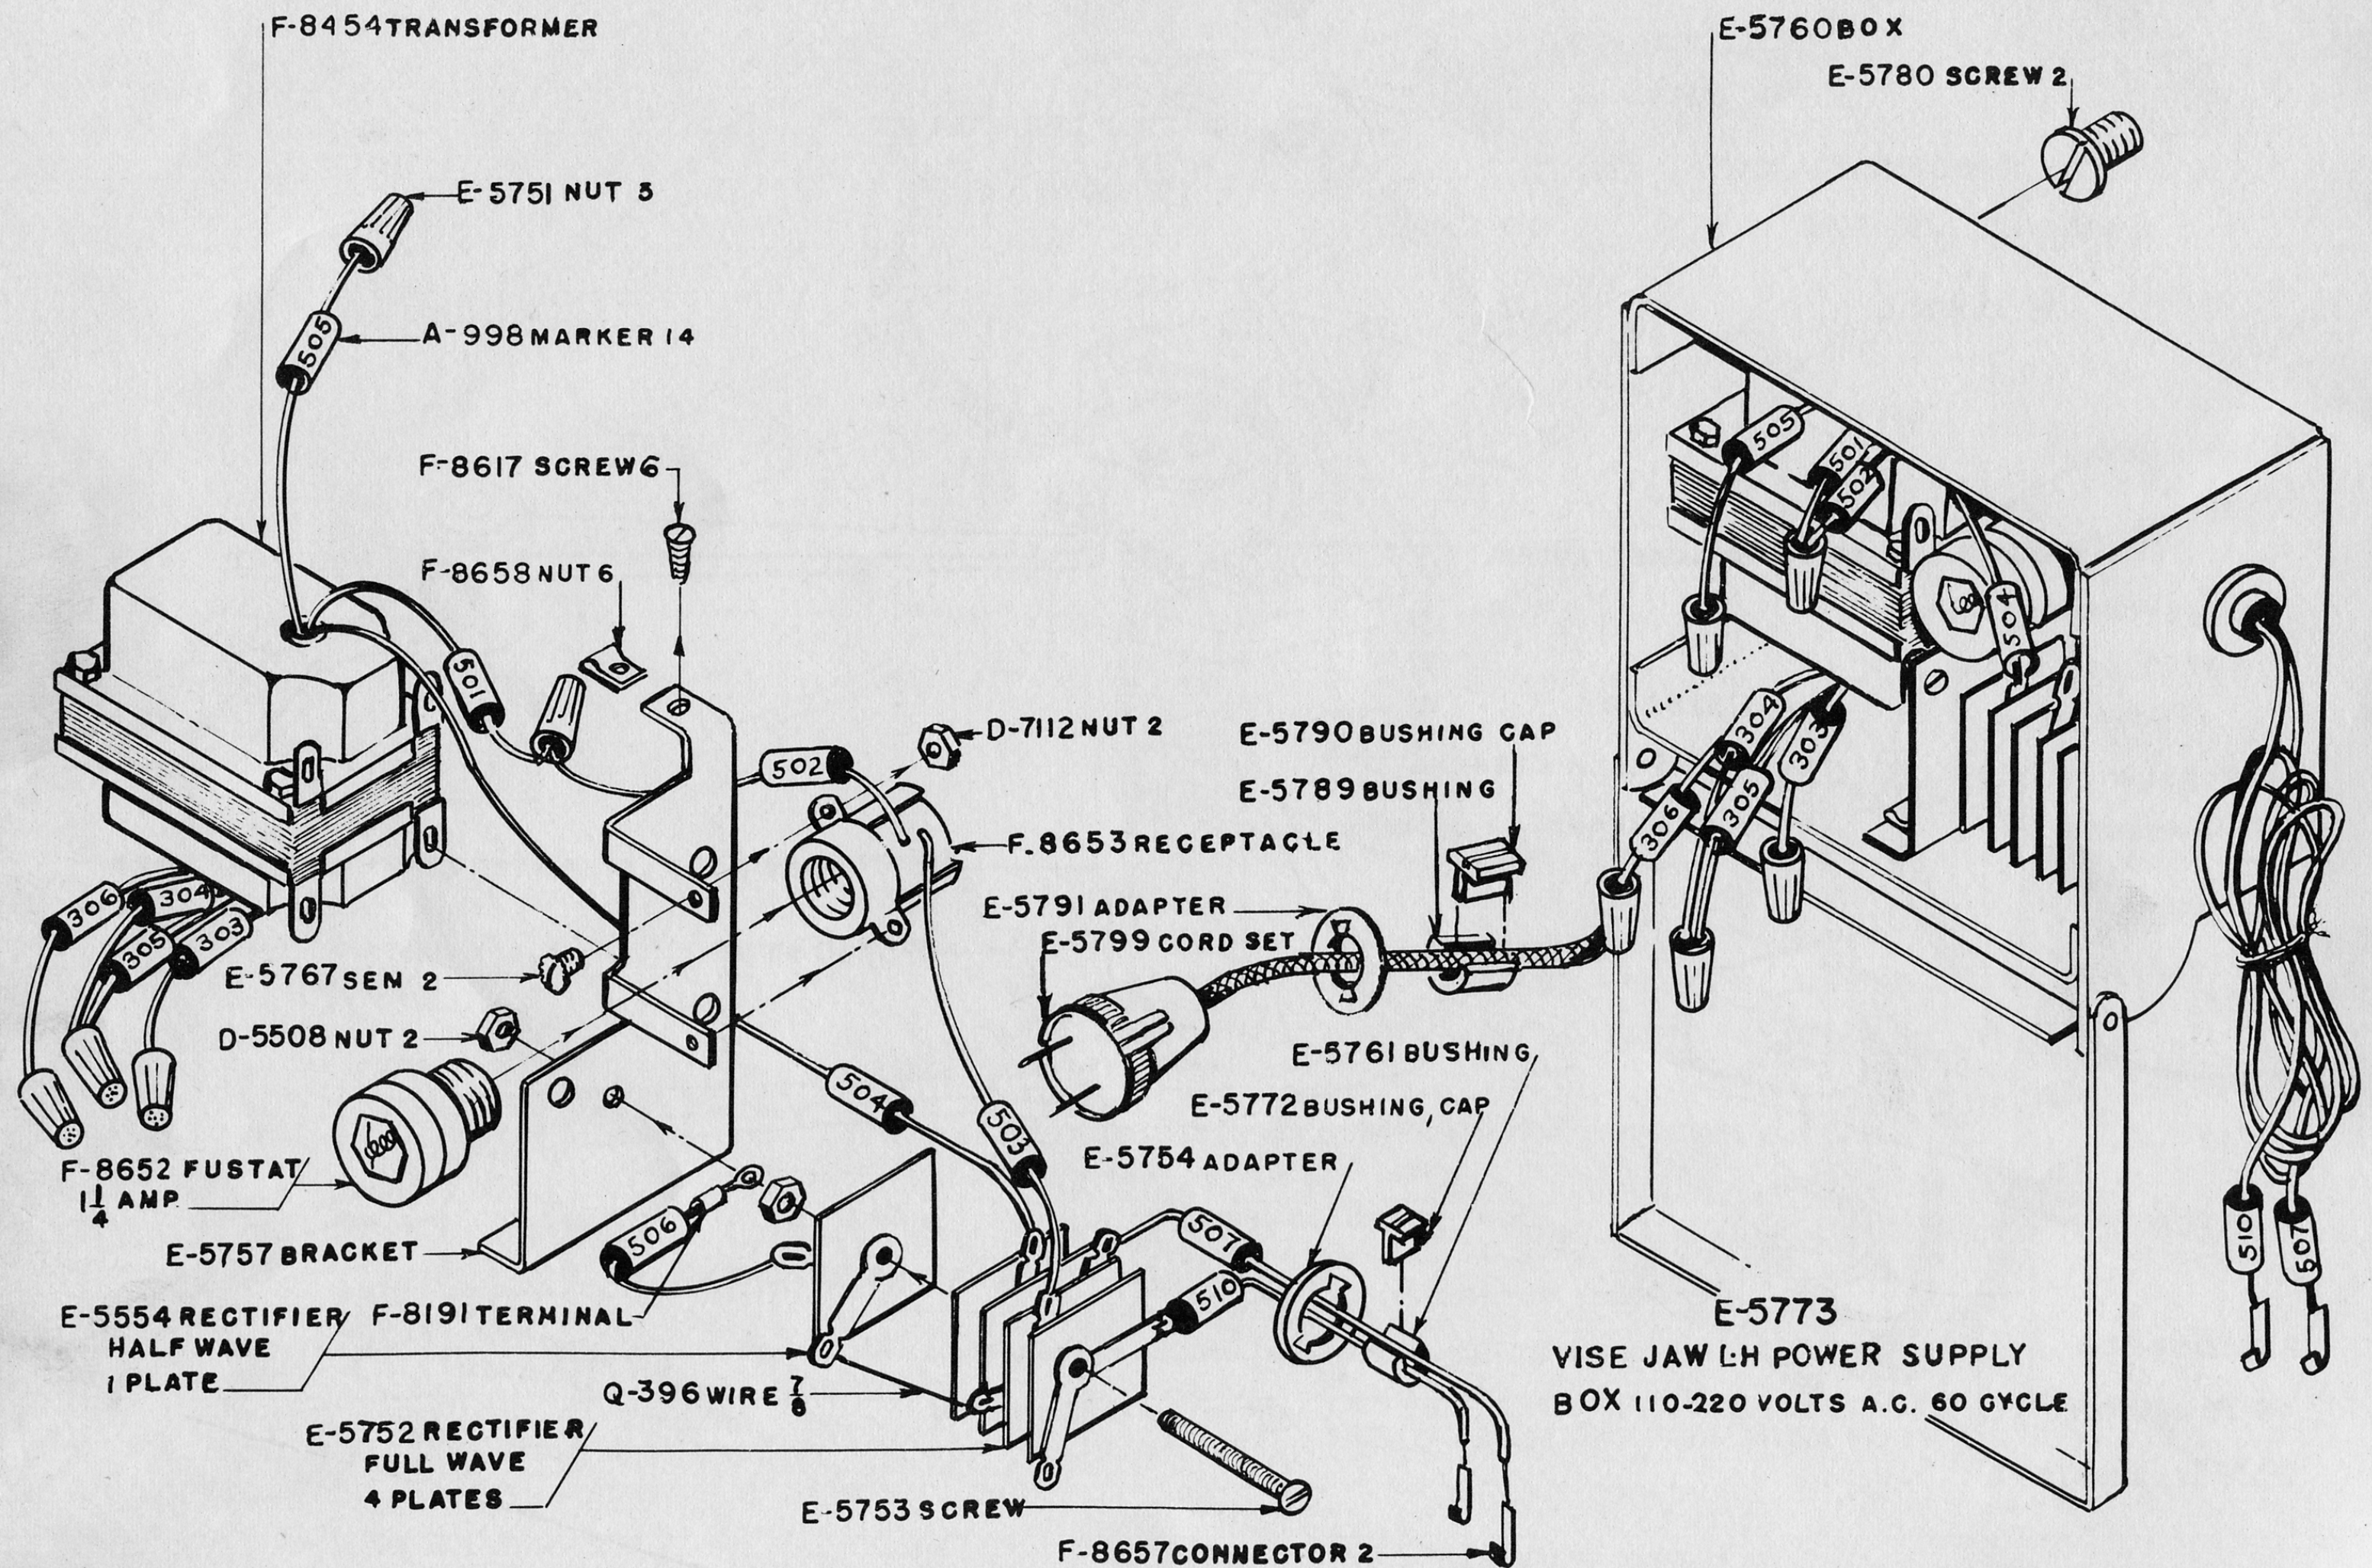 

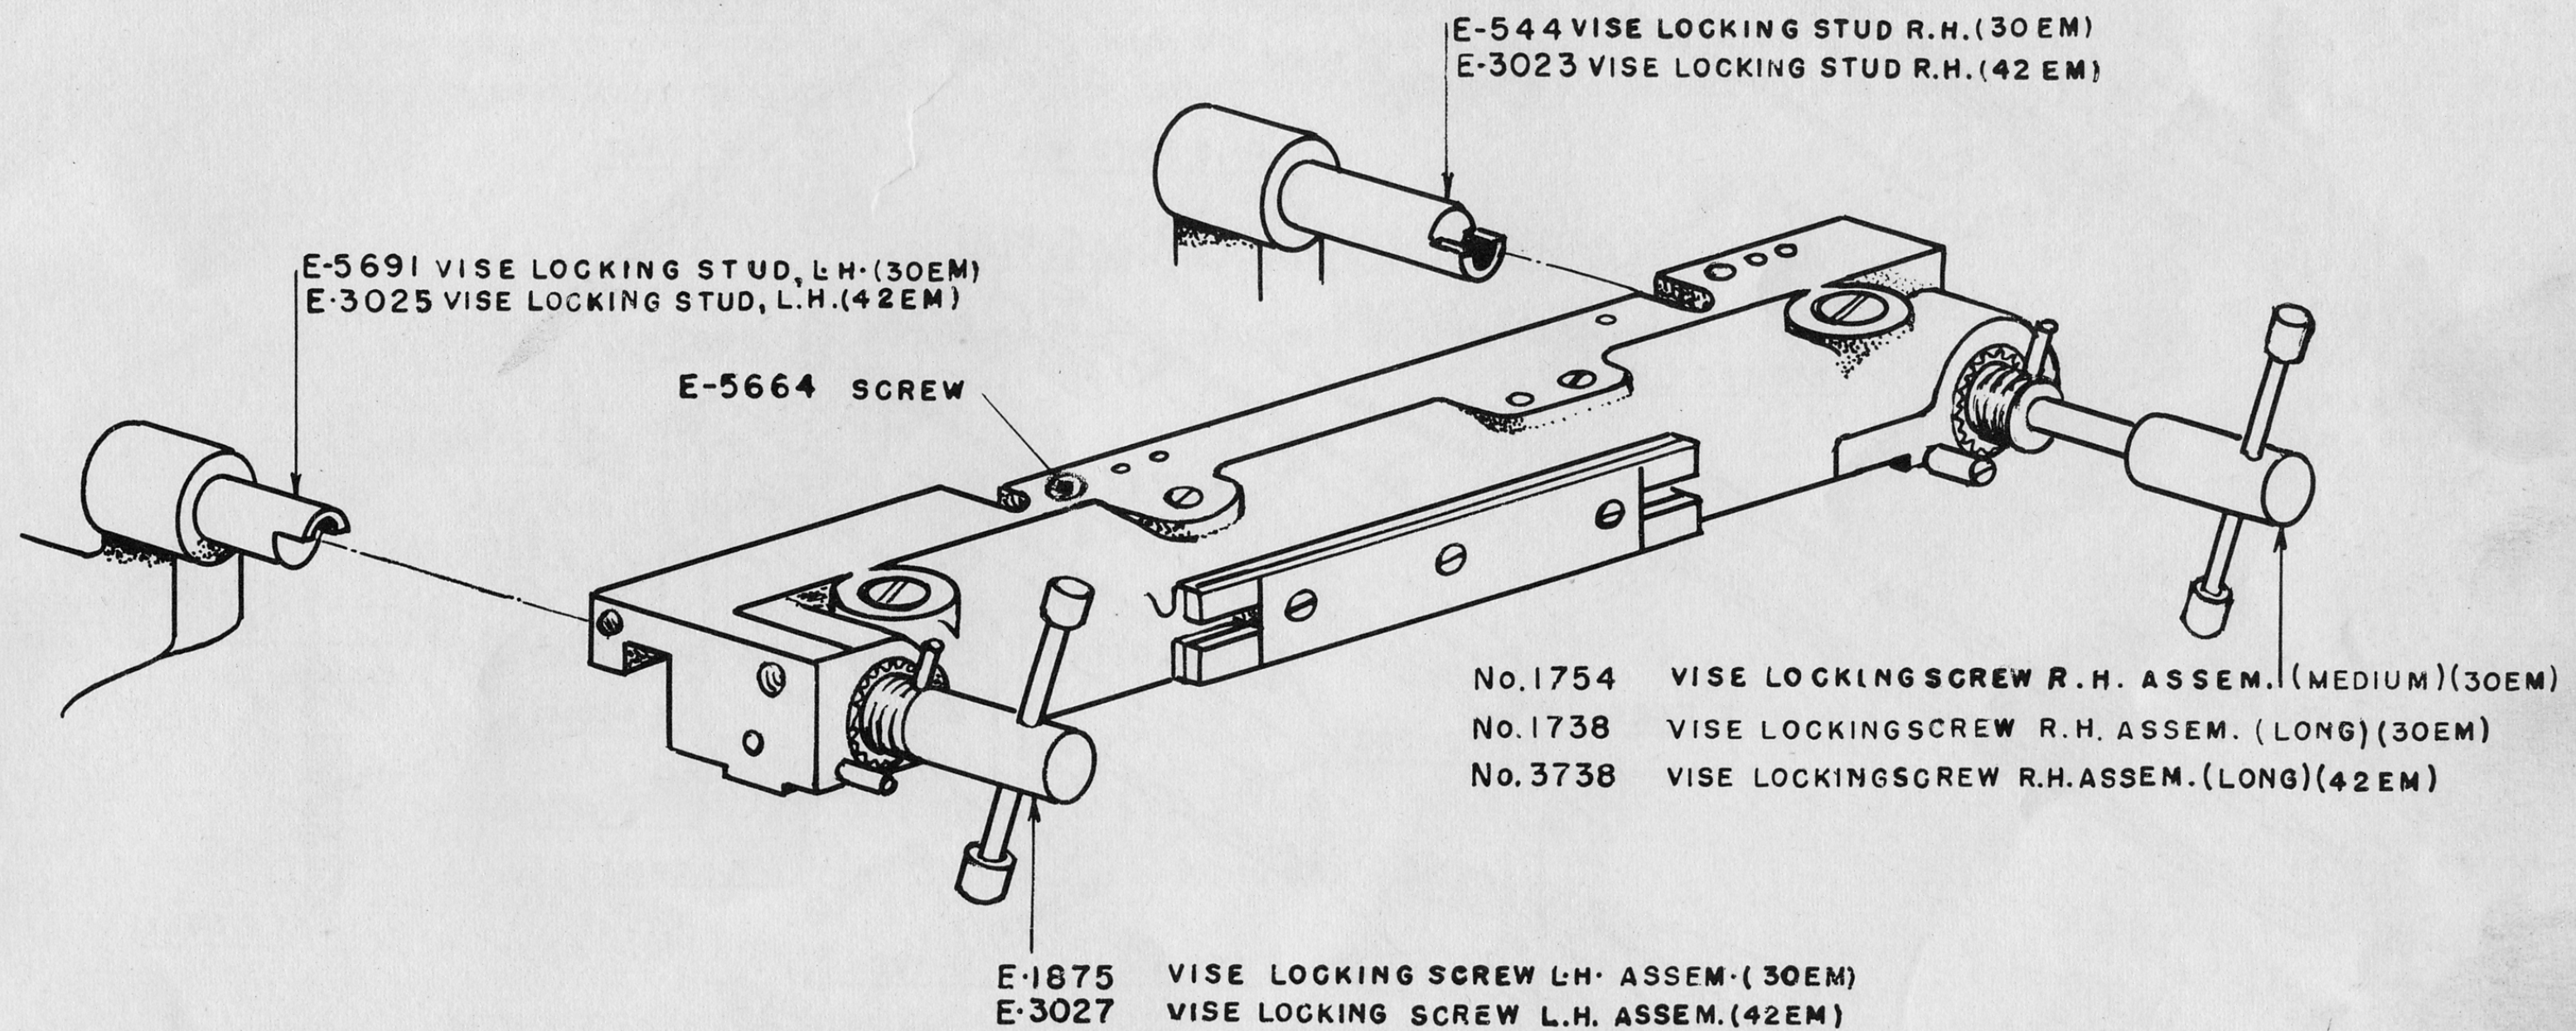 


First Elevator Jaw

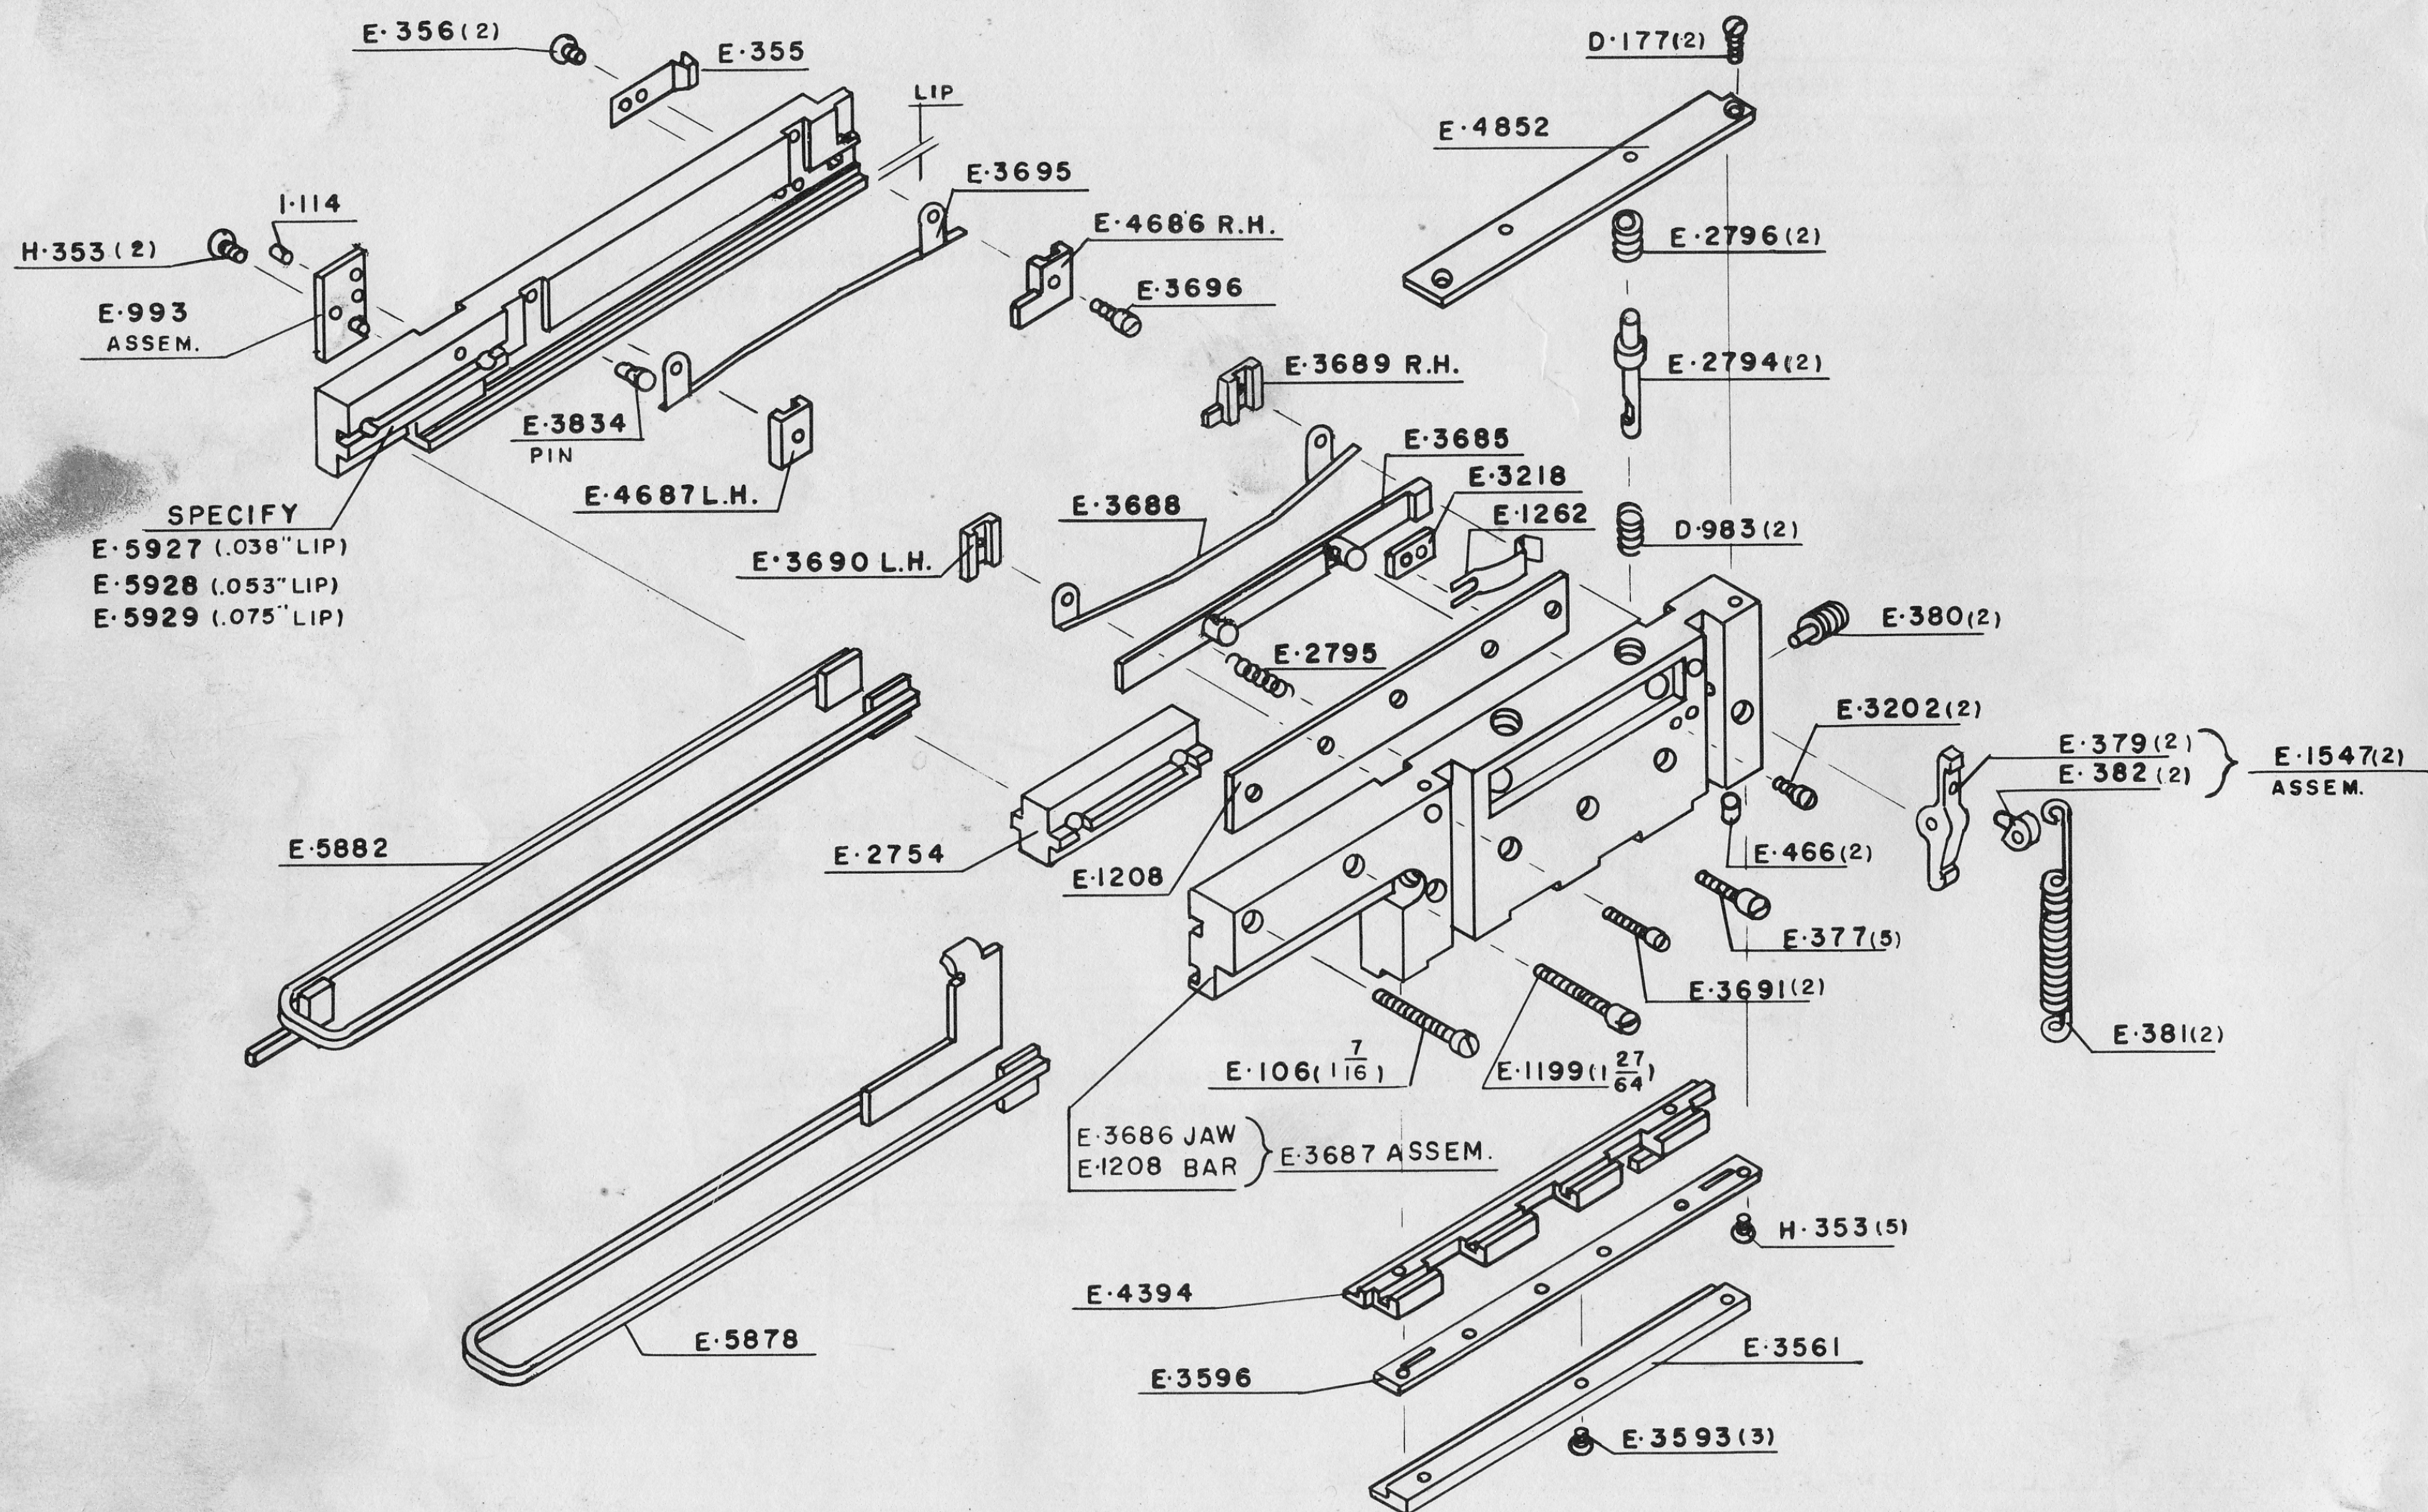 


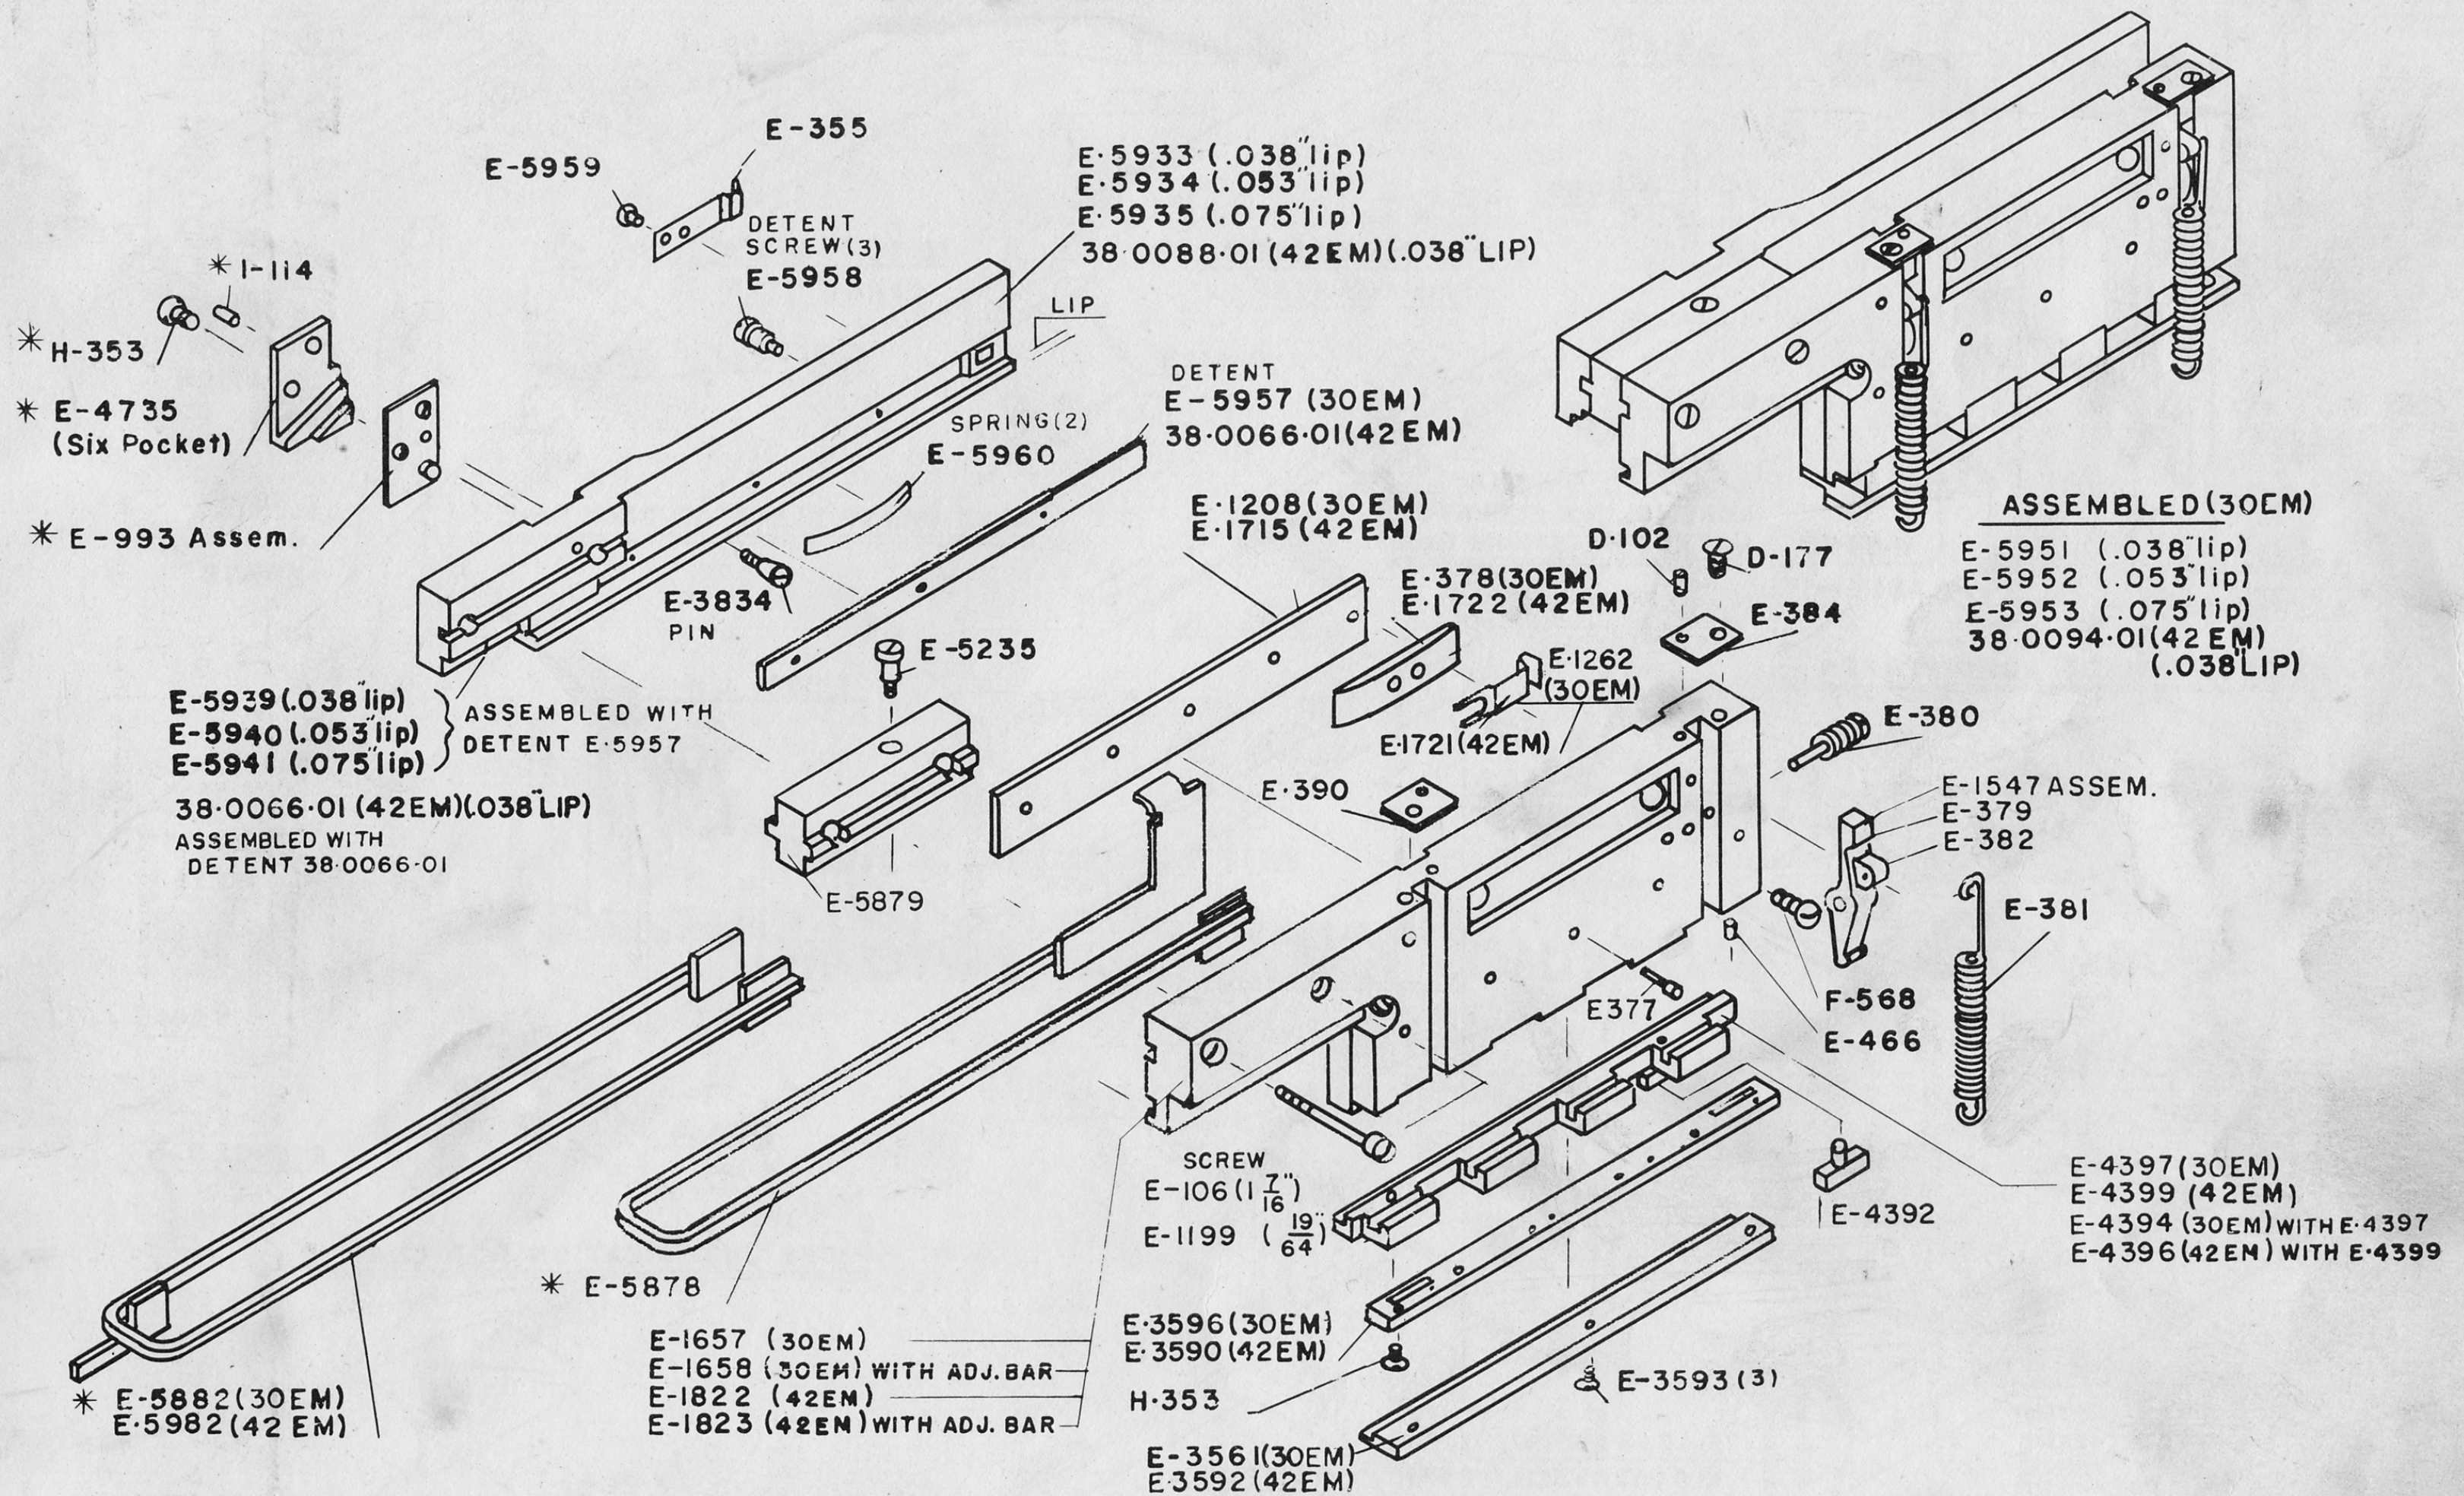 

* PARTS NOT INCLUDED IN THE FIRST ELEVATOR JAW, ASSEMBLED

  Miscellaneous Parts

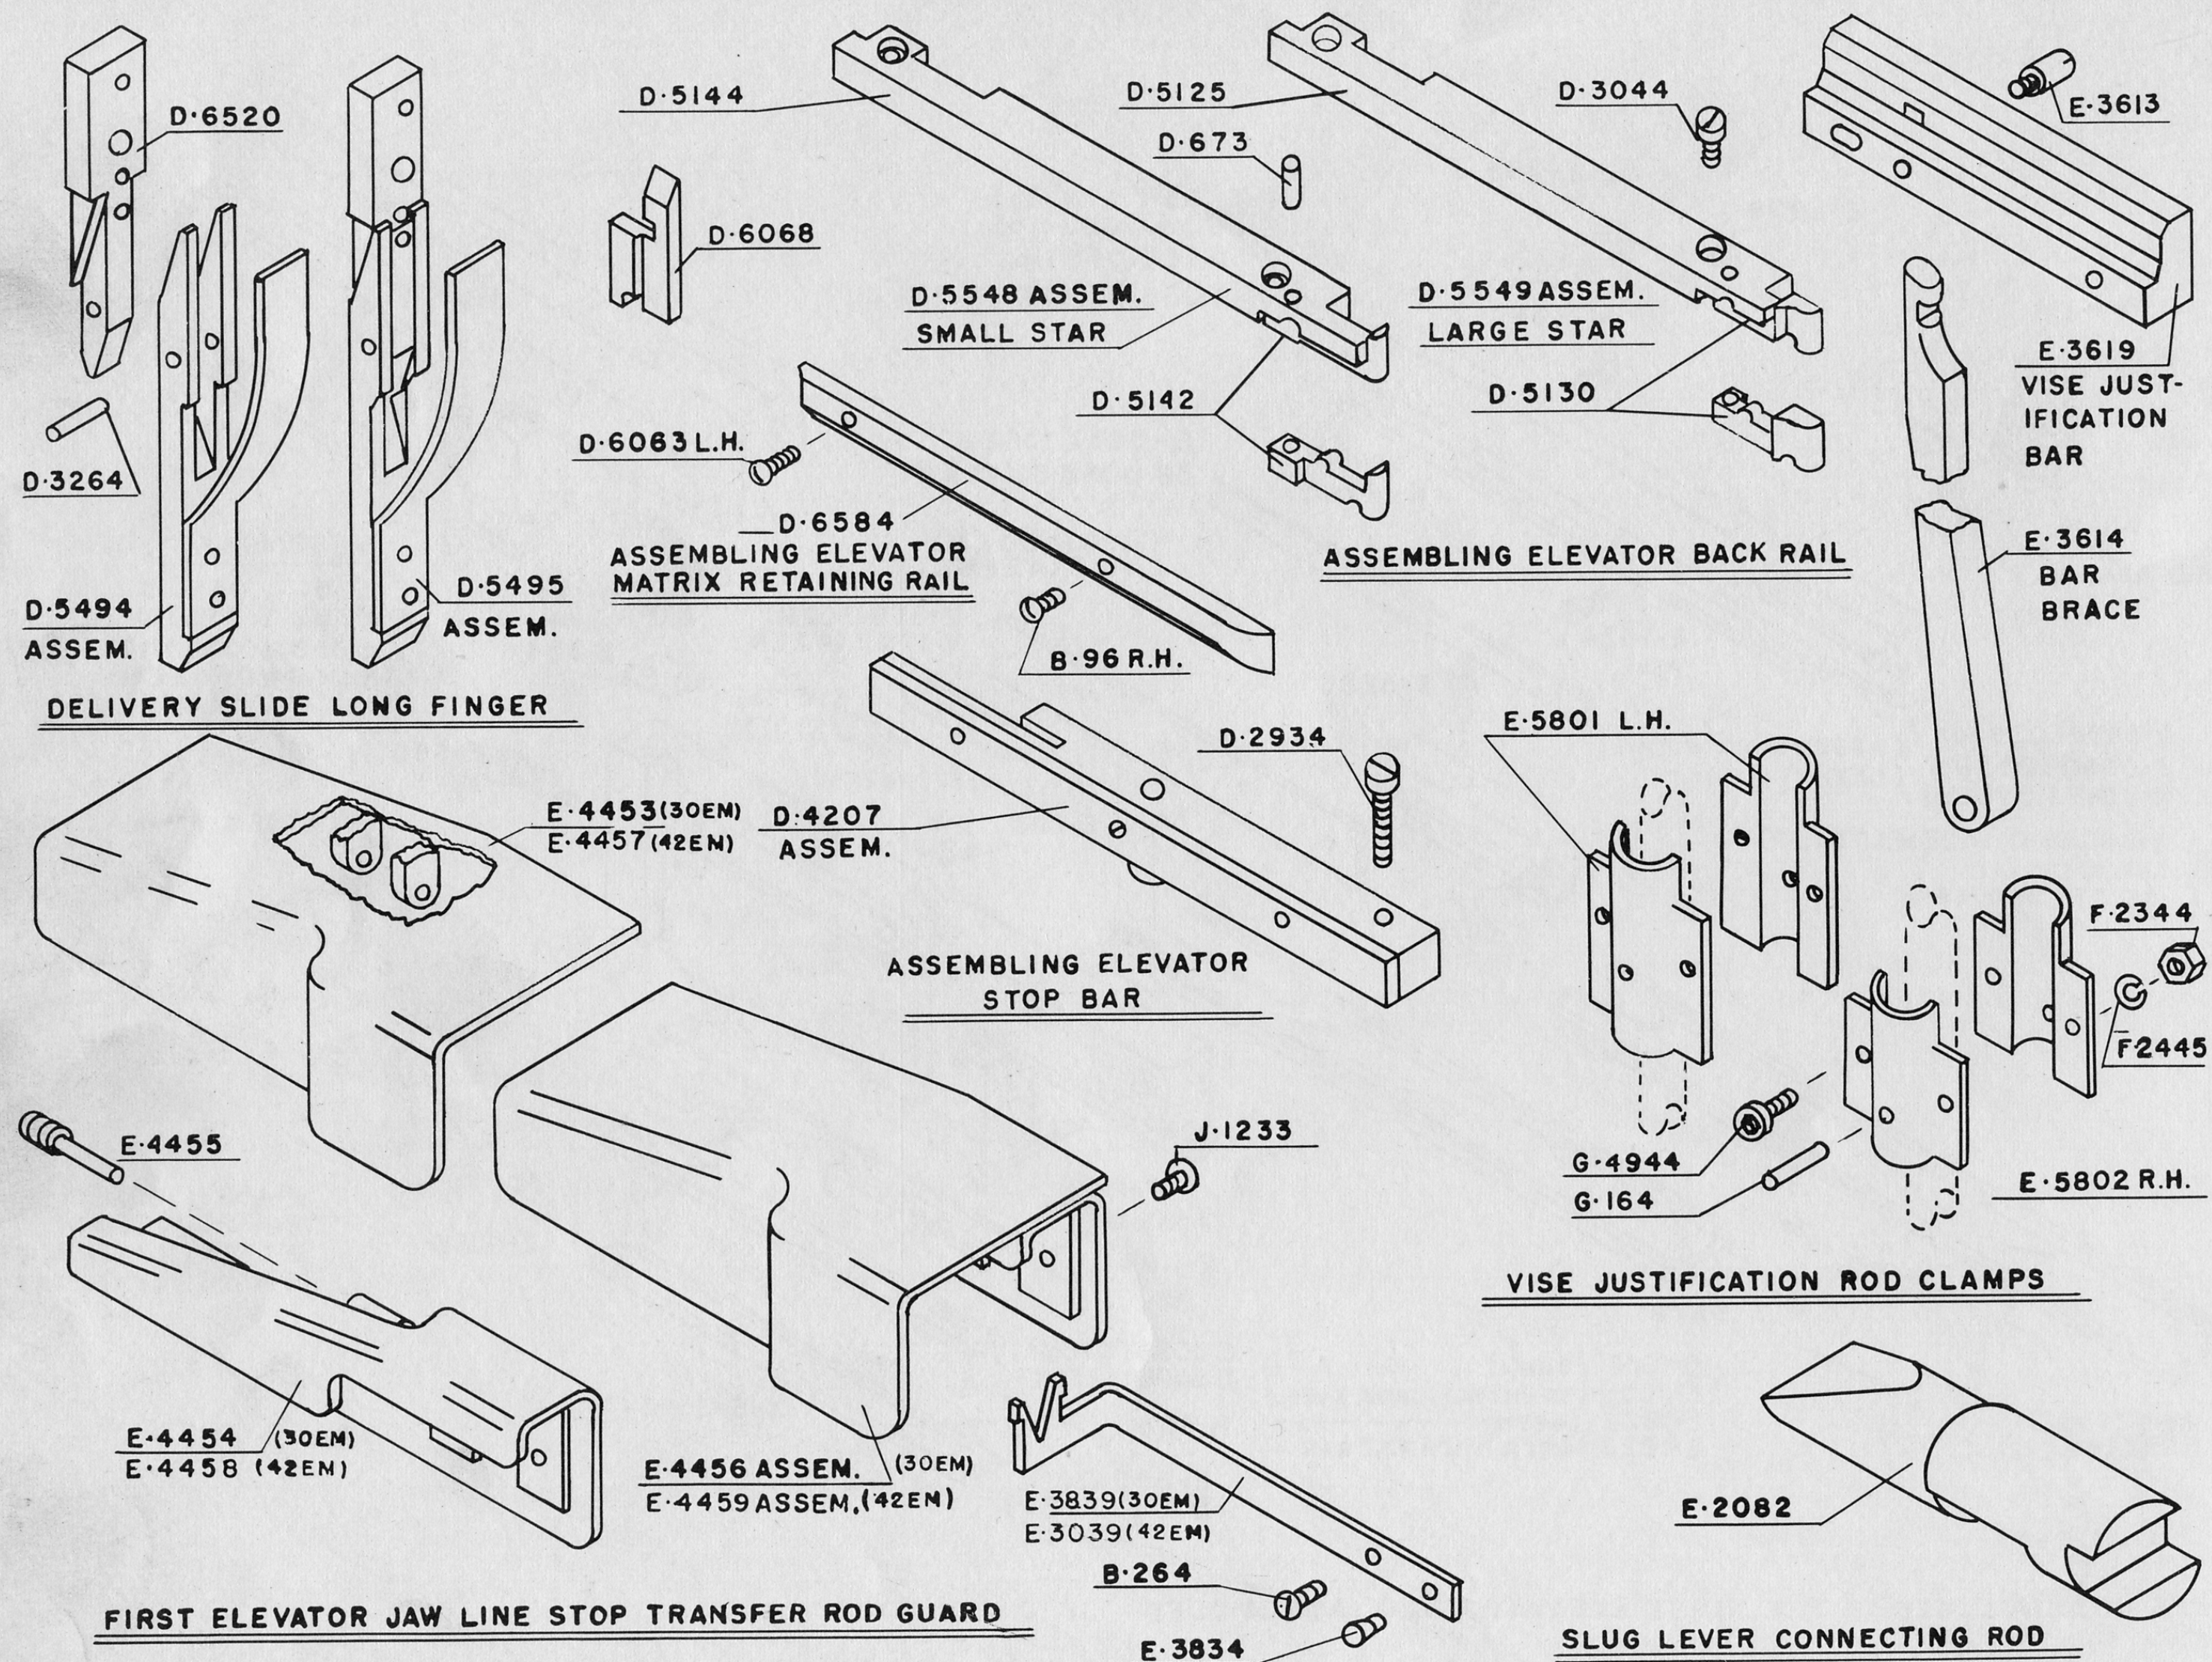

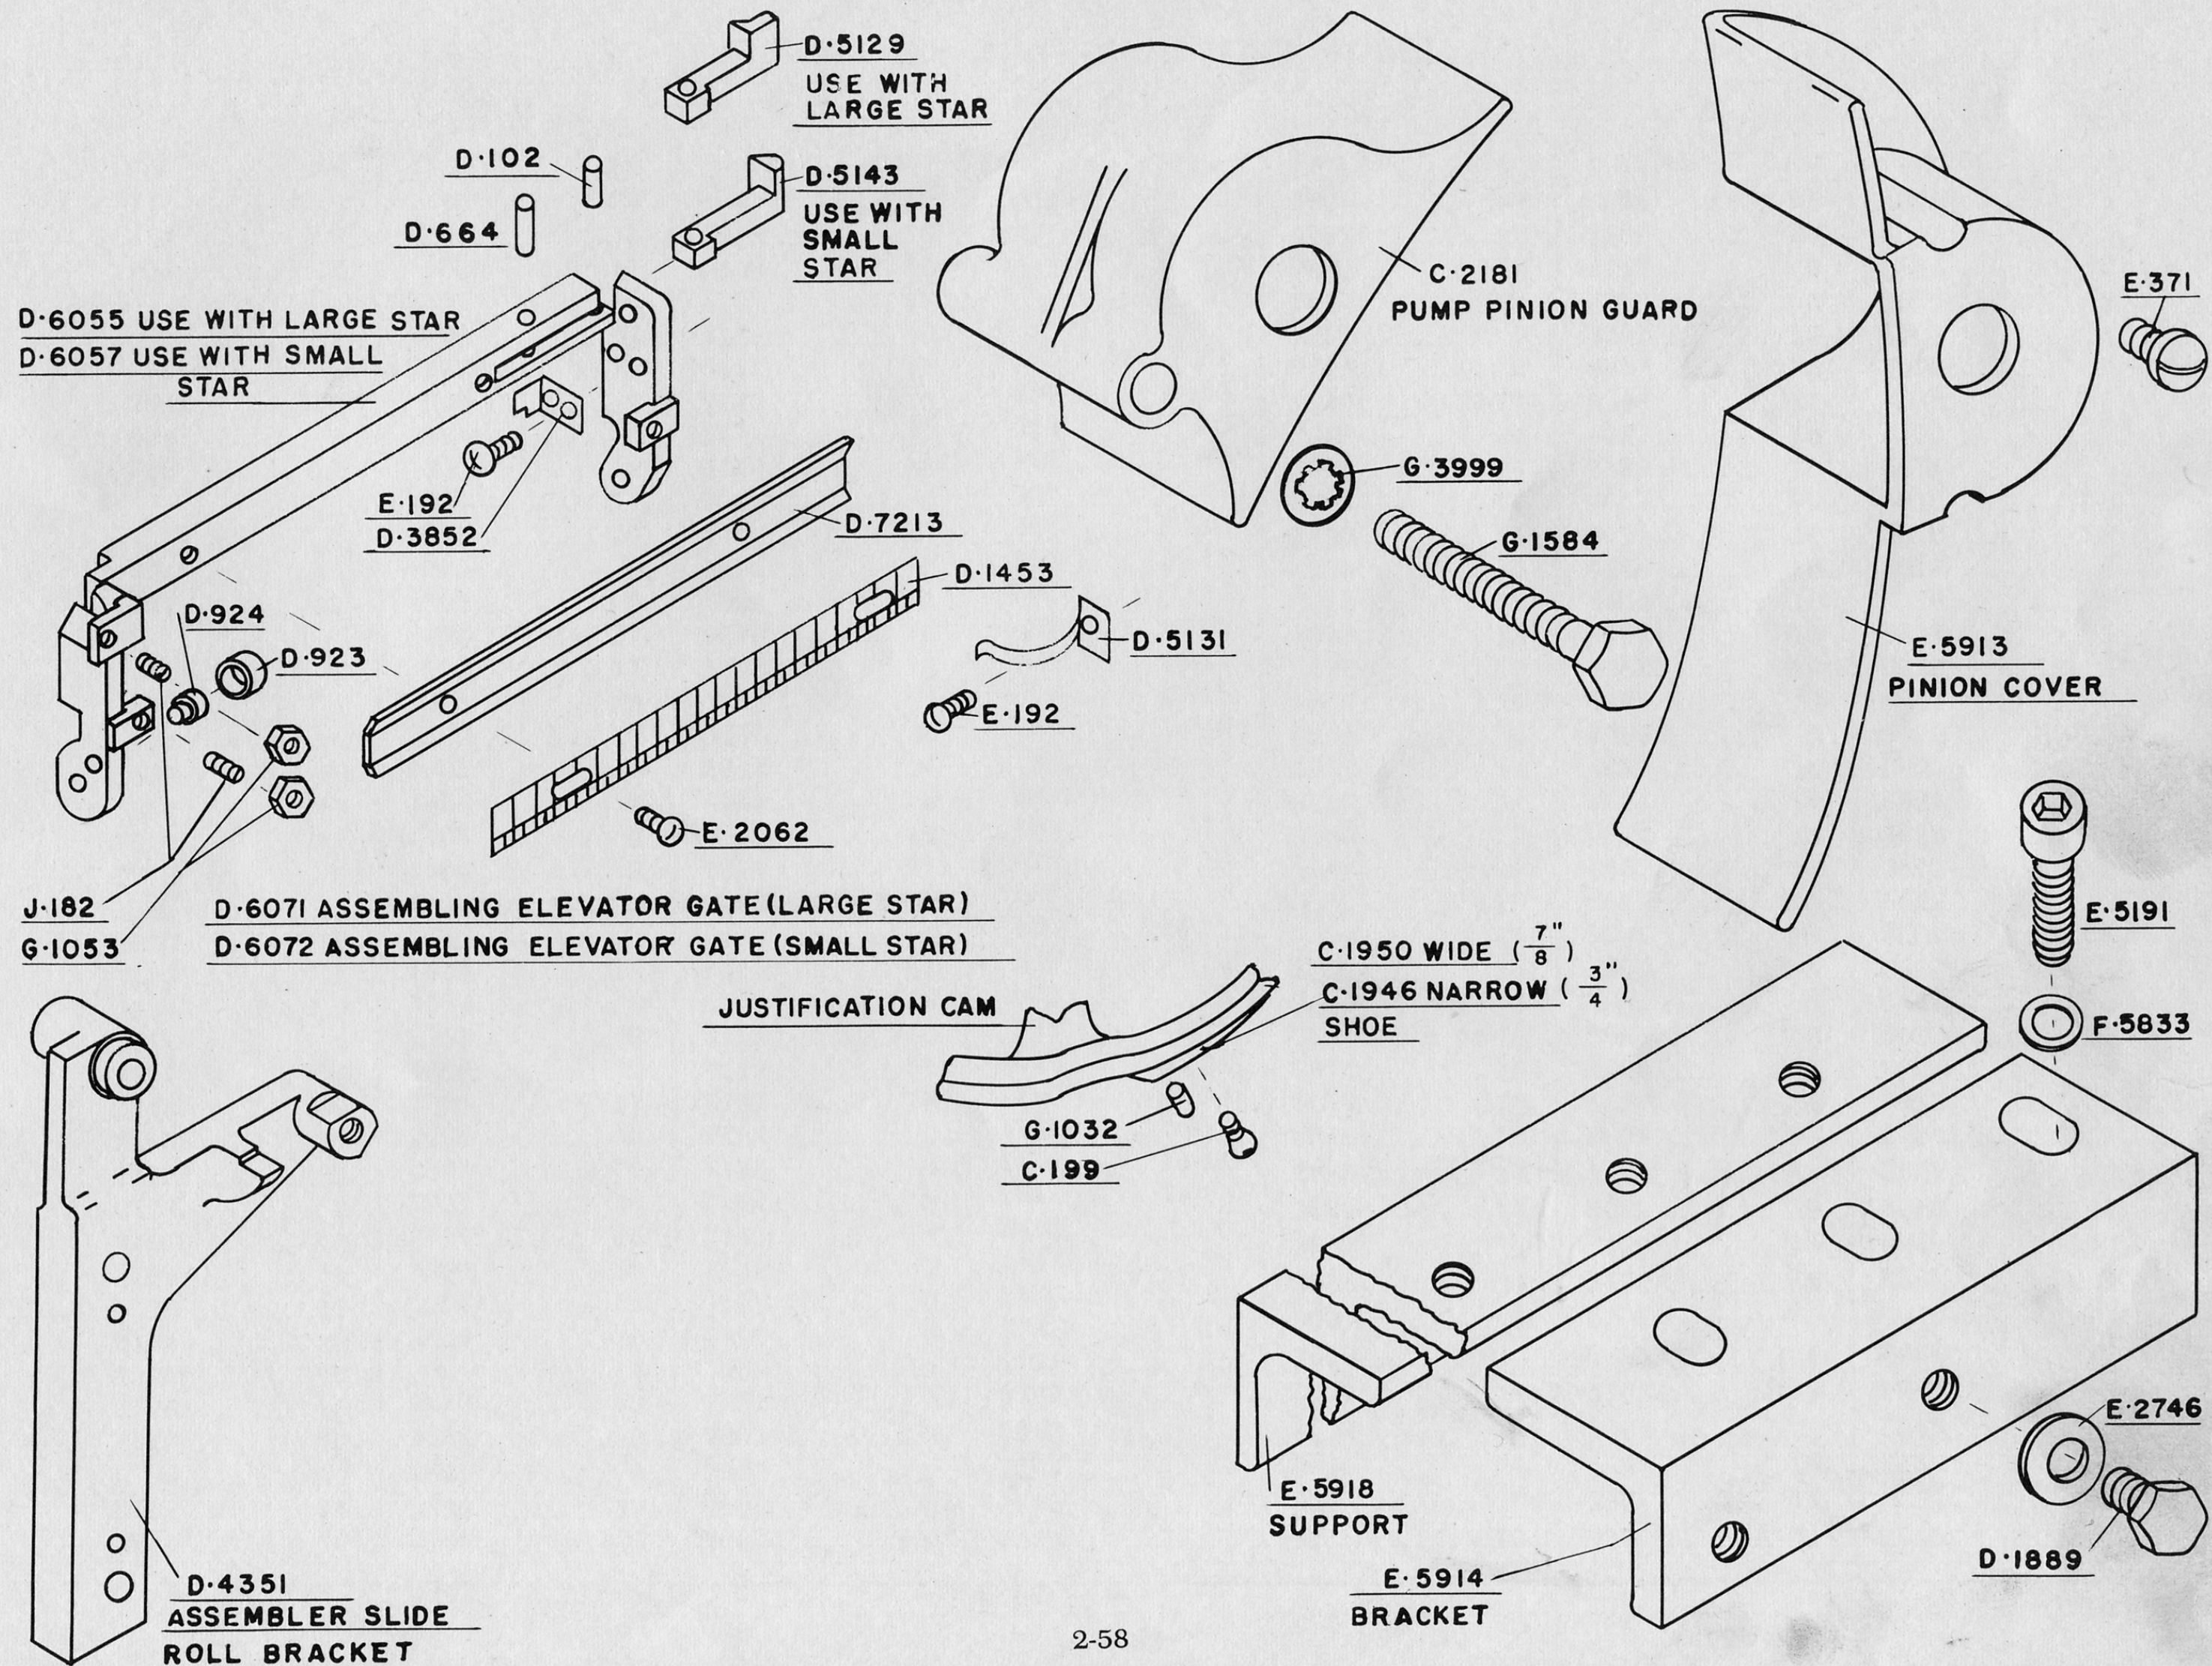

INDEX TO PARTS

LINOTYPE MANUAL HYDRAQUADDER

A		D		D		D		E		E		E	
Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
116	10	85	7-8	4351	17	7208	9	1898	3-9	3834	14-15-16	5378	11
464	2	100	3	5015	6	7211	9	2062	17	3839	16	5511	5
998	11-12	102	15-17	5125	16	7213	17	2082	16	4147	9	5554	12
B		107	10	5129	17	E		2677	7-8	4352	3	5606	8
96	16	120	17	5130	16	106	14-15	2692	6	4392	15	5607	8
264	6-16	177	14-15	5131	17	168	3-6	2720	2	4394	14-15	5608	8
584	3	206	9	5142	16	192	17	2746	10-17	4396	15	5612	2-5
965	2	323	6	5143	17	320	14	2754	14	4397	15	5613	2
BB		331	7-8	5144	16	355	14-15	2794	14	4399	15	5614	2
704	11	664	17	5255	6	371	14-15	2795	14	4453	16	5615	7-8
747	11	673	16	5494	16	377	14-15	2796	14	4454	16	5616	7-8
C		715	9	5495	16	378	14-15	2799	6	4455	16	5617	3
199	17	802	3-9	5508	12	379	14-15	3023	13	4456	16	5618	6
471	6	923	17	5548	16	380	14-15	3025	13	4457	16	5619	6
1502	10	924	17	5549	16	380	14-15	3027	13	4458	16	5620	4
1550	17	965	9	5725	11	382	14-15	3039	16	4459	16	5621	7-8
1574	17	983	14	6055	17	384	15	3202	14	4585	7	5622	3-7-8
1718	10	1063	9	6057	17	390	15	3218	14	4686	14	5623	3
1946	17	1064	9	6063	16	424	9	3265	11	4687	14	5624	7-8
1950	17	1401	9	6068	16	466	14-15	3465	7	4735	15	5626	8
2113	2	1404	9	6071	17	544	13	3546	9	4852	14	5627	7-8
2114	2	1434	9	6072	17	692	3	3561	14-15	5087	7-8	5628	6
2115	2	1436	9	6190	2	993	14-15	3590	15	5088	7-8	5629	6
2117	2	1453	17	6520	16	1126	11	3592	15	5090	7-8	5630	3
2118	2	1574	9	6529	17	1199	14-15	3593	14-15	5091	7-8	5631	6
2120	17	1752	9	6584	16	1208	14-15	3596	14-15	5093	7-8	5633	6
2122	2	1886	9	7112	12	1262	14-15	3613	16	5094	7-8	5634	10
2123	2	1889	10-17	7191	9	1547	14-15	3614	6-16	5096	7-8	5635	2
2167	10	2299	9	7192	9	1624	6	3619	6-16	5097	8	5636	2
2172	10	2589	11	7193	9	1657	15	3685	14	5098	7-8	5637	3
2173	10	2934	16	7194	9	1658	15	3686	14	5099	7-8	5639	3
2174	10	3044	16	7195	9	1715	15	3687	14	5100	7-8	5640	2
2175	10	3264	9-16	7196	9	1721	15	3688	14	5102	7-8	5641	3
2176	10	3265	11	7197	9	1722	15	3689	14	5103	7-8	5642	3
2179	10	3624	9	7198	9	1822	15	3690	14	5185	5	5645	3
2180	10	3664	7	7200	9	1823	15	3691	14	5191	2-17	5648	3
2181	17	3667	7-8	7201	9	1875	13	3695	14	5192	3	5649	4
2183	10	3814	9	7202	9	1889	17	3696	14	5235	15	5650	4
		3821	9	7203	9			3749	11	5301	11	5652	4
		3852	17	7206	9			3816	11	5375	11	5653	4
		4207	16	7207	9								

INDEX TO PARTS (Cont.)

LINOTYPE MANUAL HYDRAQUADDER

E		E		E		E		F		H		MISC.	
Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
5654	3-4	5700	2	5751	12	5910	11	26	2	167	4	38-0056-01	7
5655	3	5701	2	5752	12	5911	11	568	15	353	14-15	38-0056-02	7
5657	5	5702	2	5753	12	5913	17	2344	16	457	6	38-0057-01	3
5658	4	5703	2	5754	12	5914	17	2445	16	523	6	38-0058-01	3-7
5659	4	5704	2-4	5755	11	5918	17	3260	11	5275	2	38-0059-01	3
5660	6	5705	10	5756	11	5927	14	5599	2-3-6	6567	6	38-0060-01	7
5662	3-6	5706	2-10	5757	12	5928	14	5833	17			38-0060-02	7
5663	4	5707	2-4	5758	11	5929	14	6155	3-6			38-0061-01	7
5664	2-4-13	5709	2-3-11	5760	12	5933	15	6500	7-8	I		38-0062-01	7
5665	4	5710	2	5761	12	5934	15	8191	11-12	114	14-15	38-0063-01	7
5666	4	5711	2	5765	3-4	5935	15	8420	7-8	287	6	38-0064-01	7
5668	3	5712	2	5767	11-12	5939	15	8423	11	1470	6	38-0065-01	6
5669	6	5713	2	5768	11	5940	15	8454	12	2031	7-8	38-0066-01	15
5670	6	5714	2	5769	3-6	5941	15	8617	12	2430	3-7-8	38-0067-01	6
5671	6	5716	2	5770	3-6	5951	15	8652	12	2540	10	38-0068-01	6
5672	6	5717	2	5771	3-6	5952	15	8653	12	2799	6	38-0070-01	6
5673	6	5721	5	5772	12	5953	15	8657	11-12	4986	3	38-0071-01	2
5674	6	5722	3-6	5773	12	5957	15	8658	12	6345	7	38-0072-01	2
5675	6	5723	2	5776	7	5958	15	8710	11	6350	10	38-0073-01	2
5676	6	5724	3-10	5780	12	5959	15	8805	7-8	8350	6	38-0074-01	2
5677	6	5725	3-6	5784	10	5960	15	8975	7-8			38-0075-01	2
5678	6	5726	3	5785	10	5961	7			J		38-0076-01	2
5679	6	5727	2	5789	12	5962	7			171	6	38-0077-01	7
5680	6	5730	10	5790	12	5963	7	G		182	17	38-0077-02	7
5681	6	5731	2	5791	12	5964	7	103	8	805	3	38-0079-01	4
5684	5	5733	4	5795	6	5966	7	107	10	1233	16	38-0080-01	4
5685	5	5734	4	5796	6	5967	7	164	16	5375	2	38-0085-01	3
5686	5	5735	4	5797	6	5968	7	939	11	5498	7-8	38-0086-01	6
5688	2	5736	4	5799	12	5969	7	1032	17	5499	8	38-0087-01	6-7
5689	10	5738	8	5801	16	5970	7	1053	11-17			38-0088-01	15
5690	2	5739	8	5802	16	5971	6	1135	2	MISC.		38-0089-01	6
5691	13	5740	5	5822	7	5972	6	1213	11	1738	13	38-0090-01	6
5692	2	5741	7-8	5878	14-15	5973	6	1584	17	1754	13	38-0091-01	7
5693	5	5743	3	5879	15	5982	15	2852	9	3738	13	38-0093-01	7
5694	10	5744	4	5882	14-15	5989	4	2891	3-6			38-0094-01	15
5695	10	5746	4	5905	3	5990	4	3398	3	Q-396	12	38-0095-01	7
5697	2	5748	6	5907	11	5991	4	3999	17	Q-2891	3	39-0136-02	2
5698	5	5749	11	5908	11	5992	7	4937	2			39-0182-01	6
5699	5	5750	11	5909	3	5995	4	4944	16-17	X-1870	2	39-0251-01	7

Parts Catalog for the

LINOTYPE ELECTRICALLY CONTROLLED HYDRAQUADDER

GENERAL INFORMATION

The following pages show the parts of the Linotype Electrically Controlled Hydraquadder for push button and tape controlled operation.

These pages are to be used in conjunction with the catalog pages in the front section of this catalog, which

pertain to Manual Hydraquadder replacement parts.


There are two Parts Indexes, one at the rear of the section on the Manual Hydraquadder, and the other at the rear of this section covering replacement parts for the Electrically Controlled Hydraquadder.

INDEX TO MECHANISMS


Linotype Electrically Controlled Hydraquadder

	<u>Page</u>
Actuating and Clearing Switches	35, 36
Cams	24
Control Valve Operating Lever Lockout Solenoid	25
Hoses	29
Memory Relay Box	30
Memory Relay and Power Supply Box Mounting Brackets	32
Power Supply Box	31
Secondary Control Valve and Operating Levers	26
Selector Cylinder and Latch Housing	27, 28
Selector Switch Box	33
Transfer Switch	34

 
For Index to Parts, See Pages 37, 38

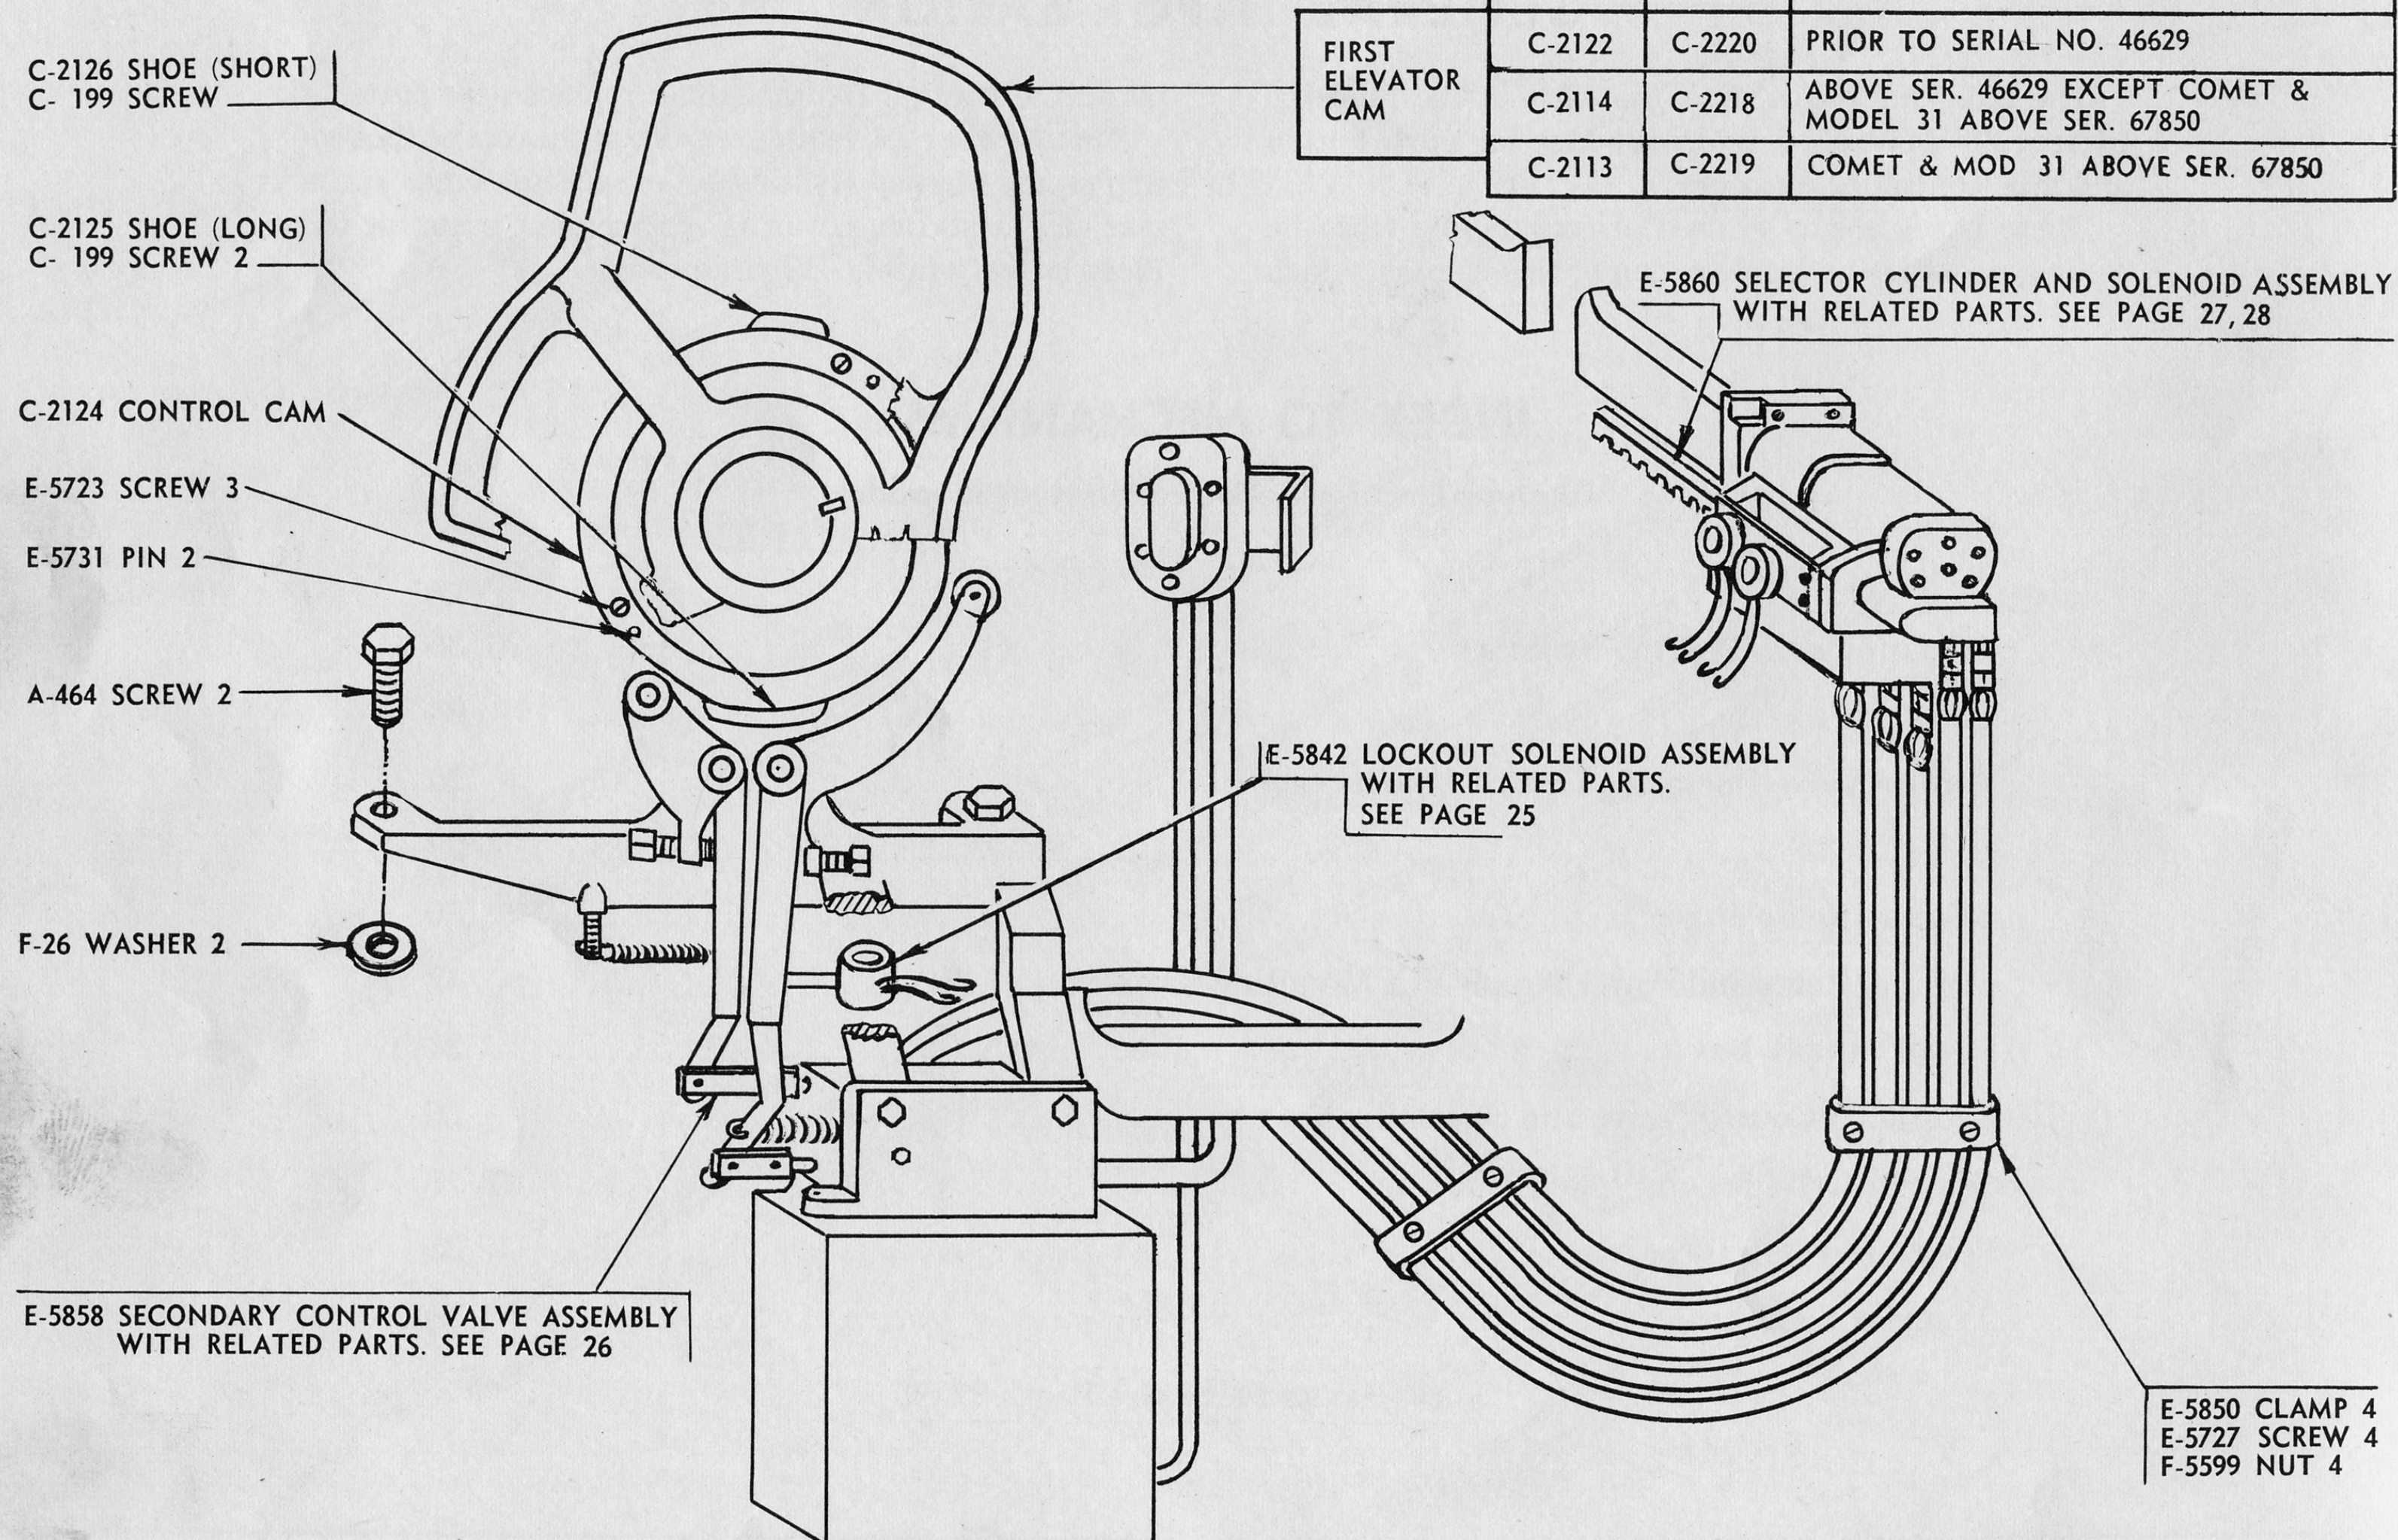


 E-5842 LOCKOUT SOLENOID ASSEMBLY WITH RELATED PARTS.

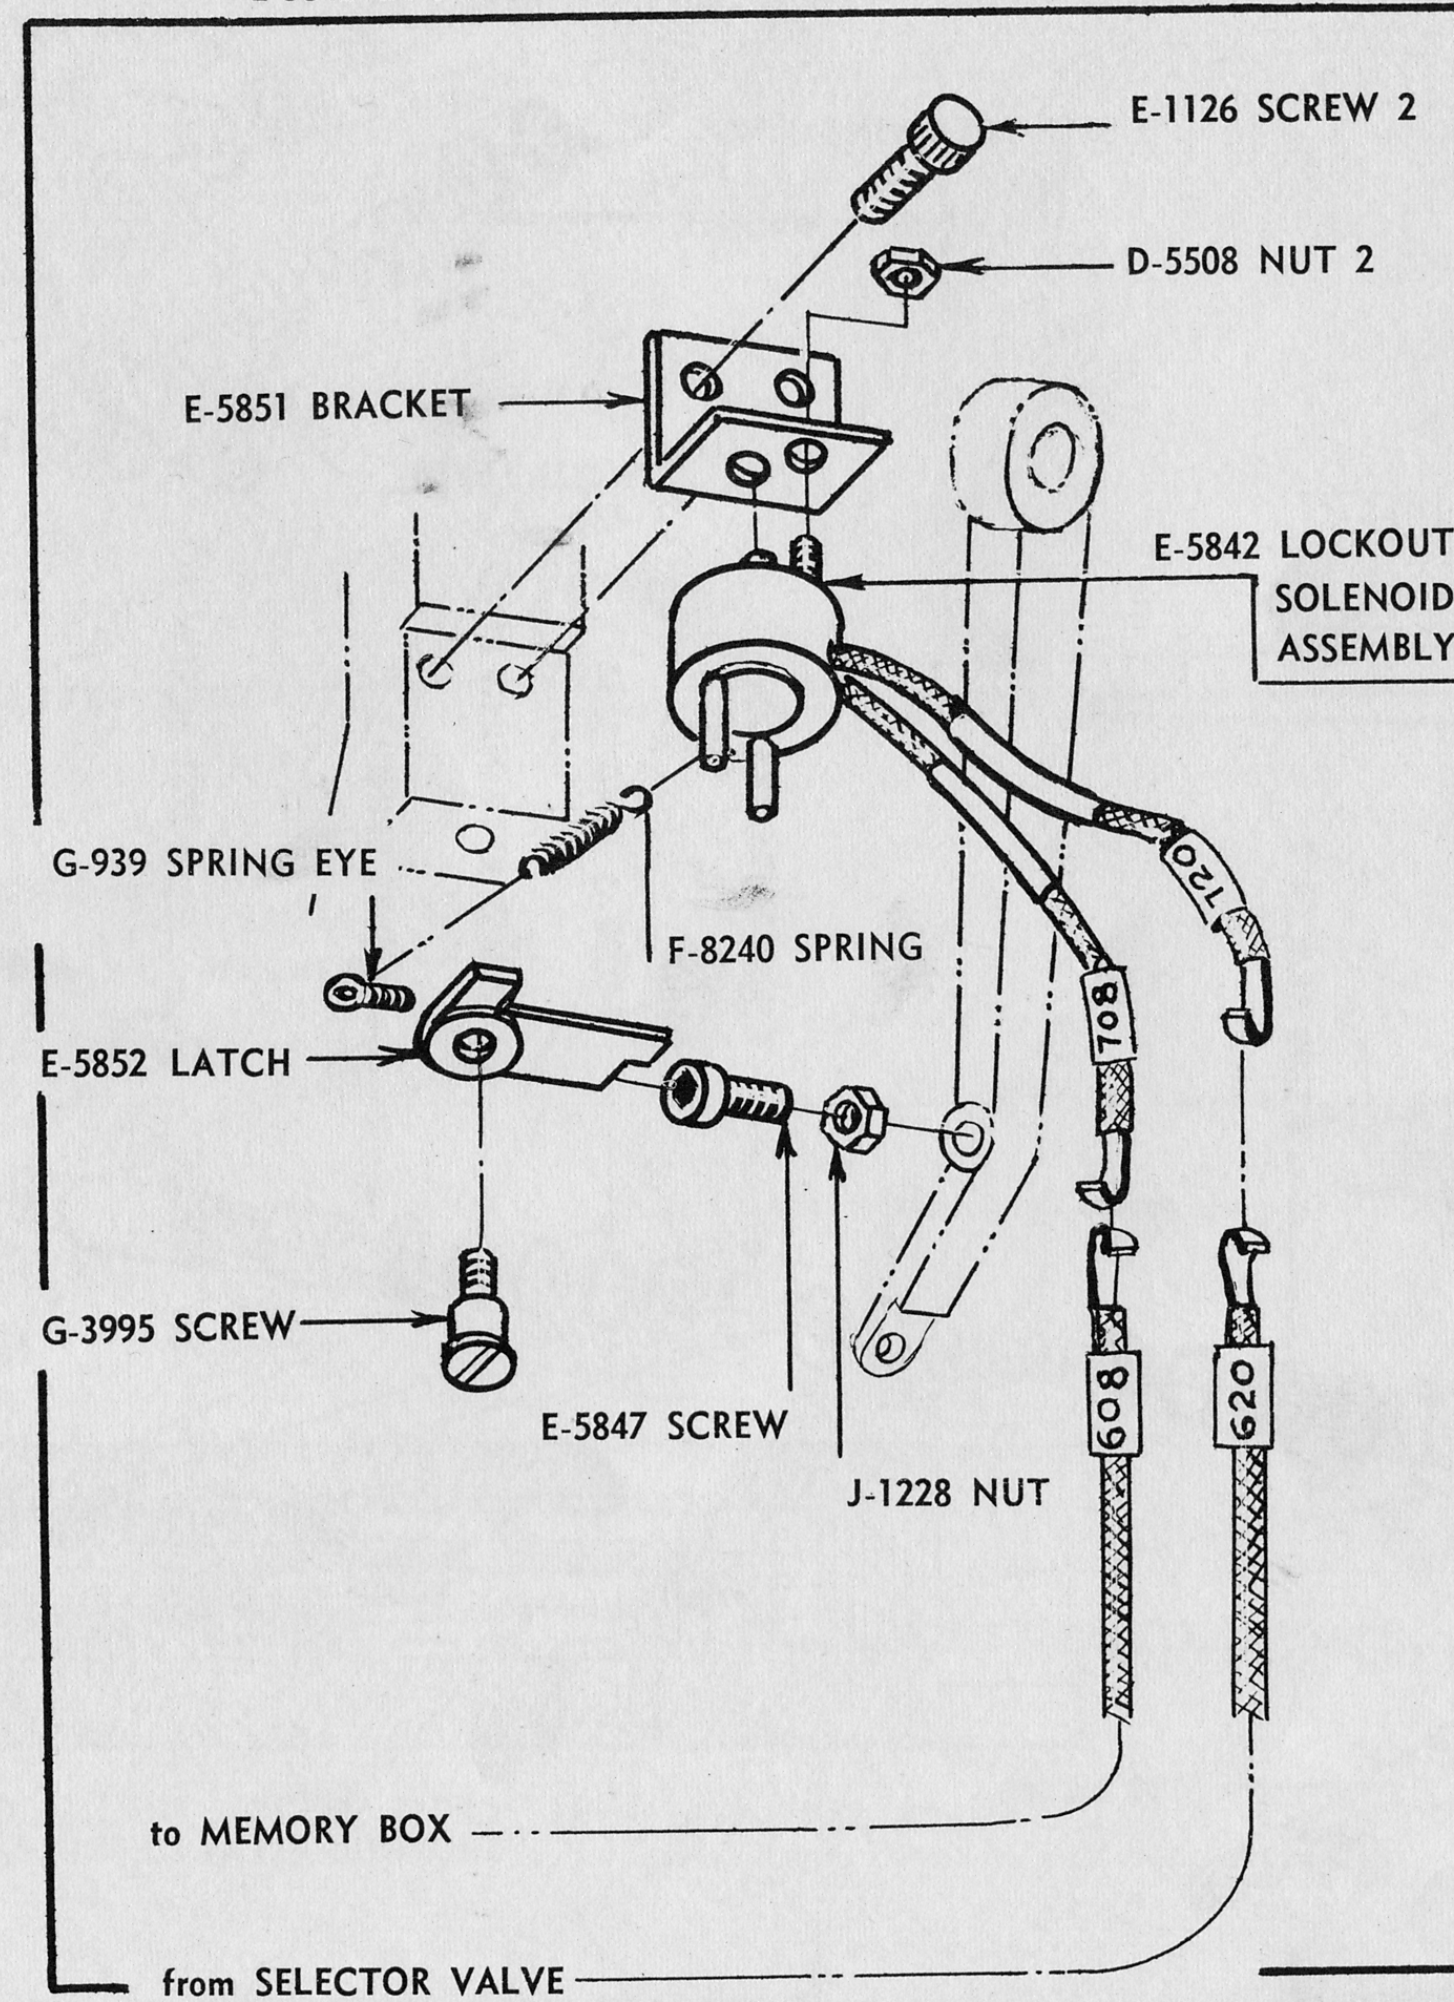


  
Secondary Control Valve and Operating Levers

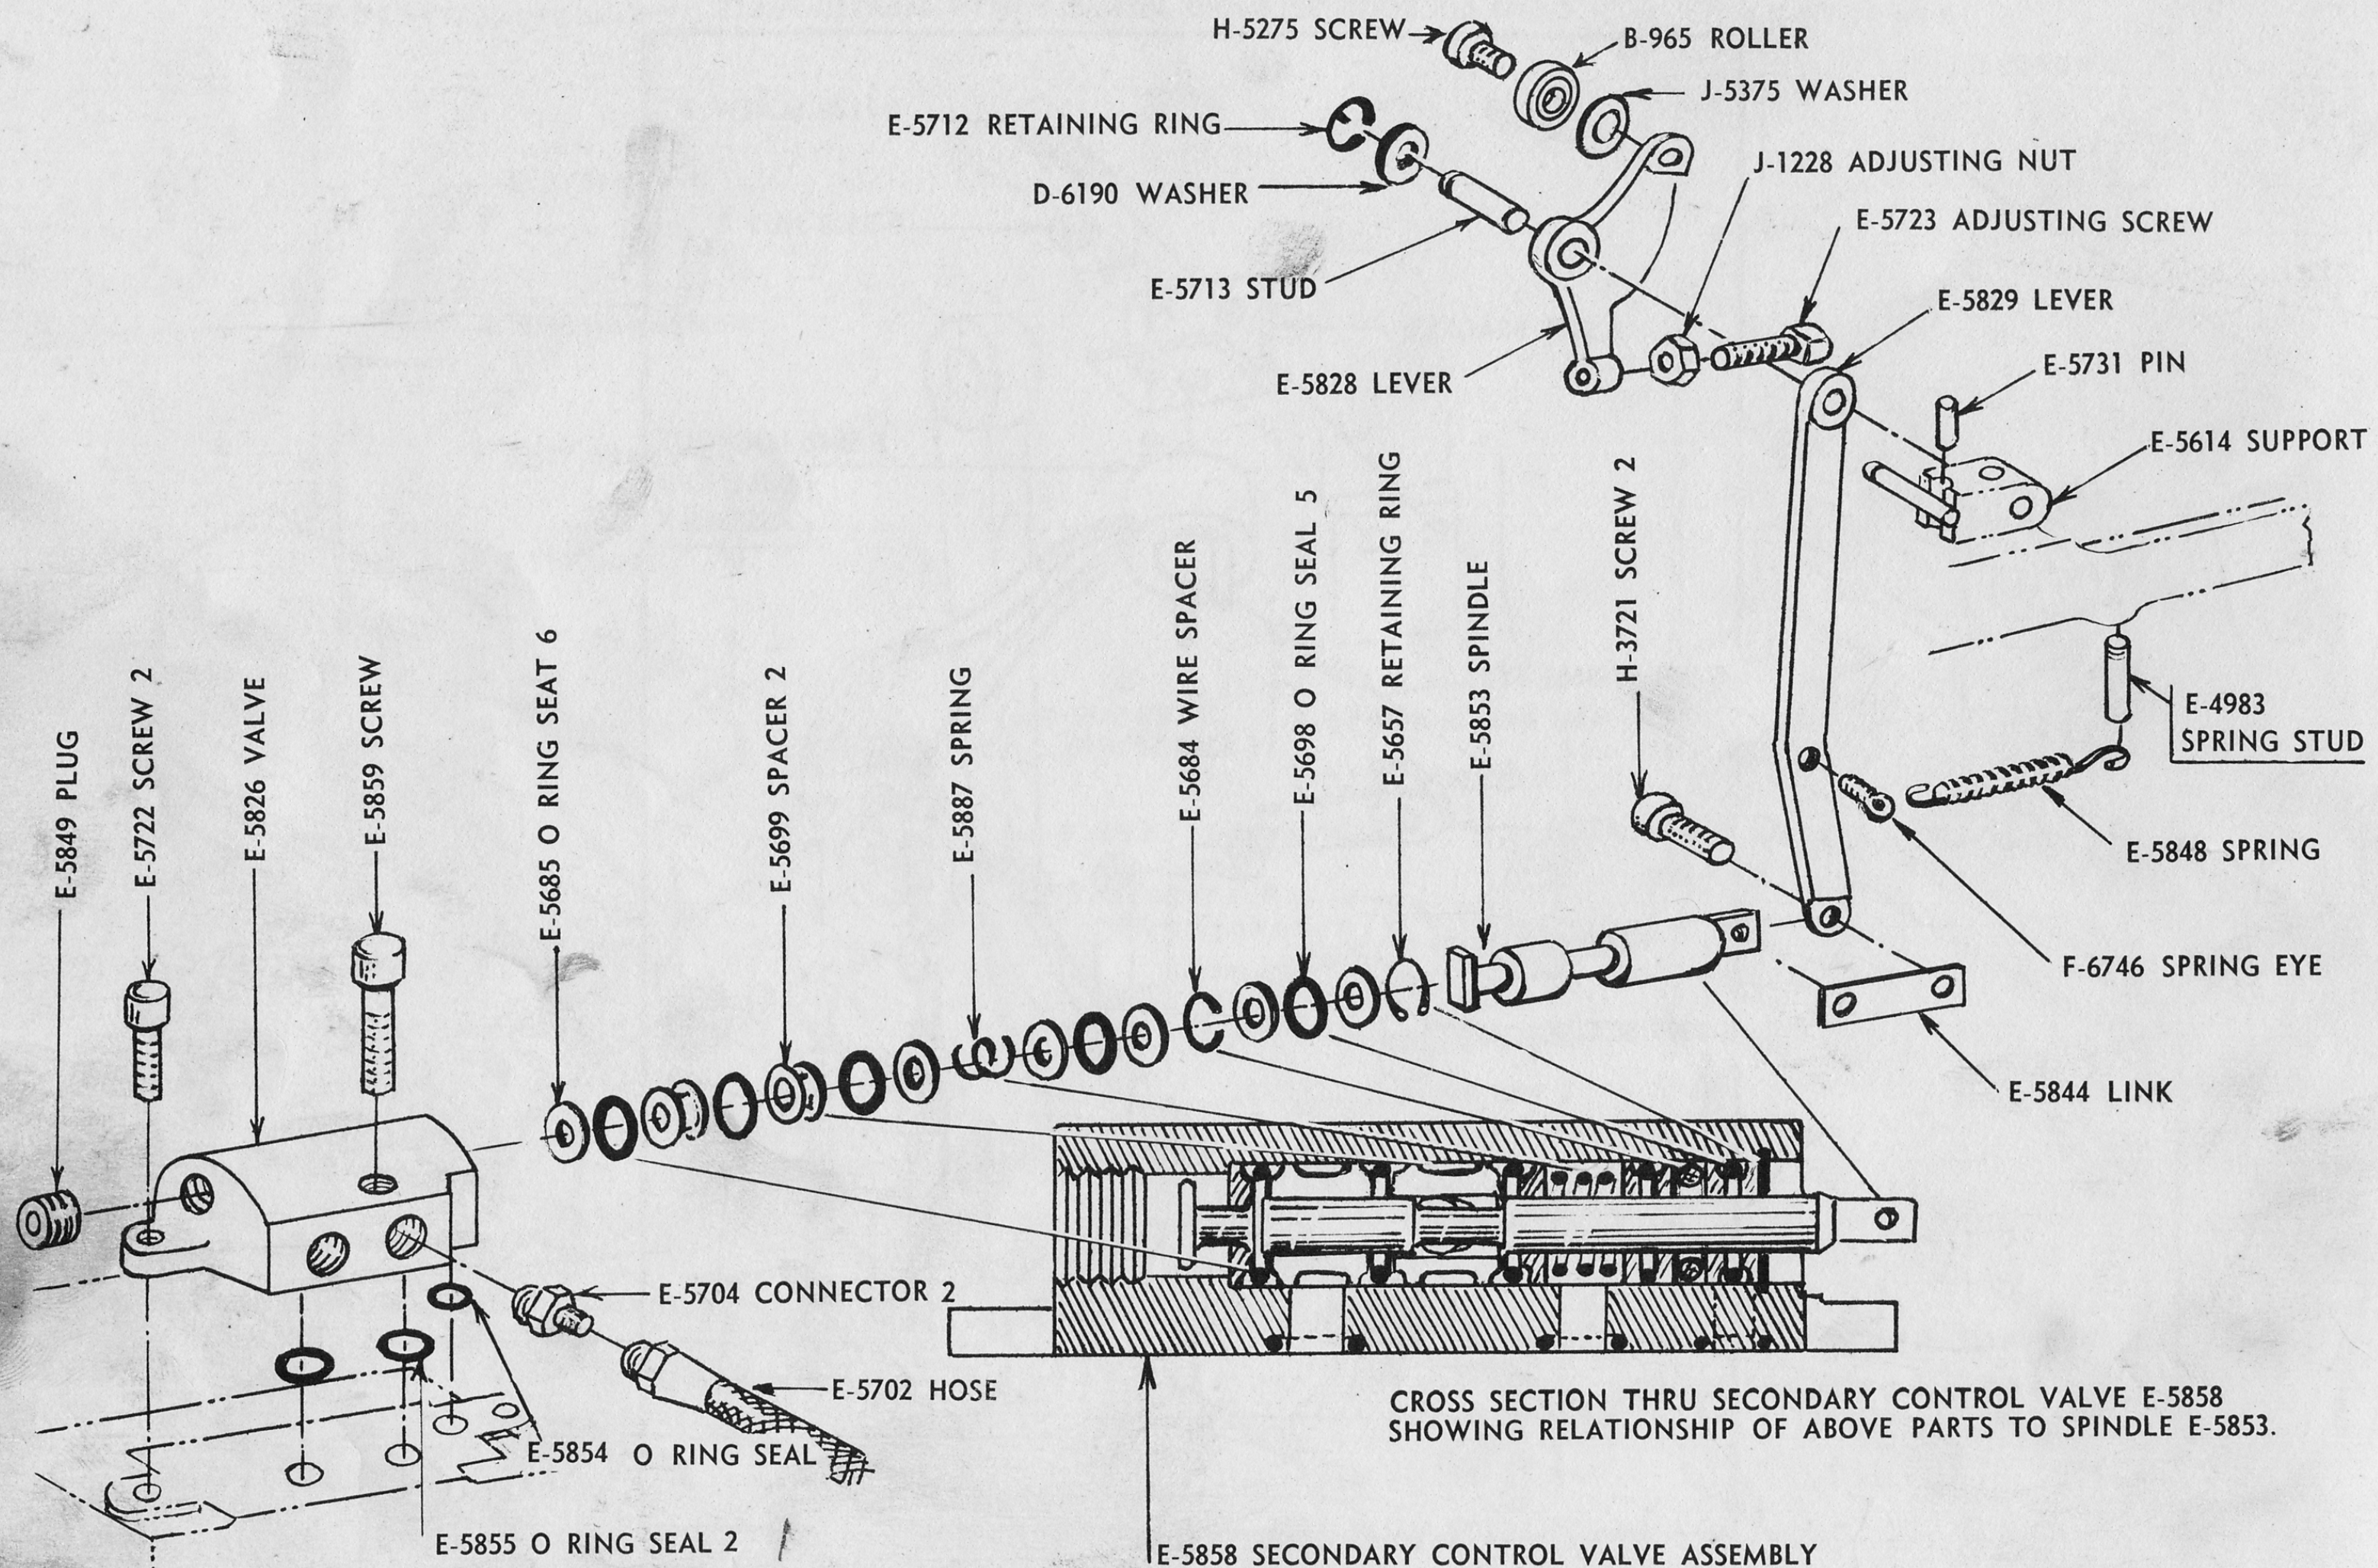

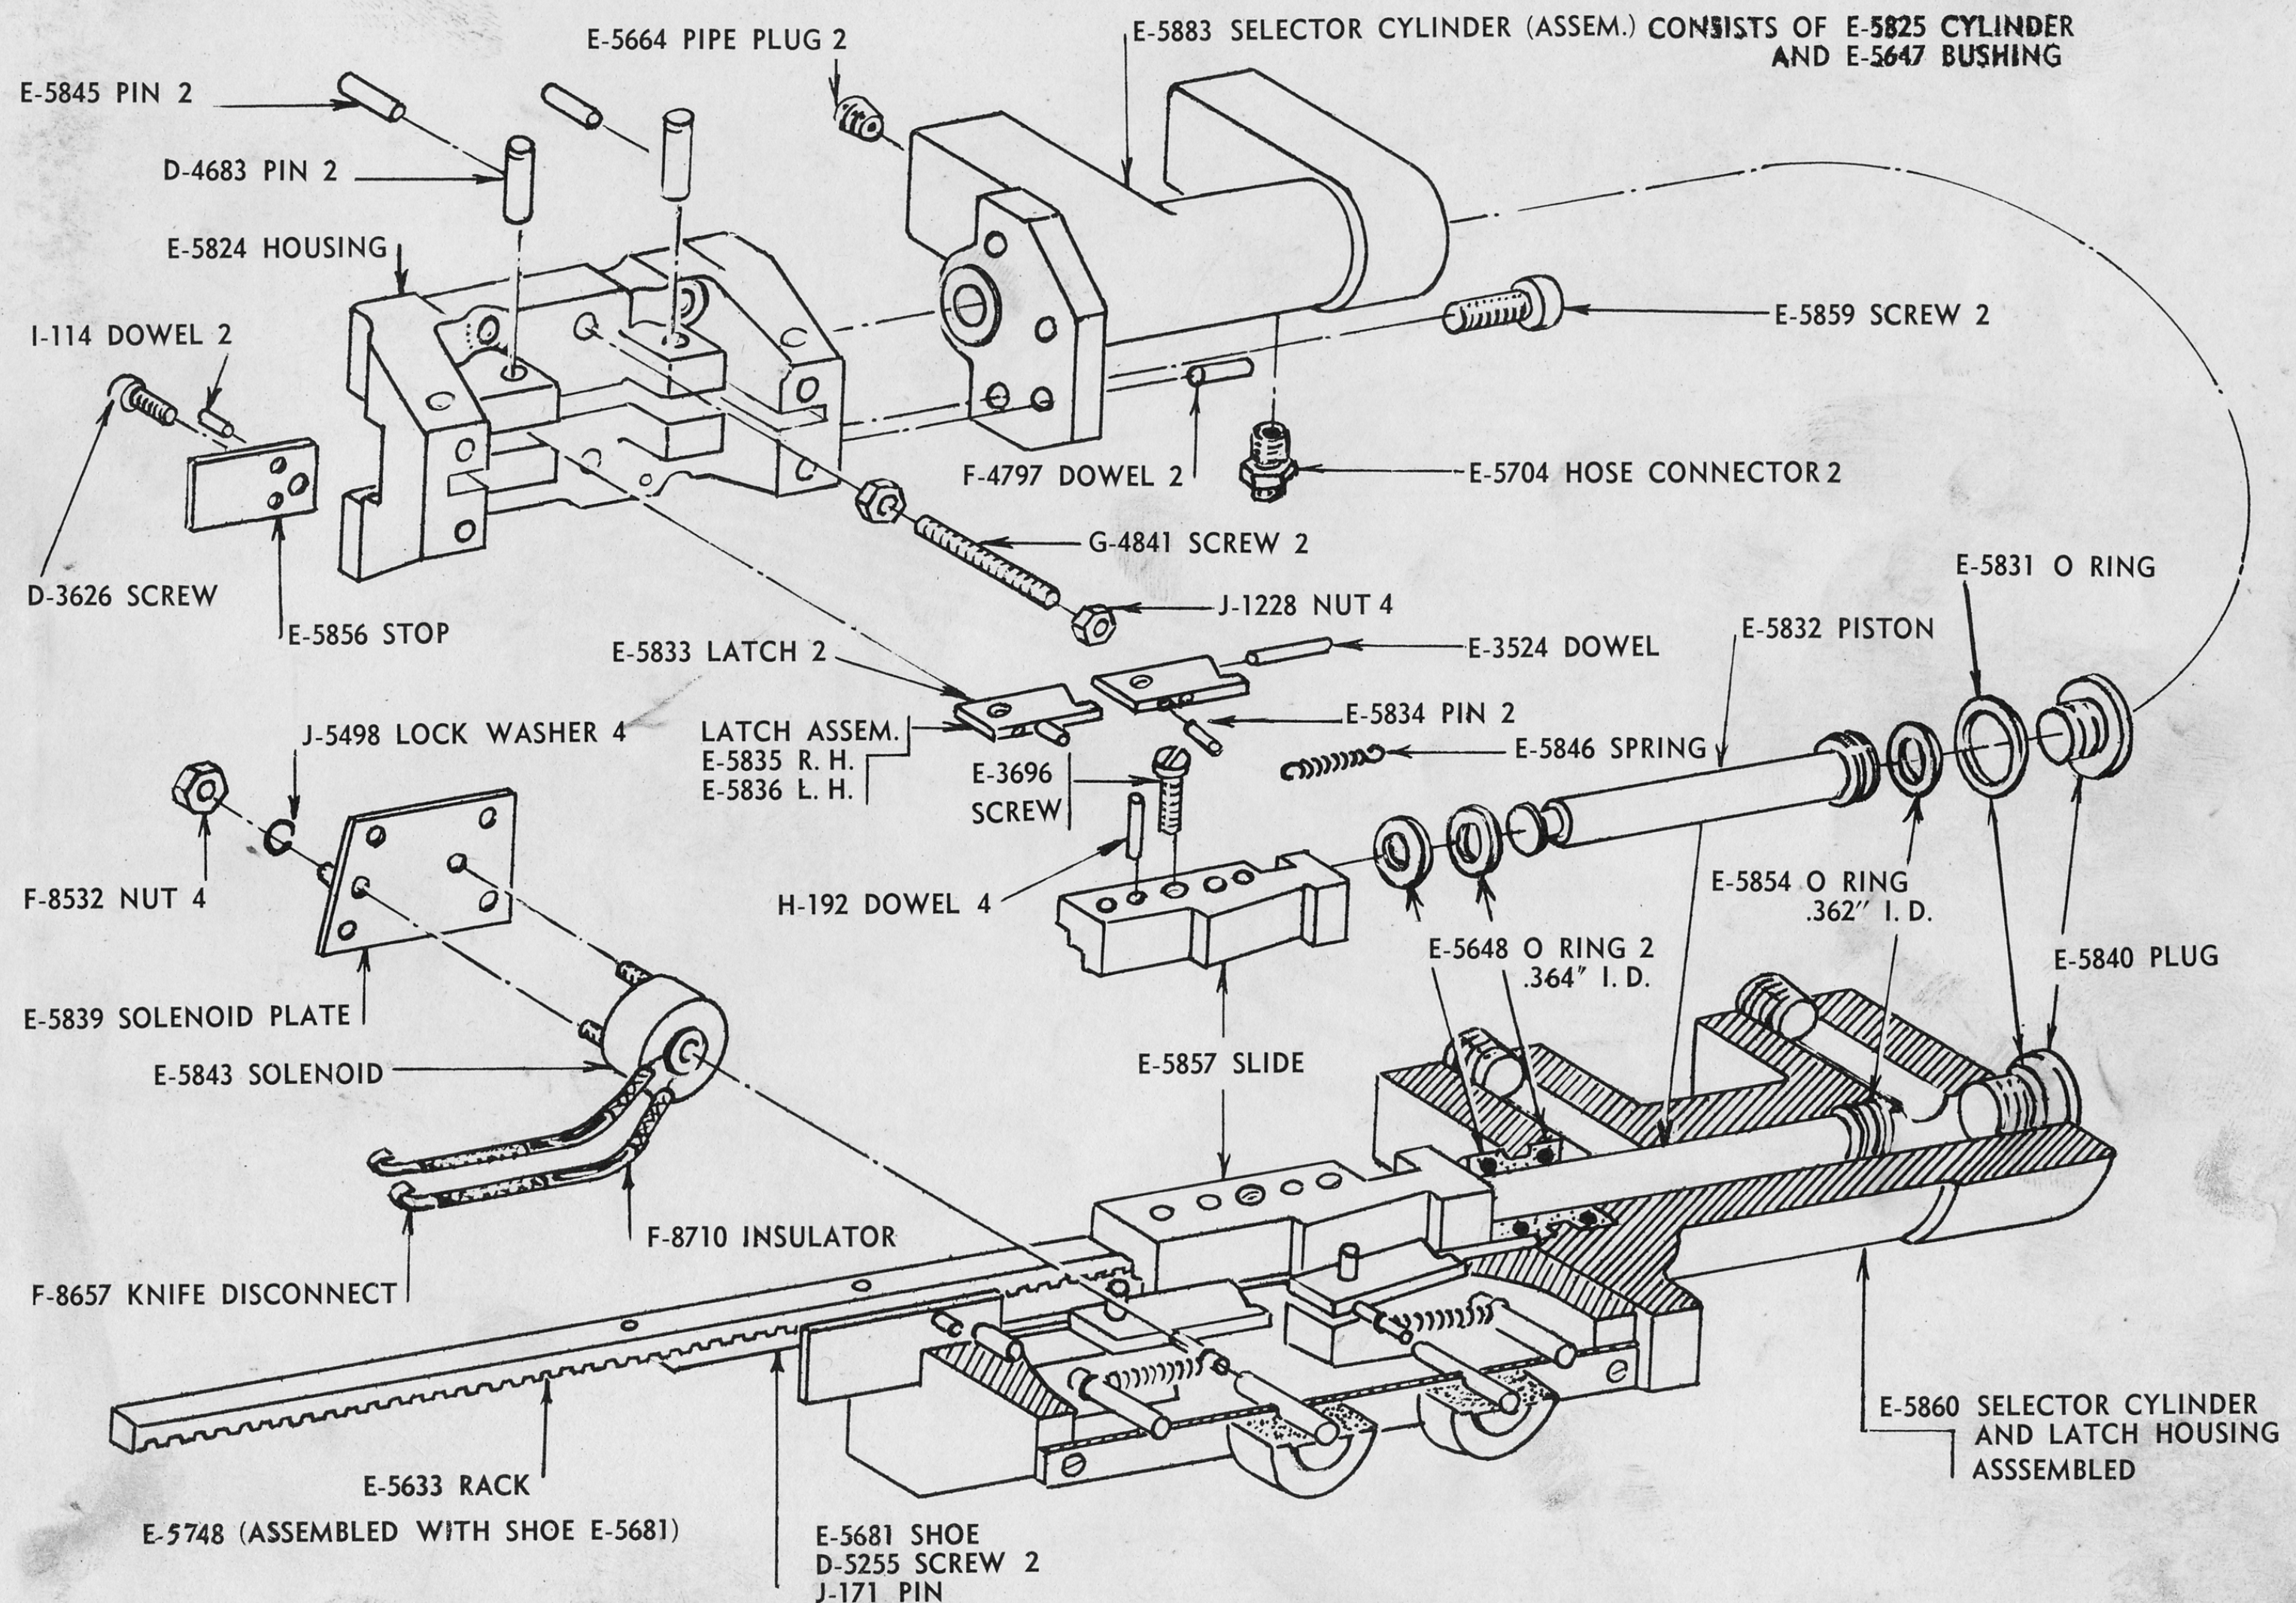


Selector Cylinder and Latch Housing

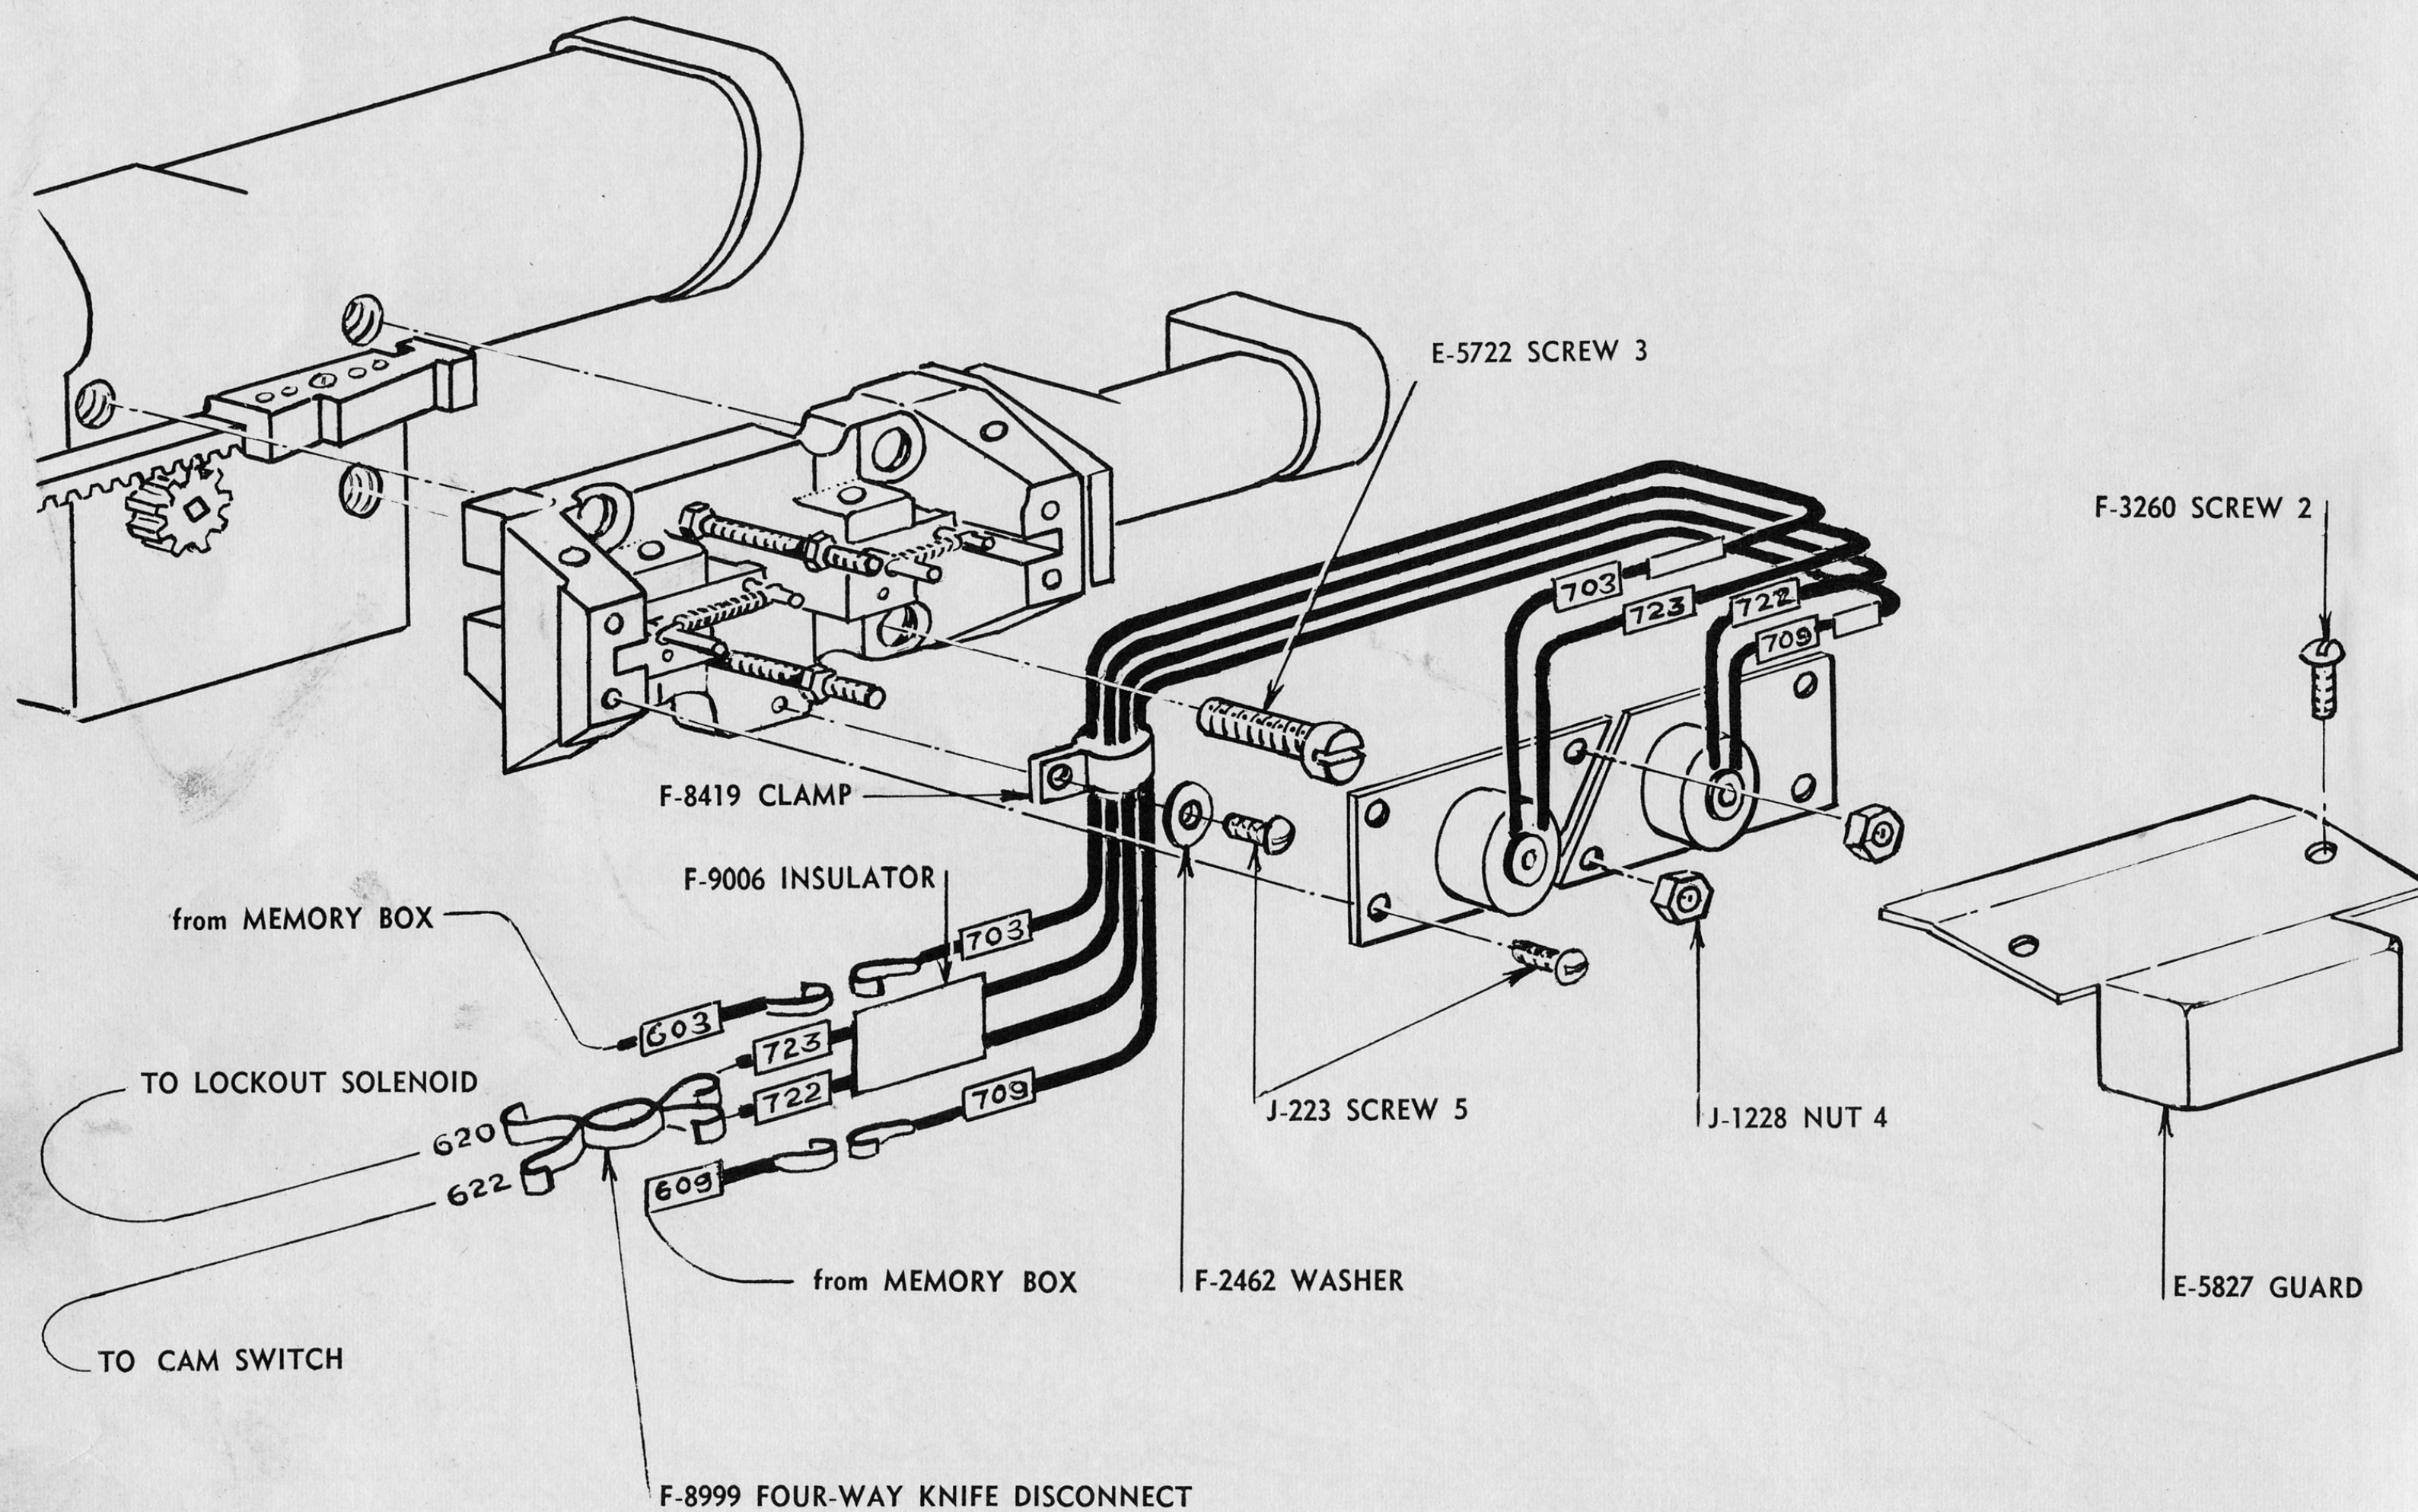 


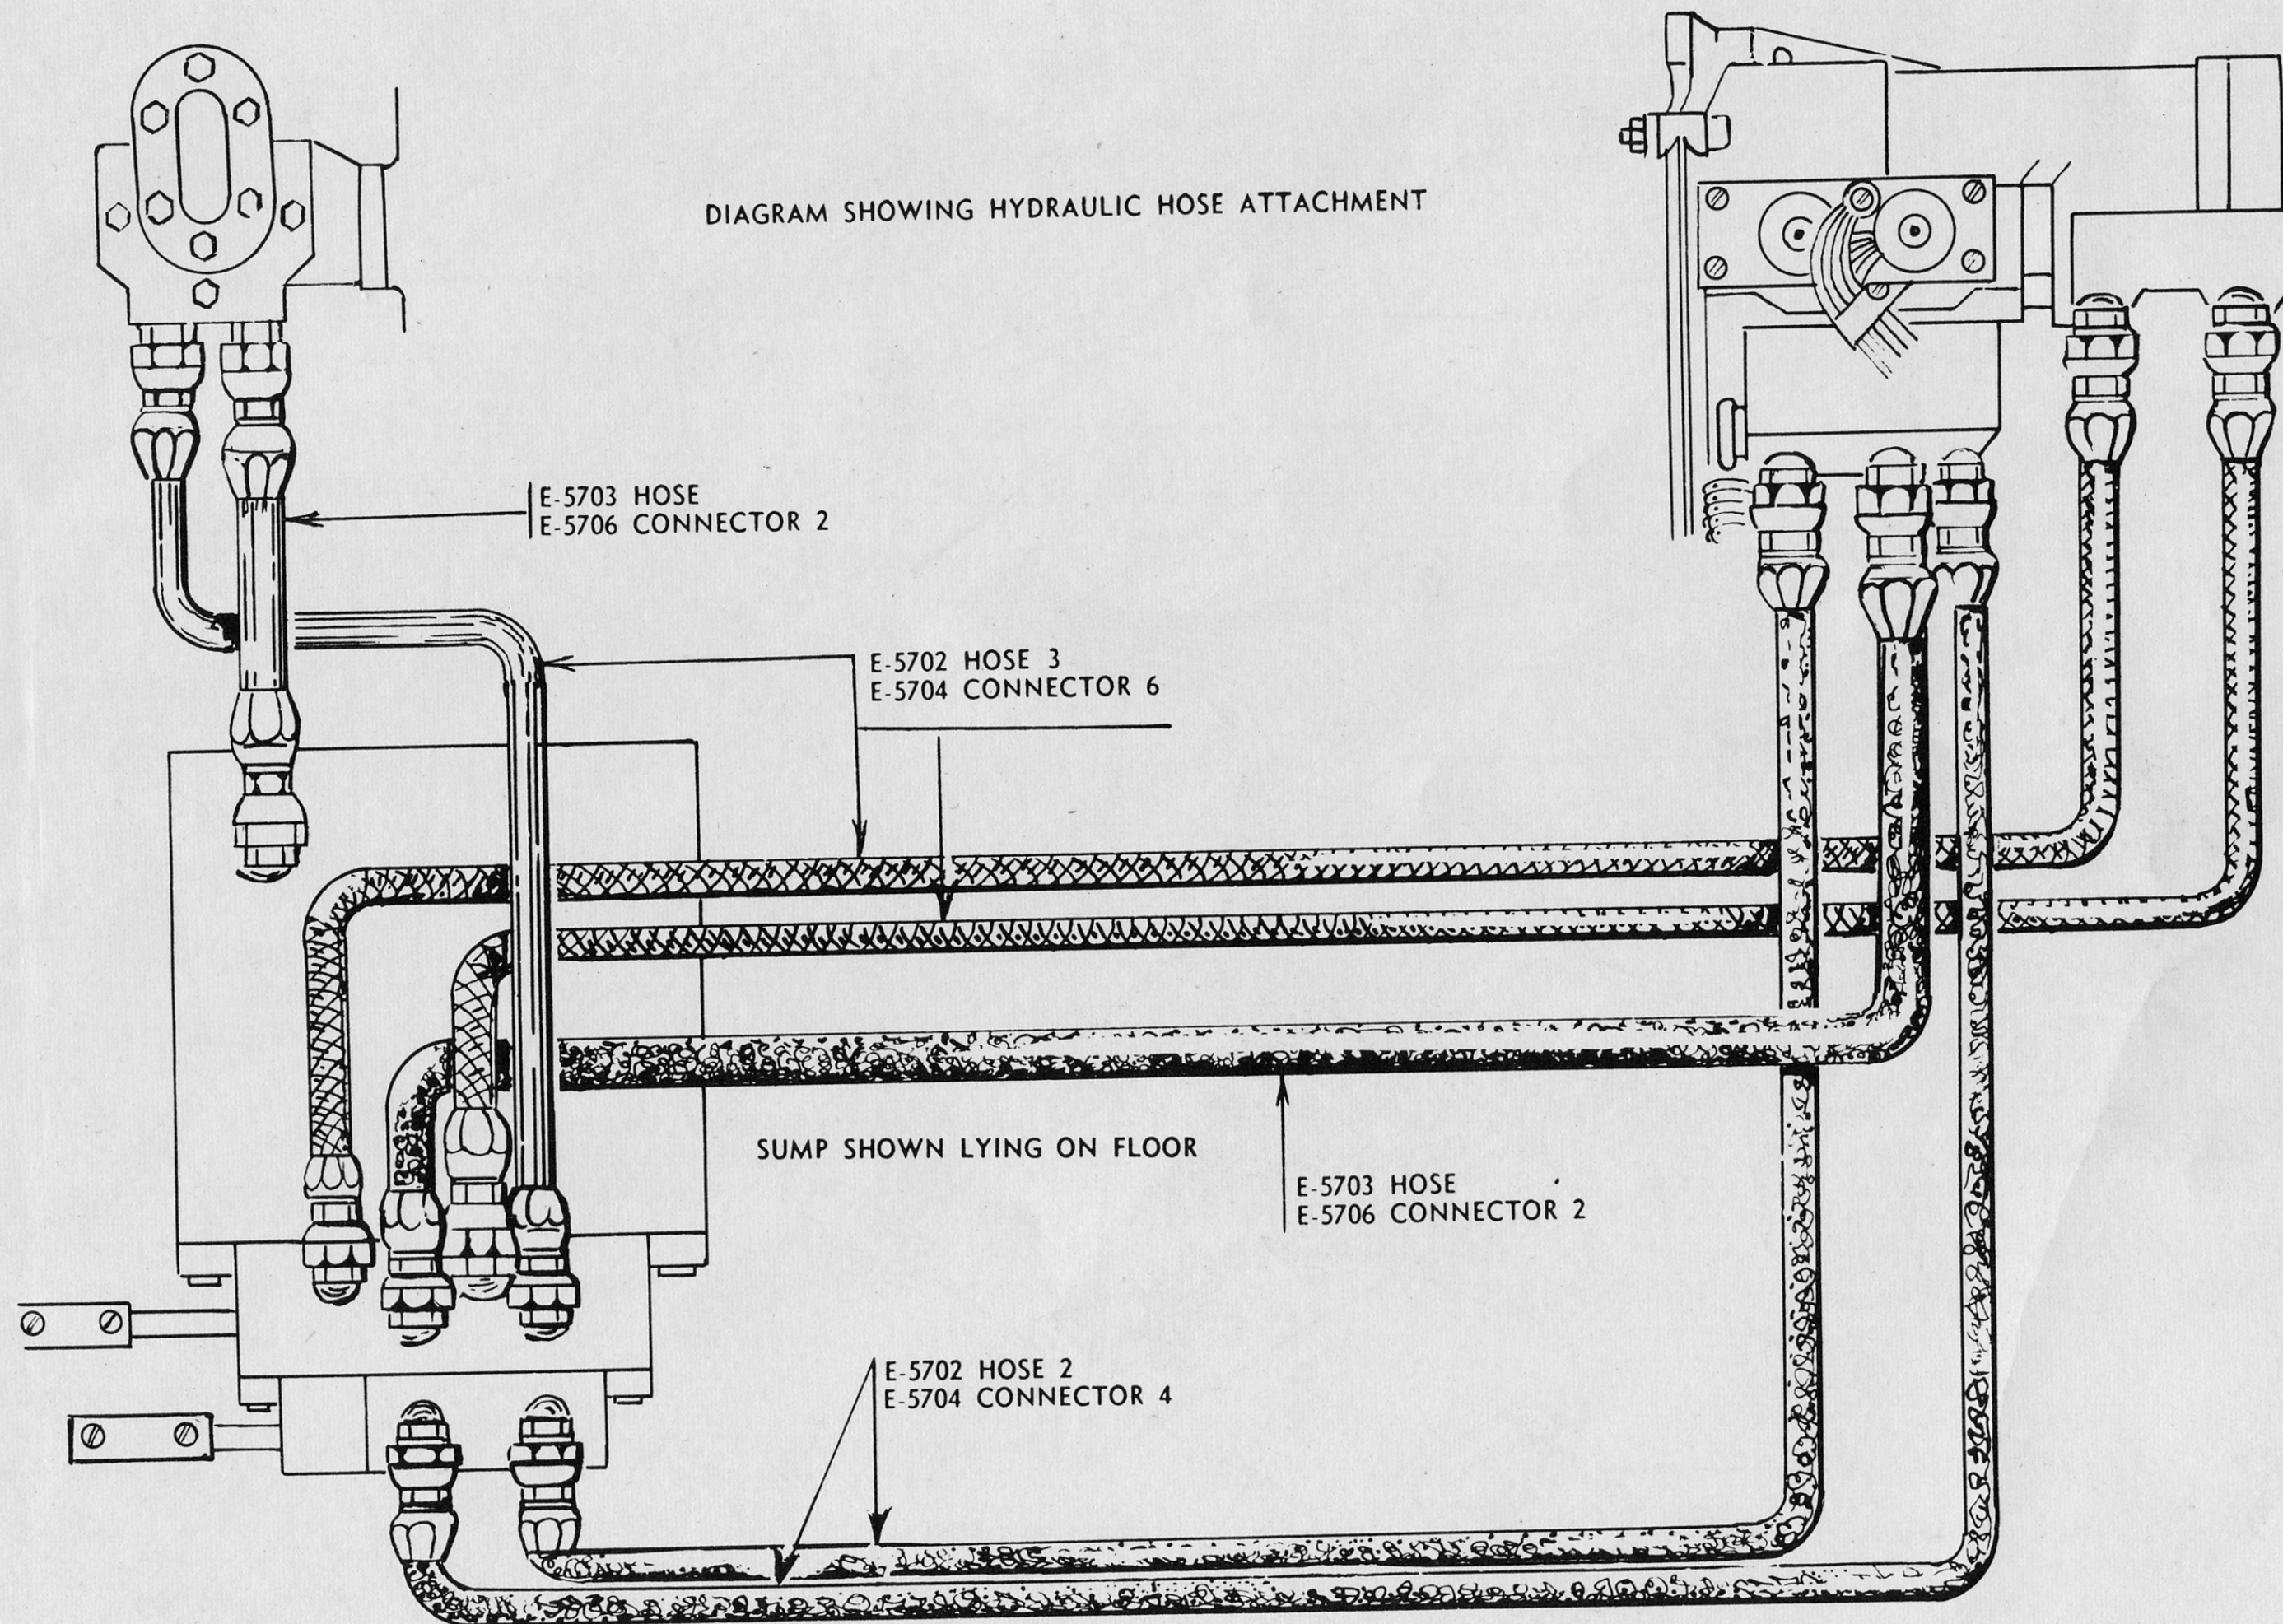 


Memory Relay Box

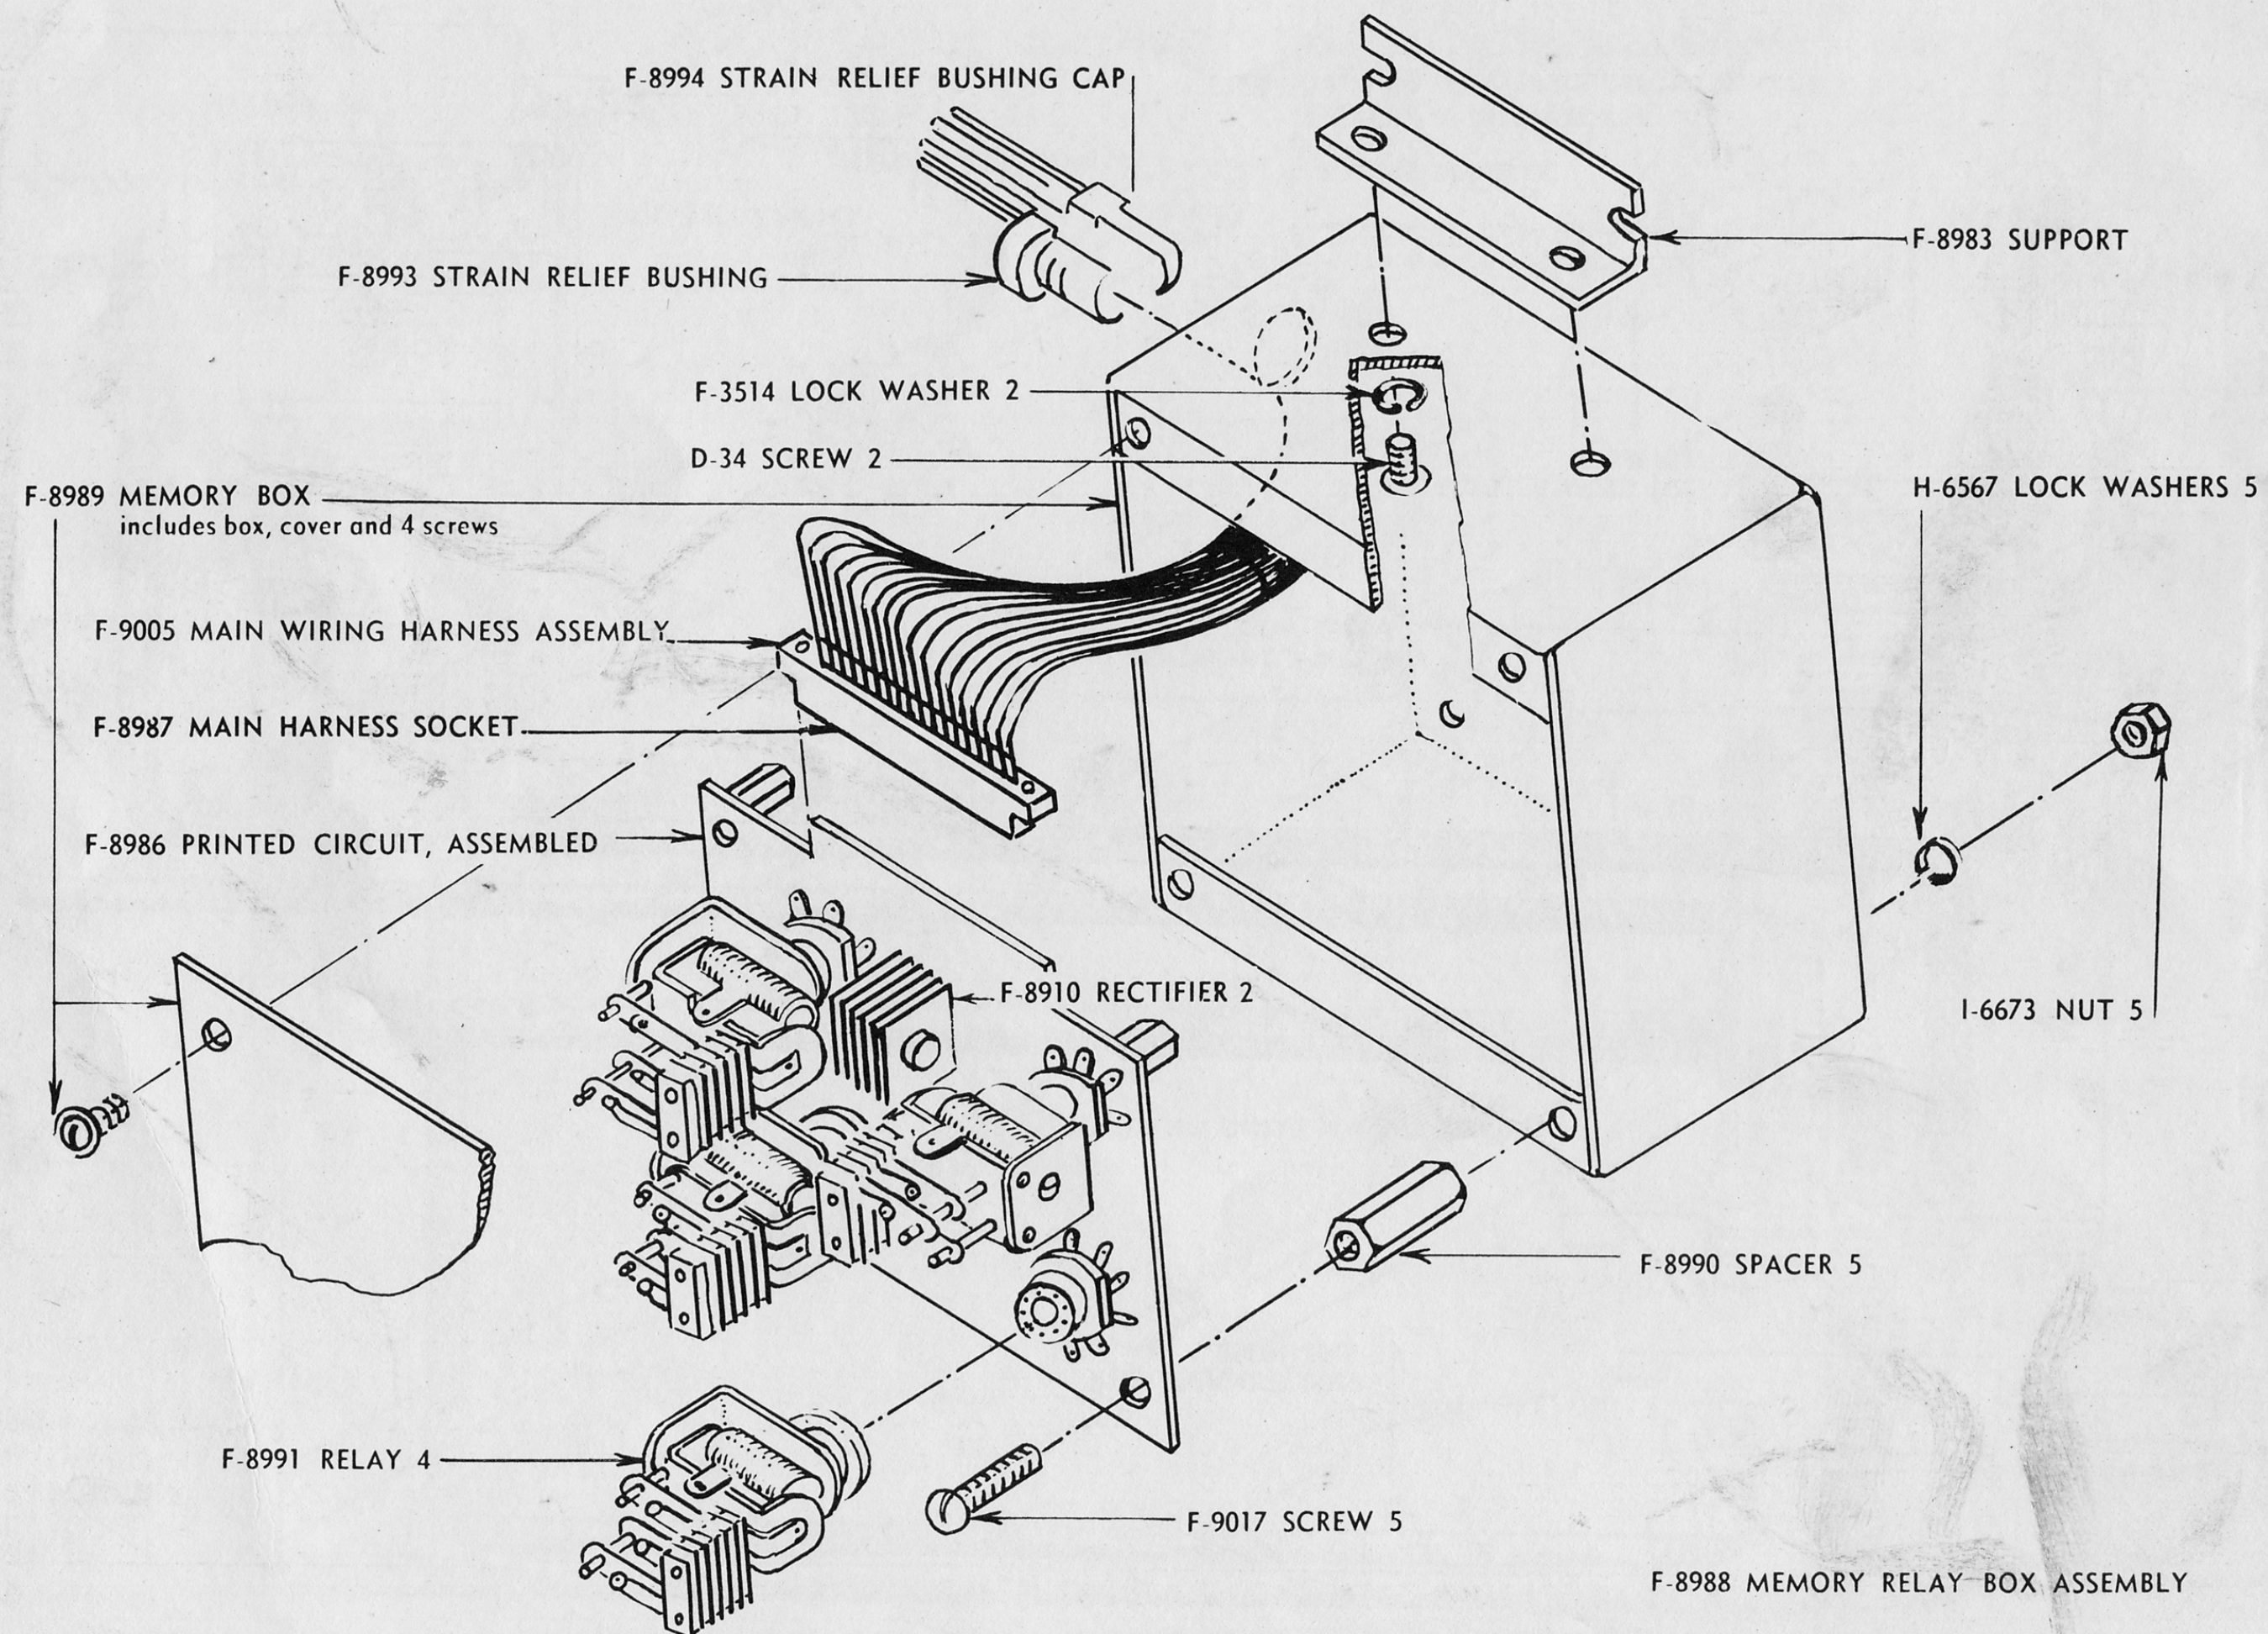 

F-8988 MEMORY RELAY BOX ASSEMBLY

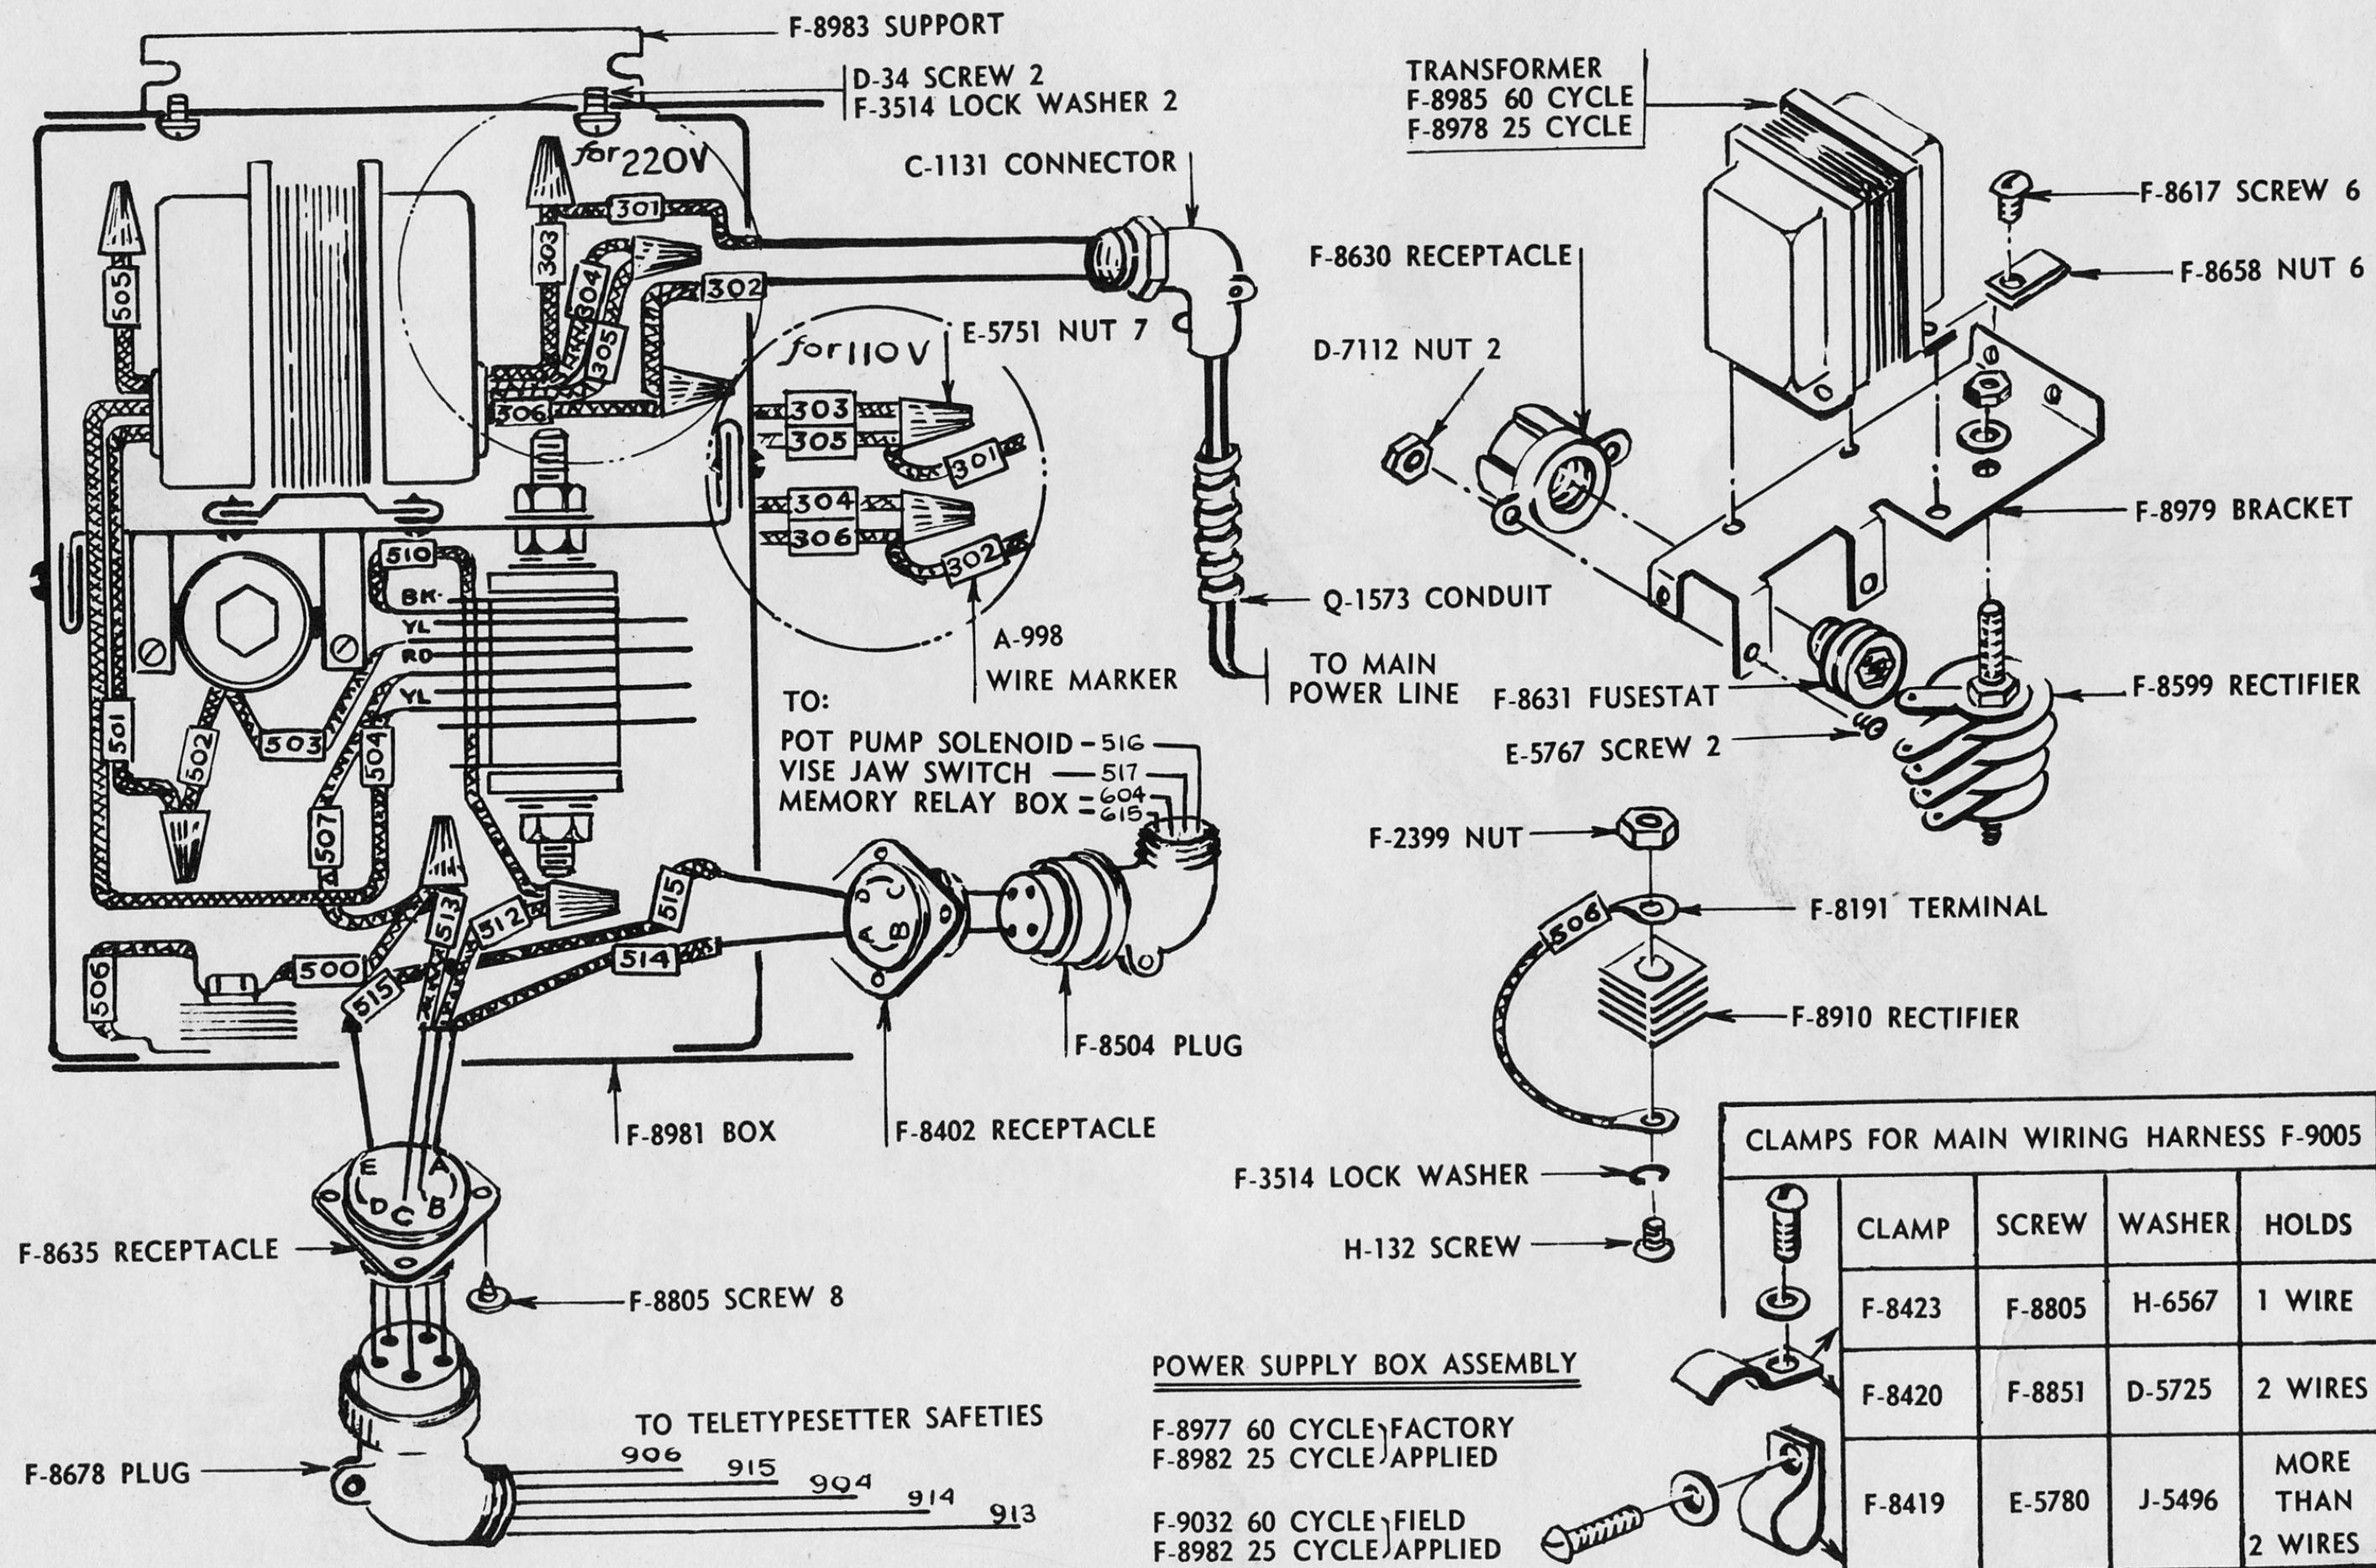 


 Memory Relay and Power Supply Box Mounting Brackets

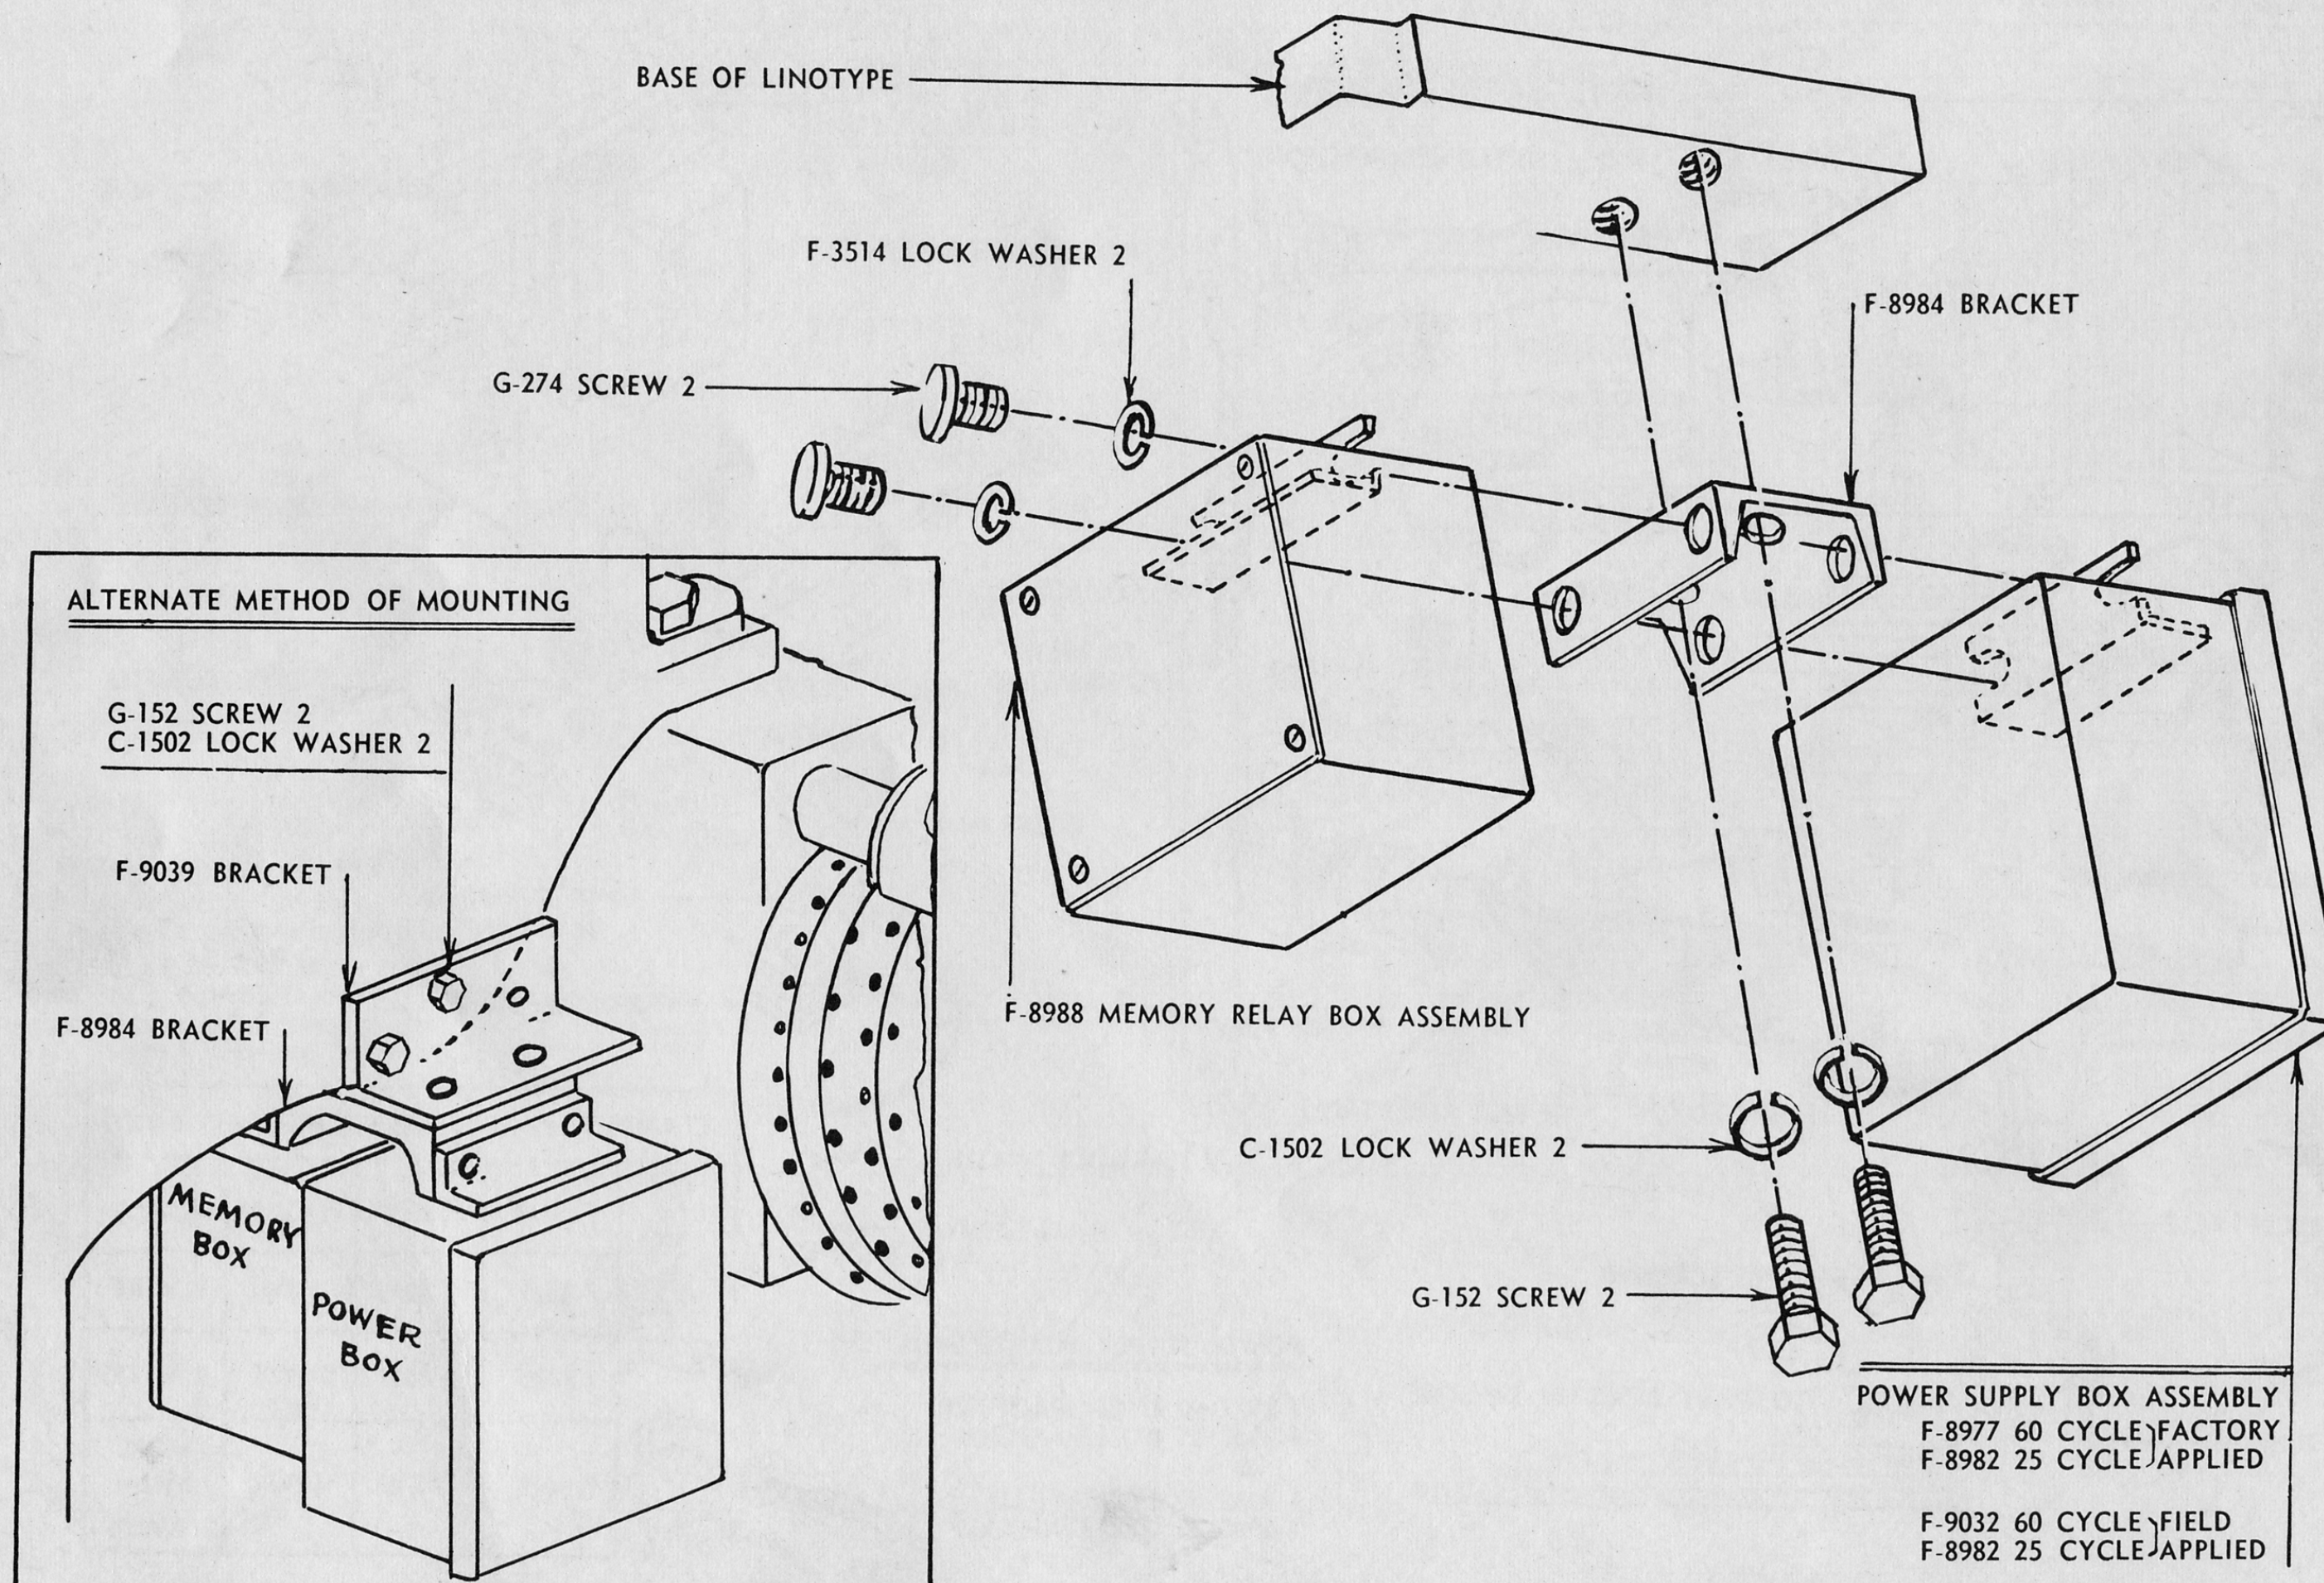



Selector Switch Box

 33

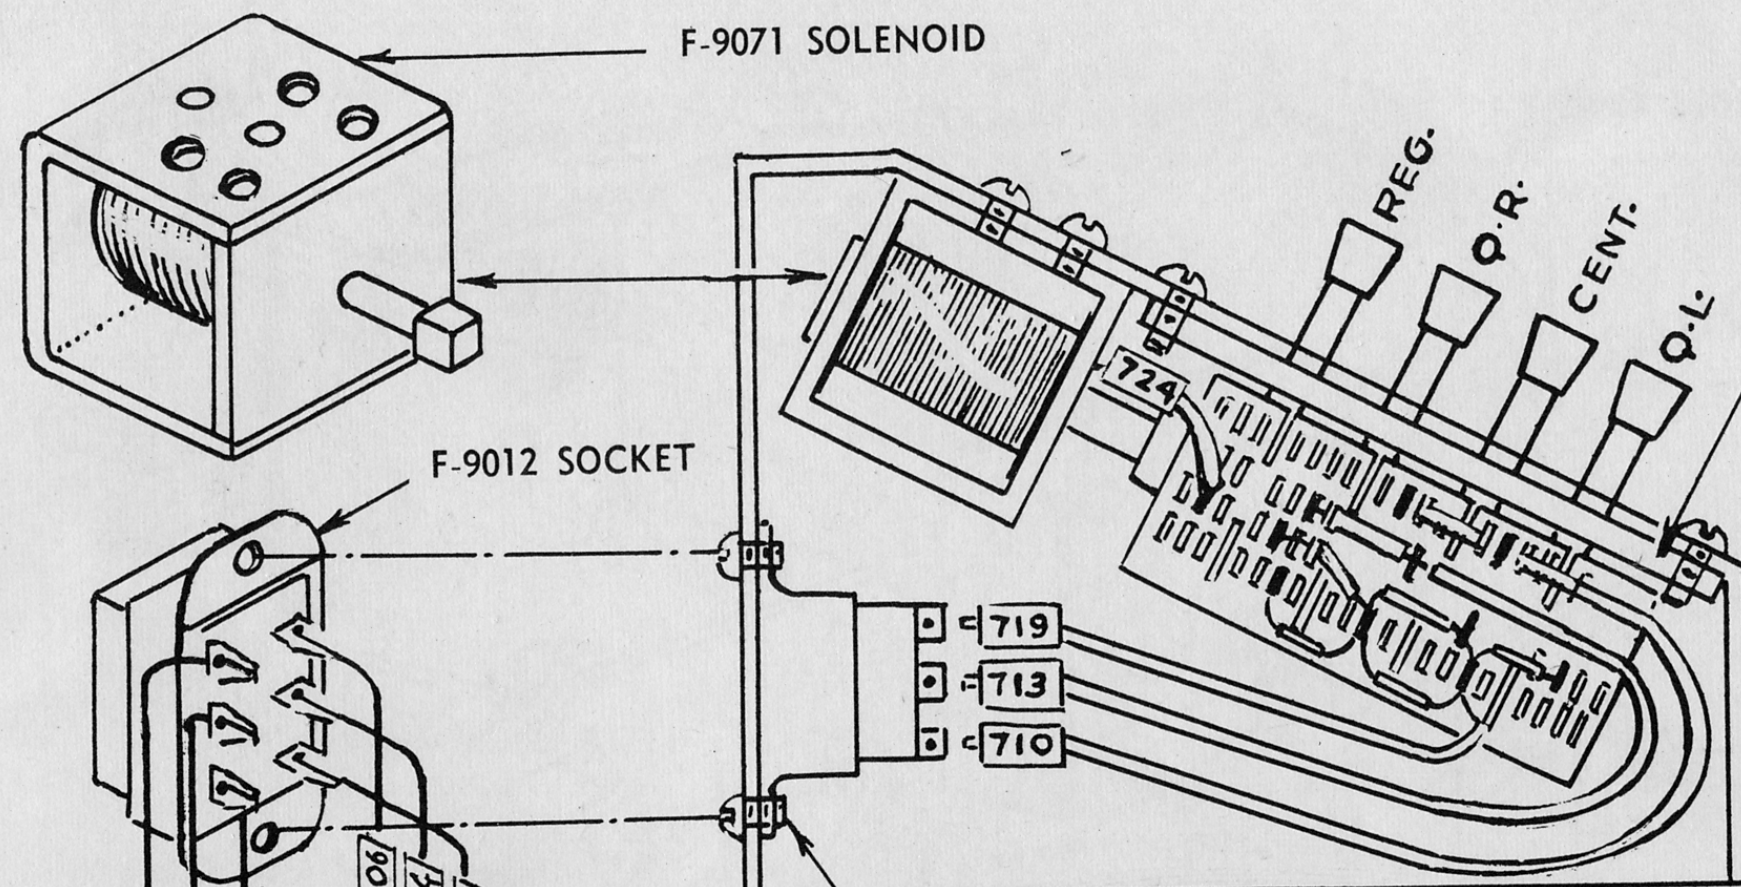

F-9070 SWITCH

  for USE WITH STANDARD KEYBOARD

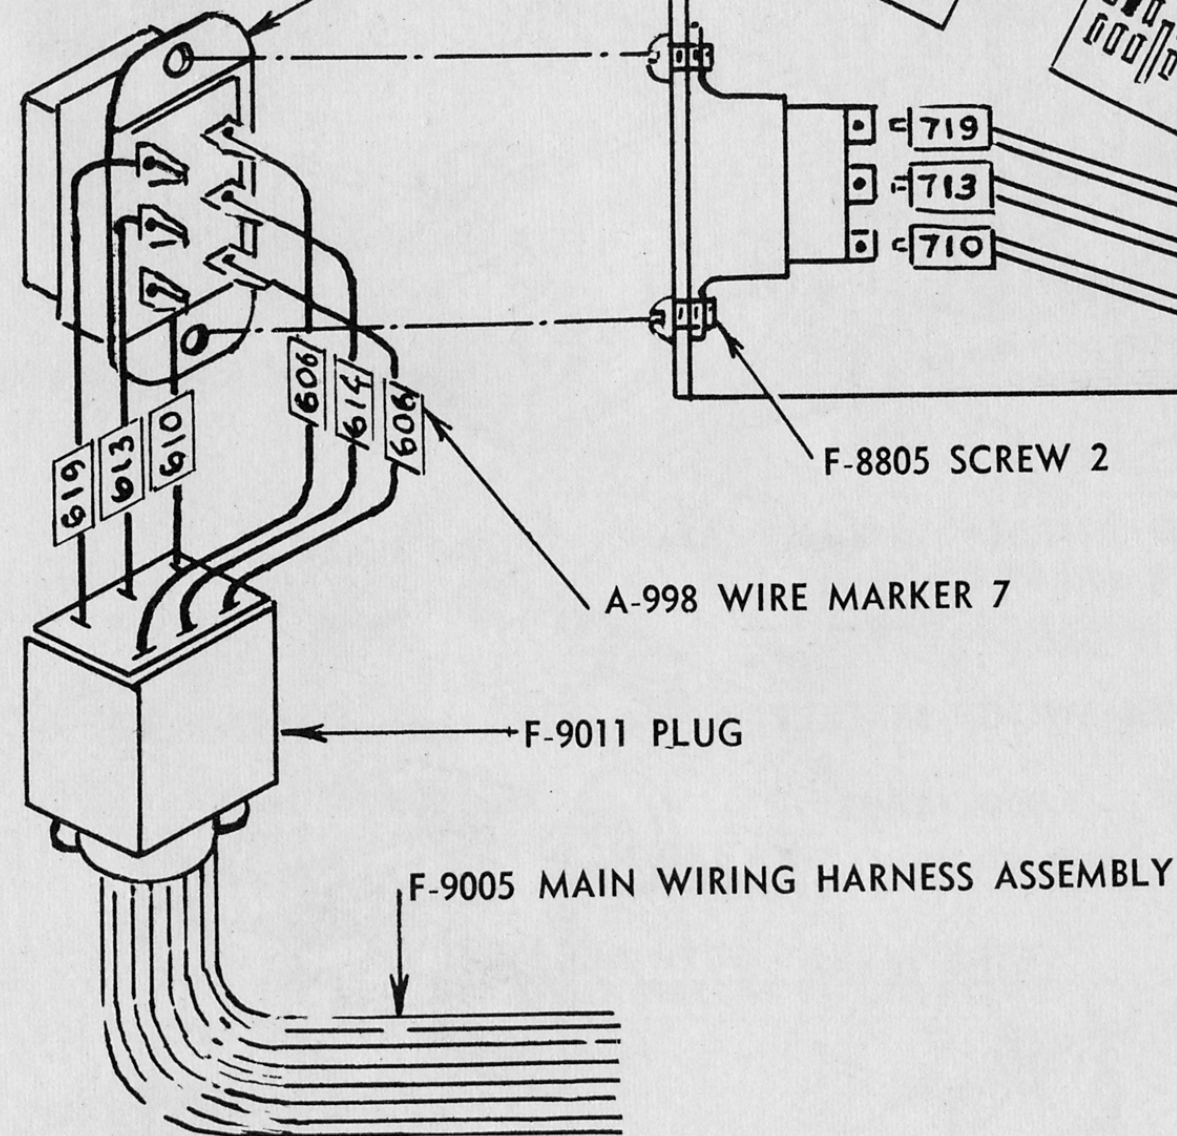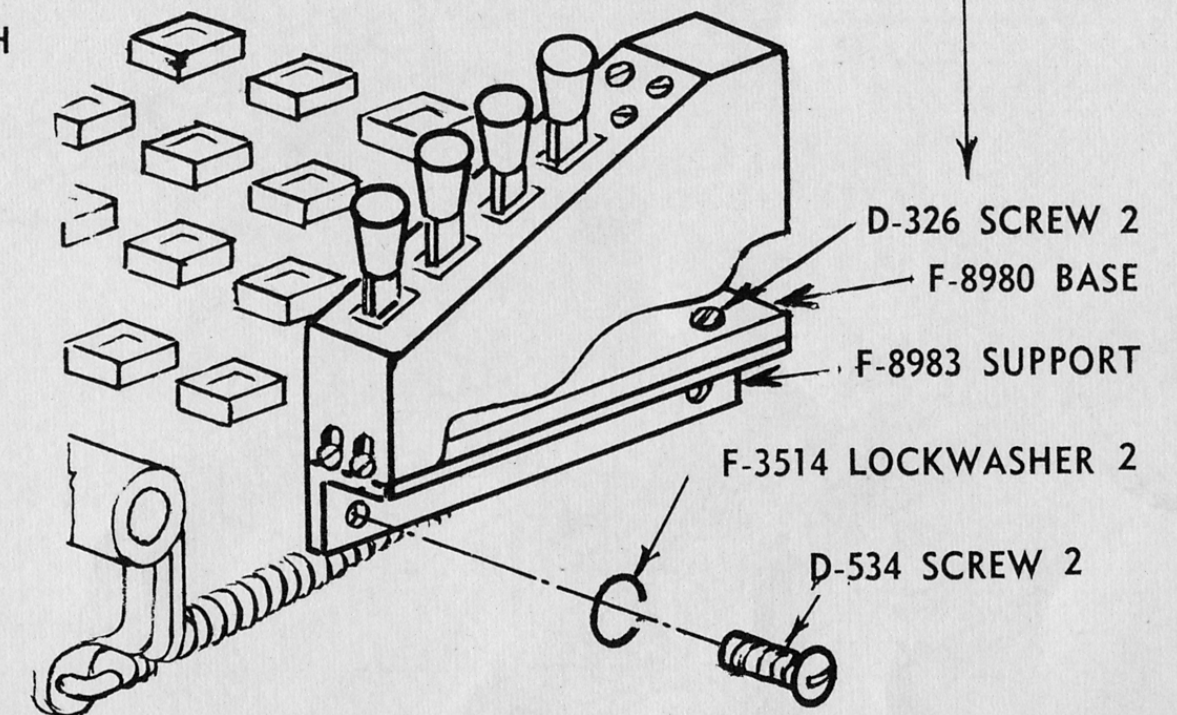


A-998 WIRE MARKER 7

F-9011 PLUG

F-9005 MAIN WIRING HARNESS ASSEMBLY

 F-8995 SELECTOR SWITCH BOX ASSEMBLY

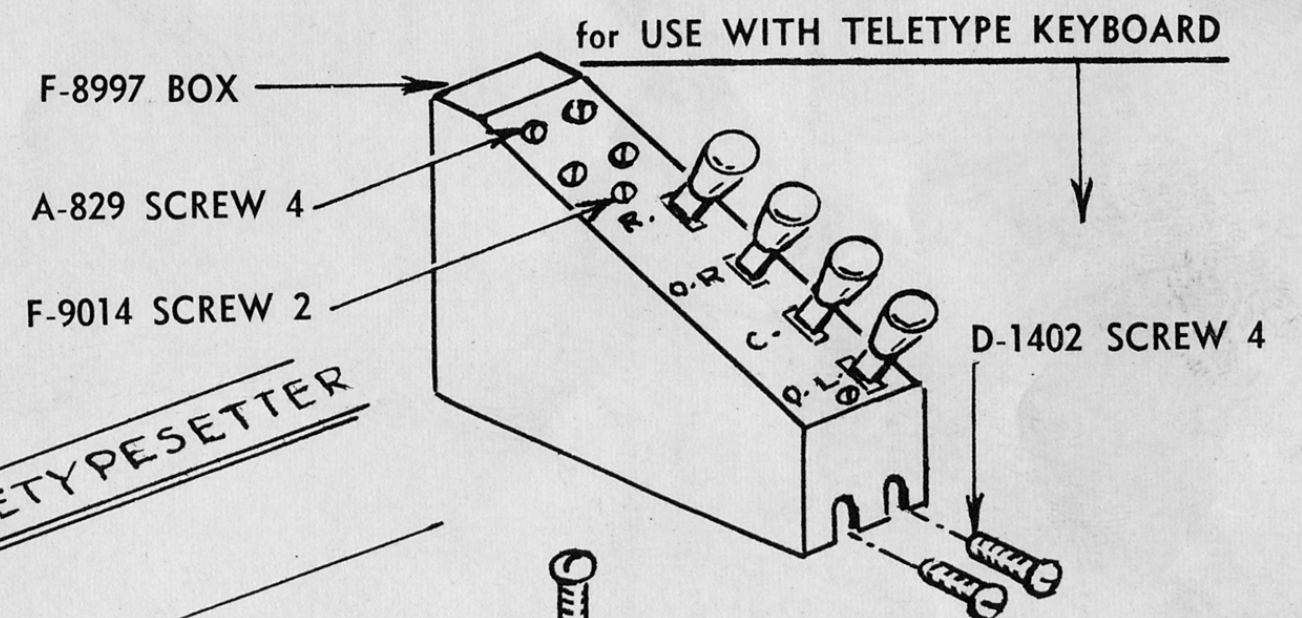


F-8997 BOX

A-829 SCREW 4

F-9014 SCREW 2


D-1402 SCREW 4

 D-326 SCREW 2


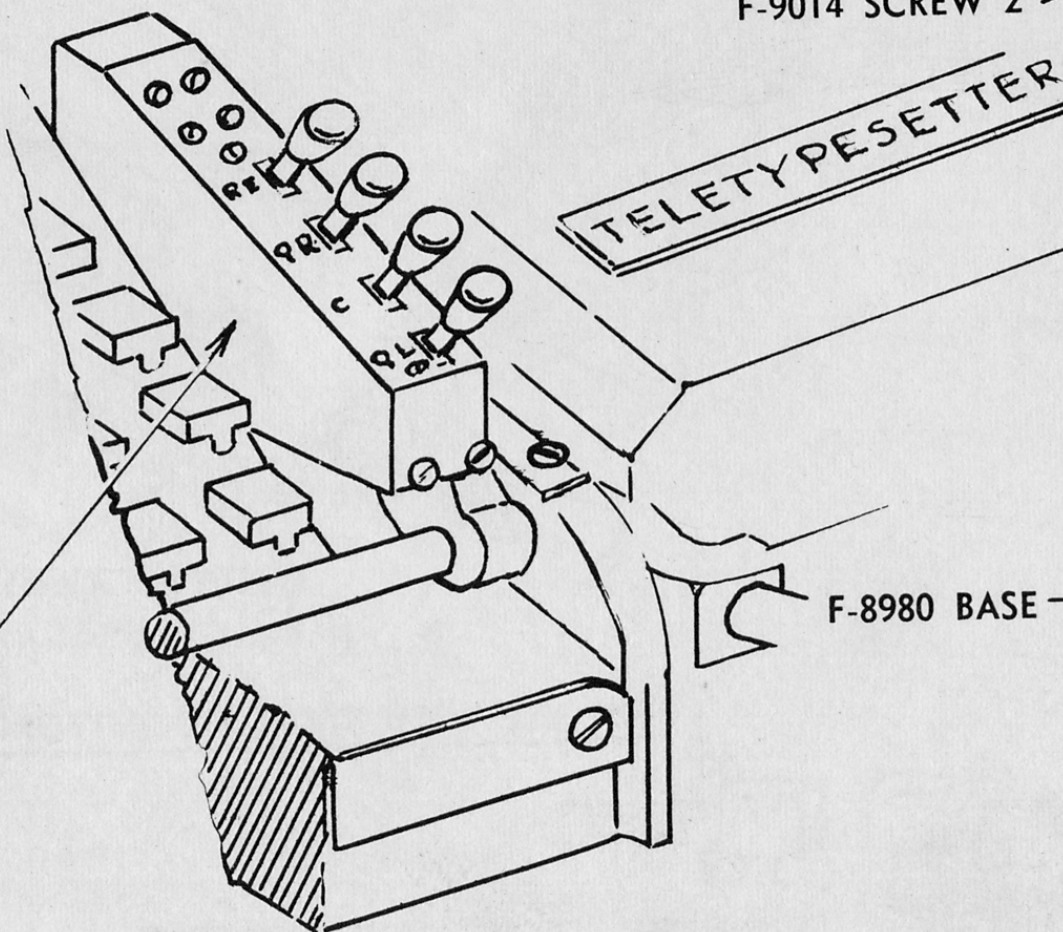


F-8980 BASE

 
Transfer Switch

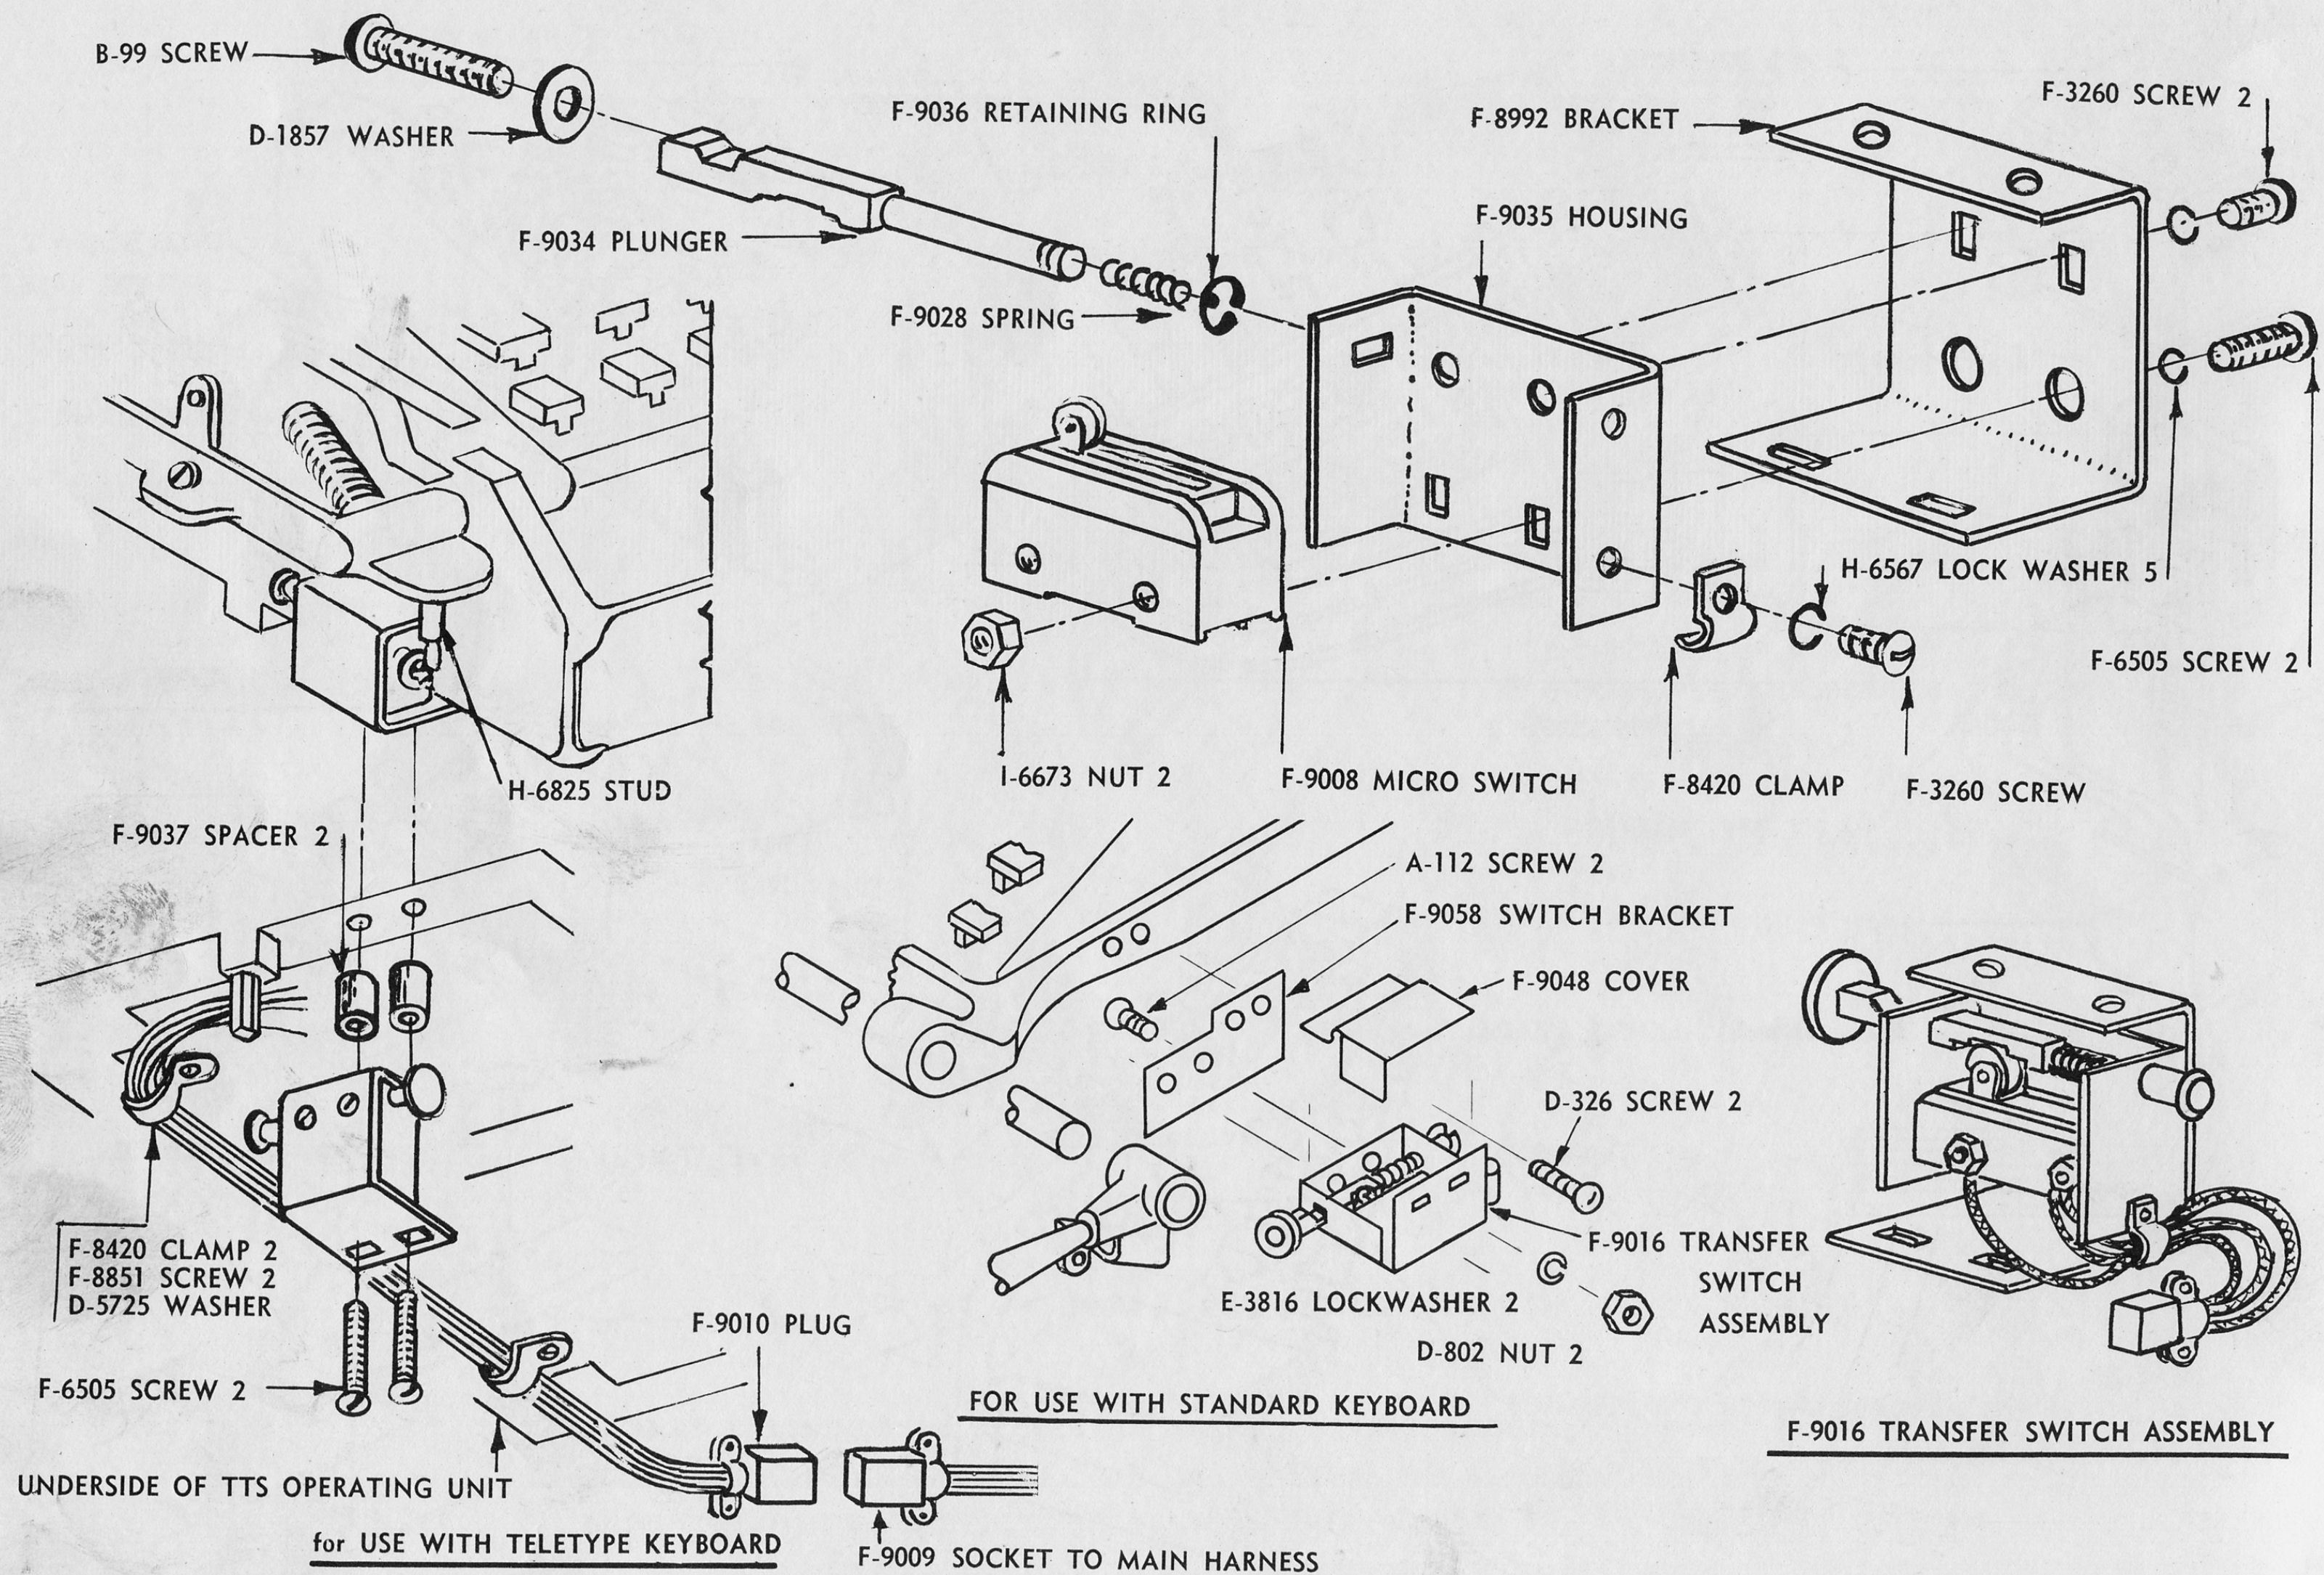


AS APPLIED TO NON MIXER MACHINES

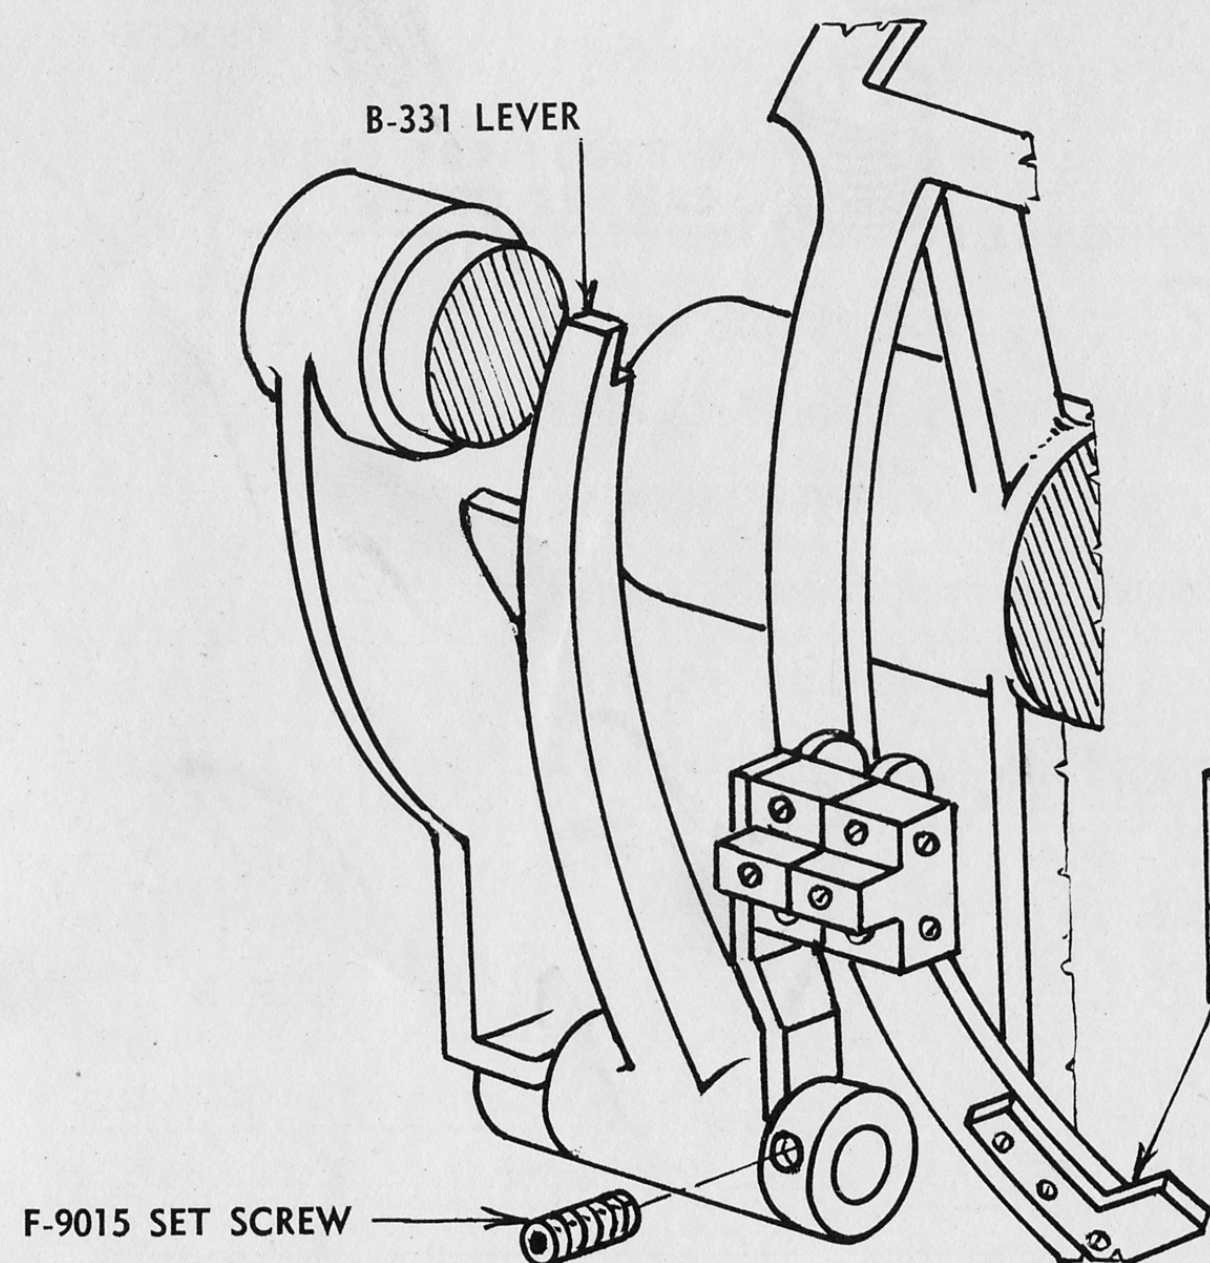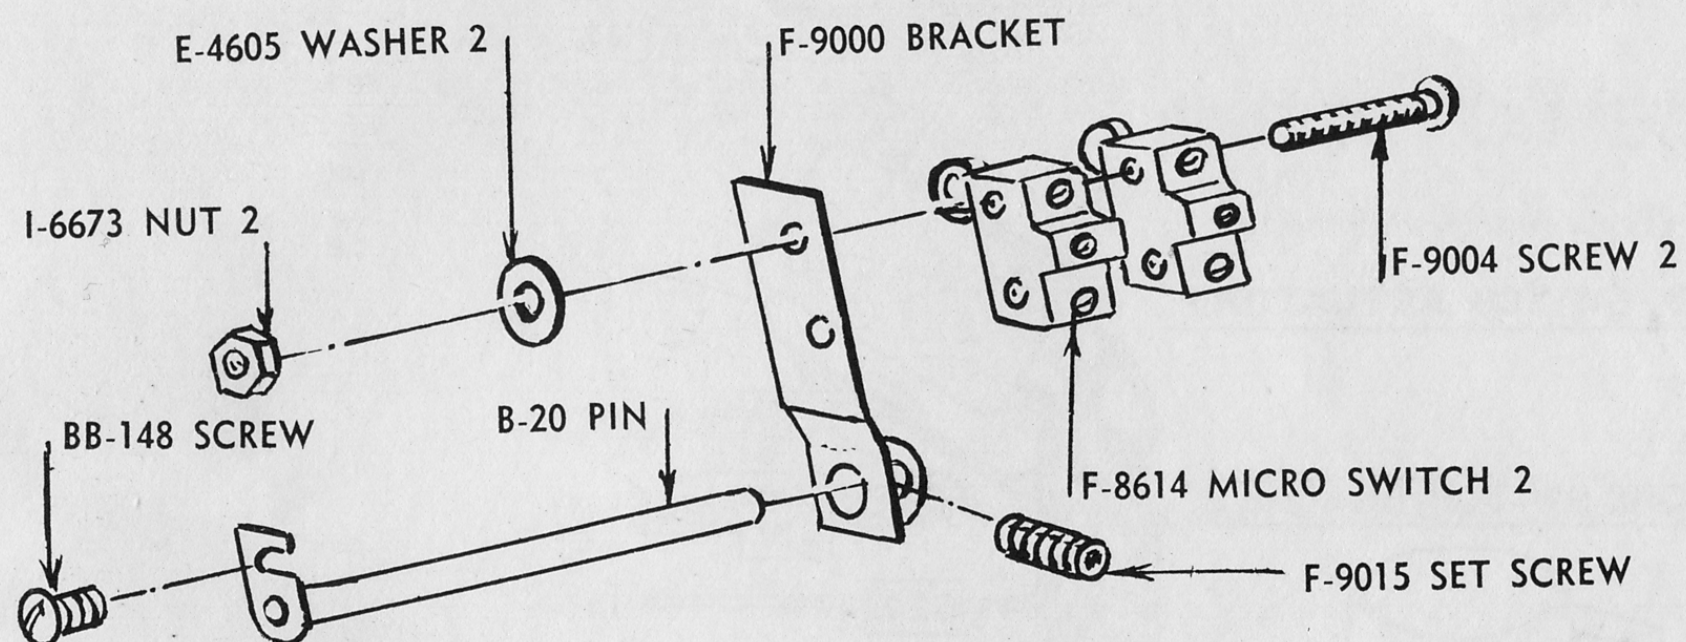  

AS APPLIED TO MIXER MACHINES

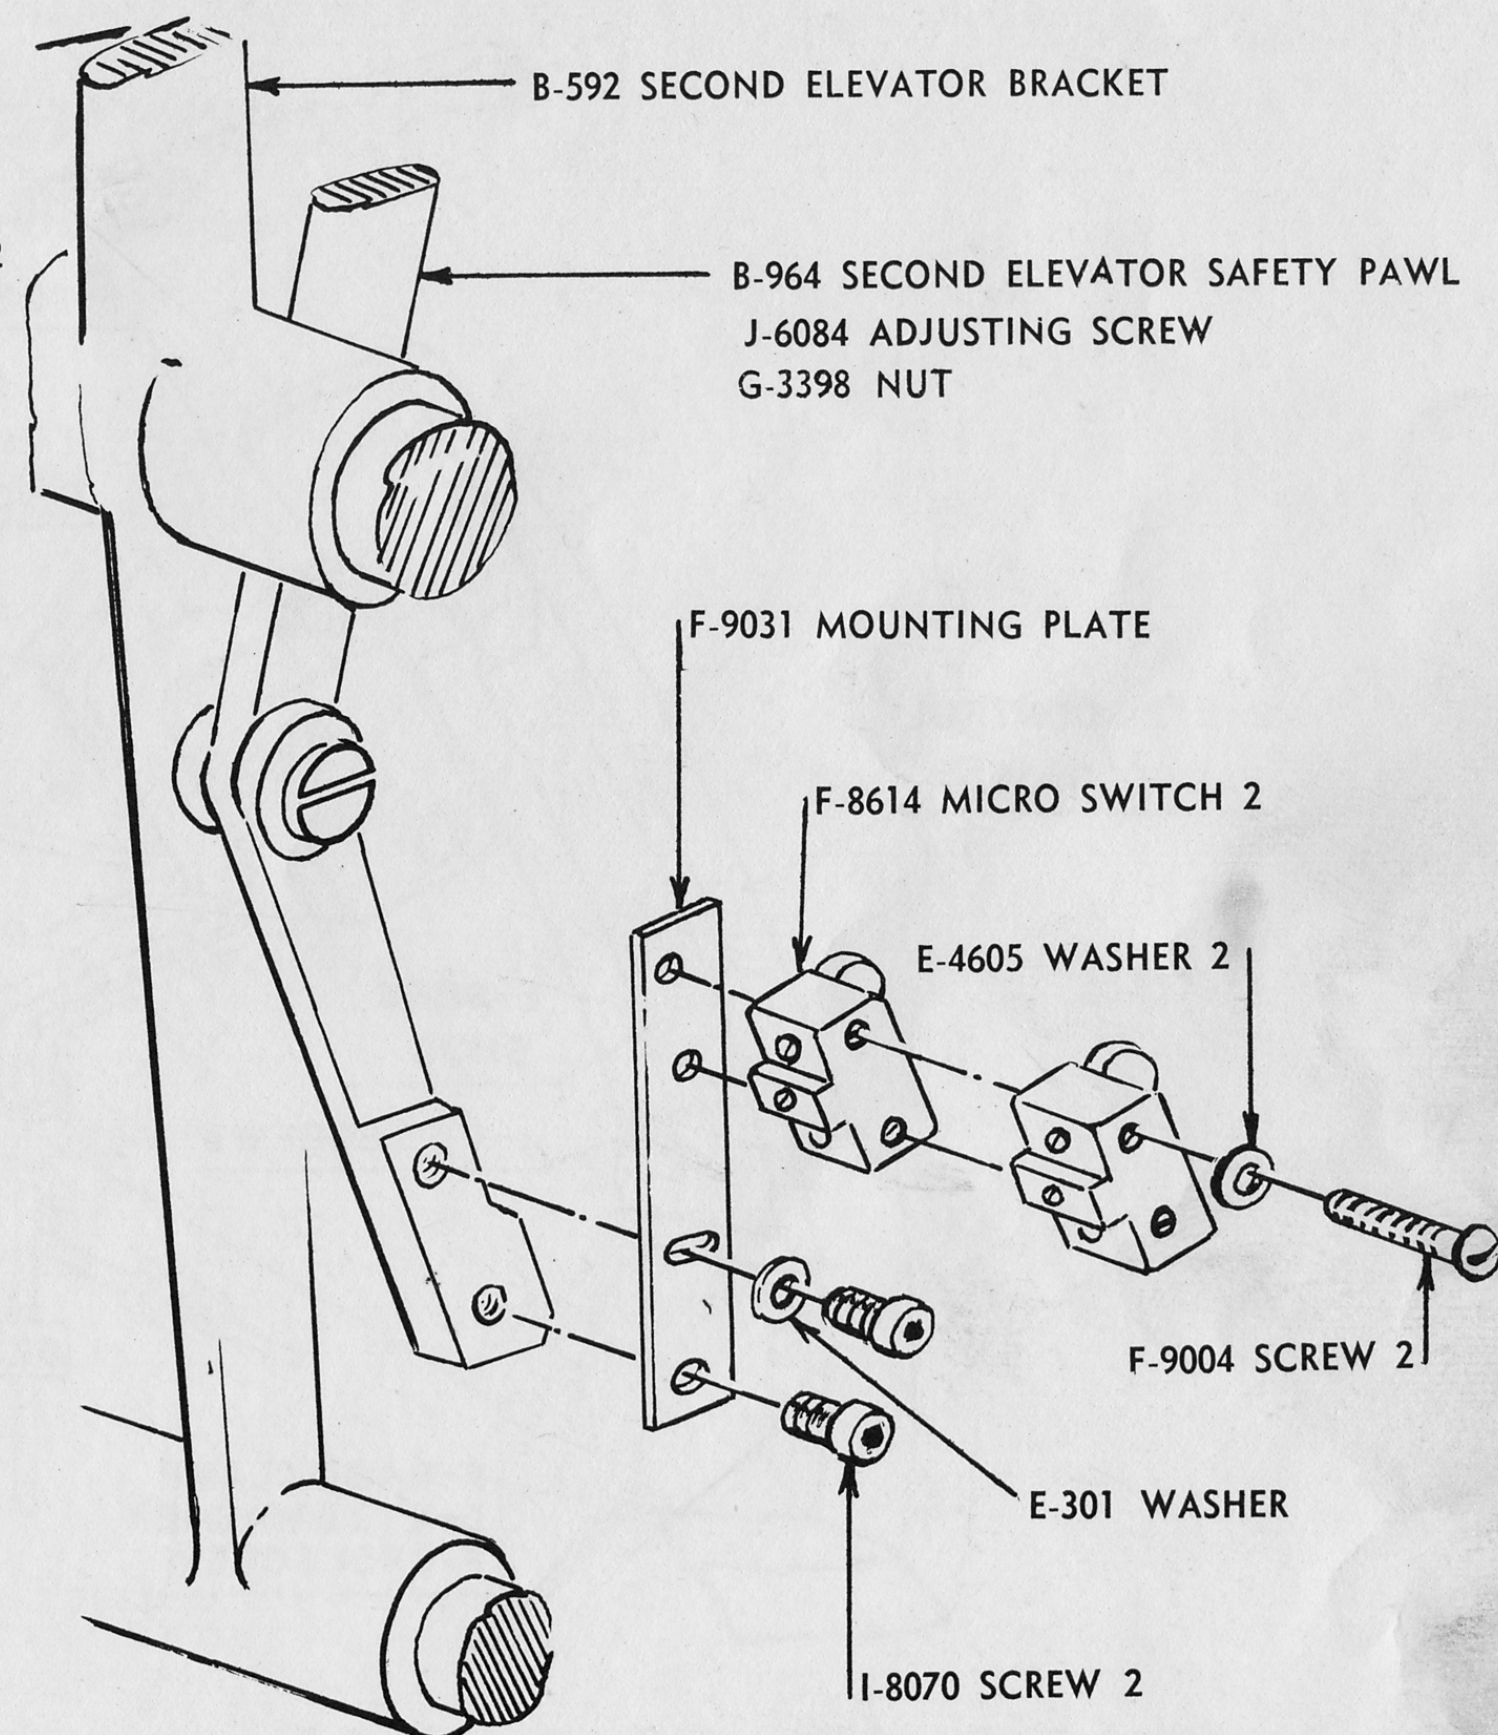 

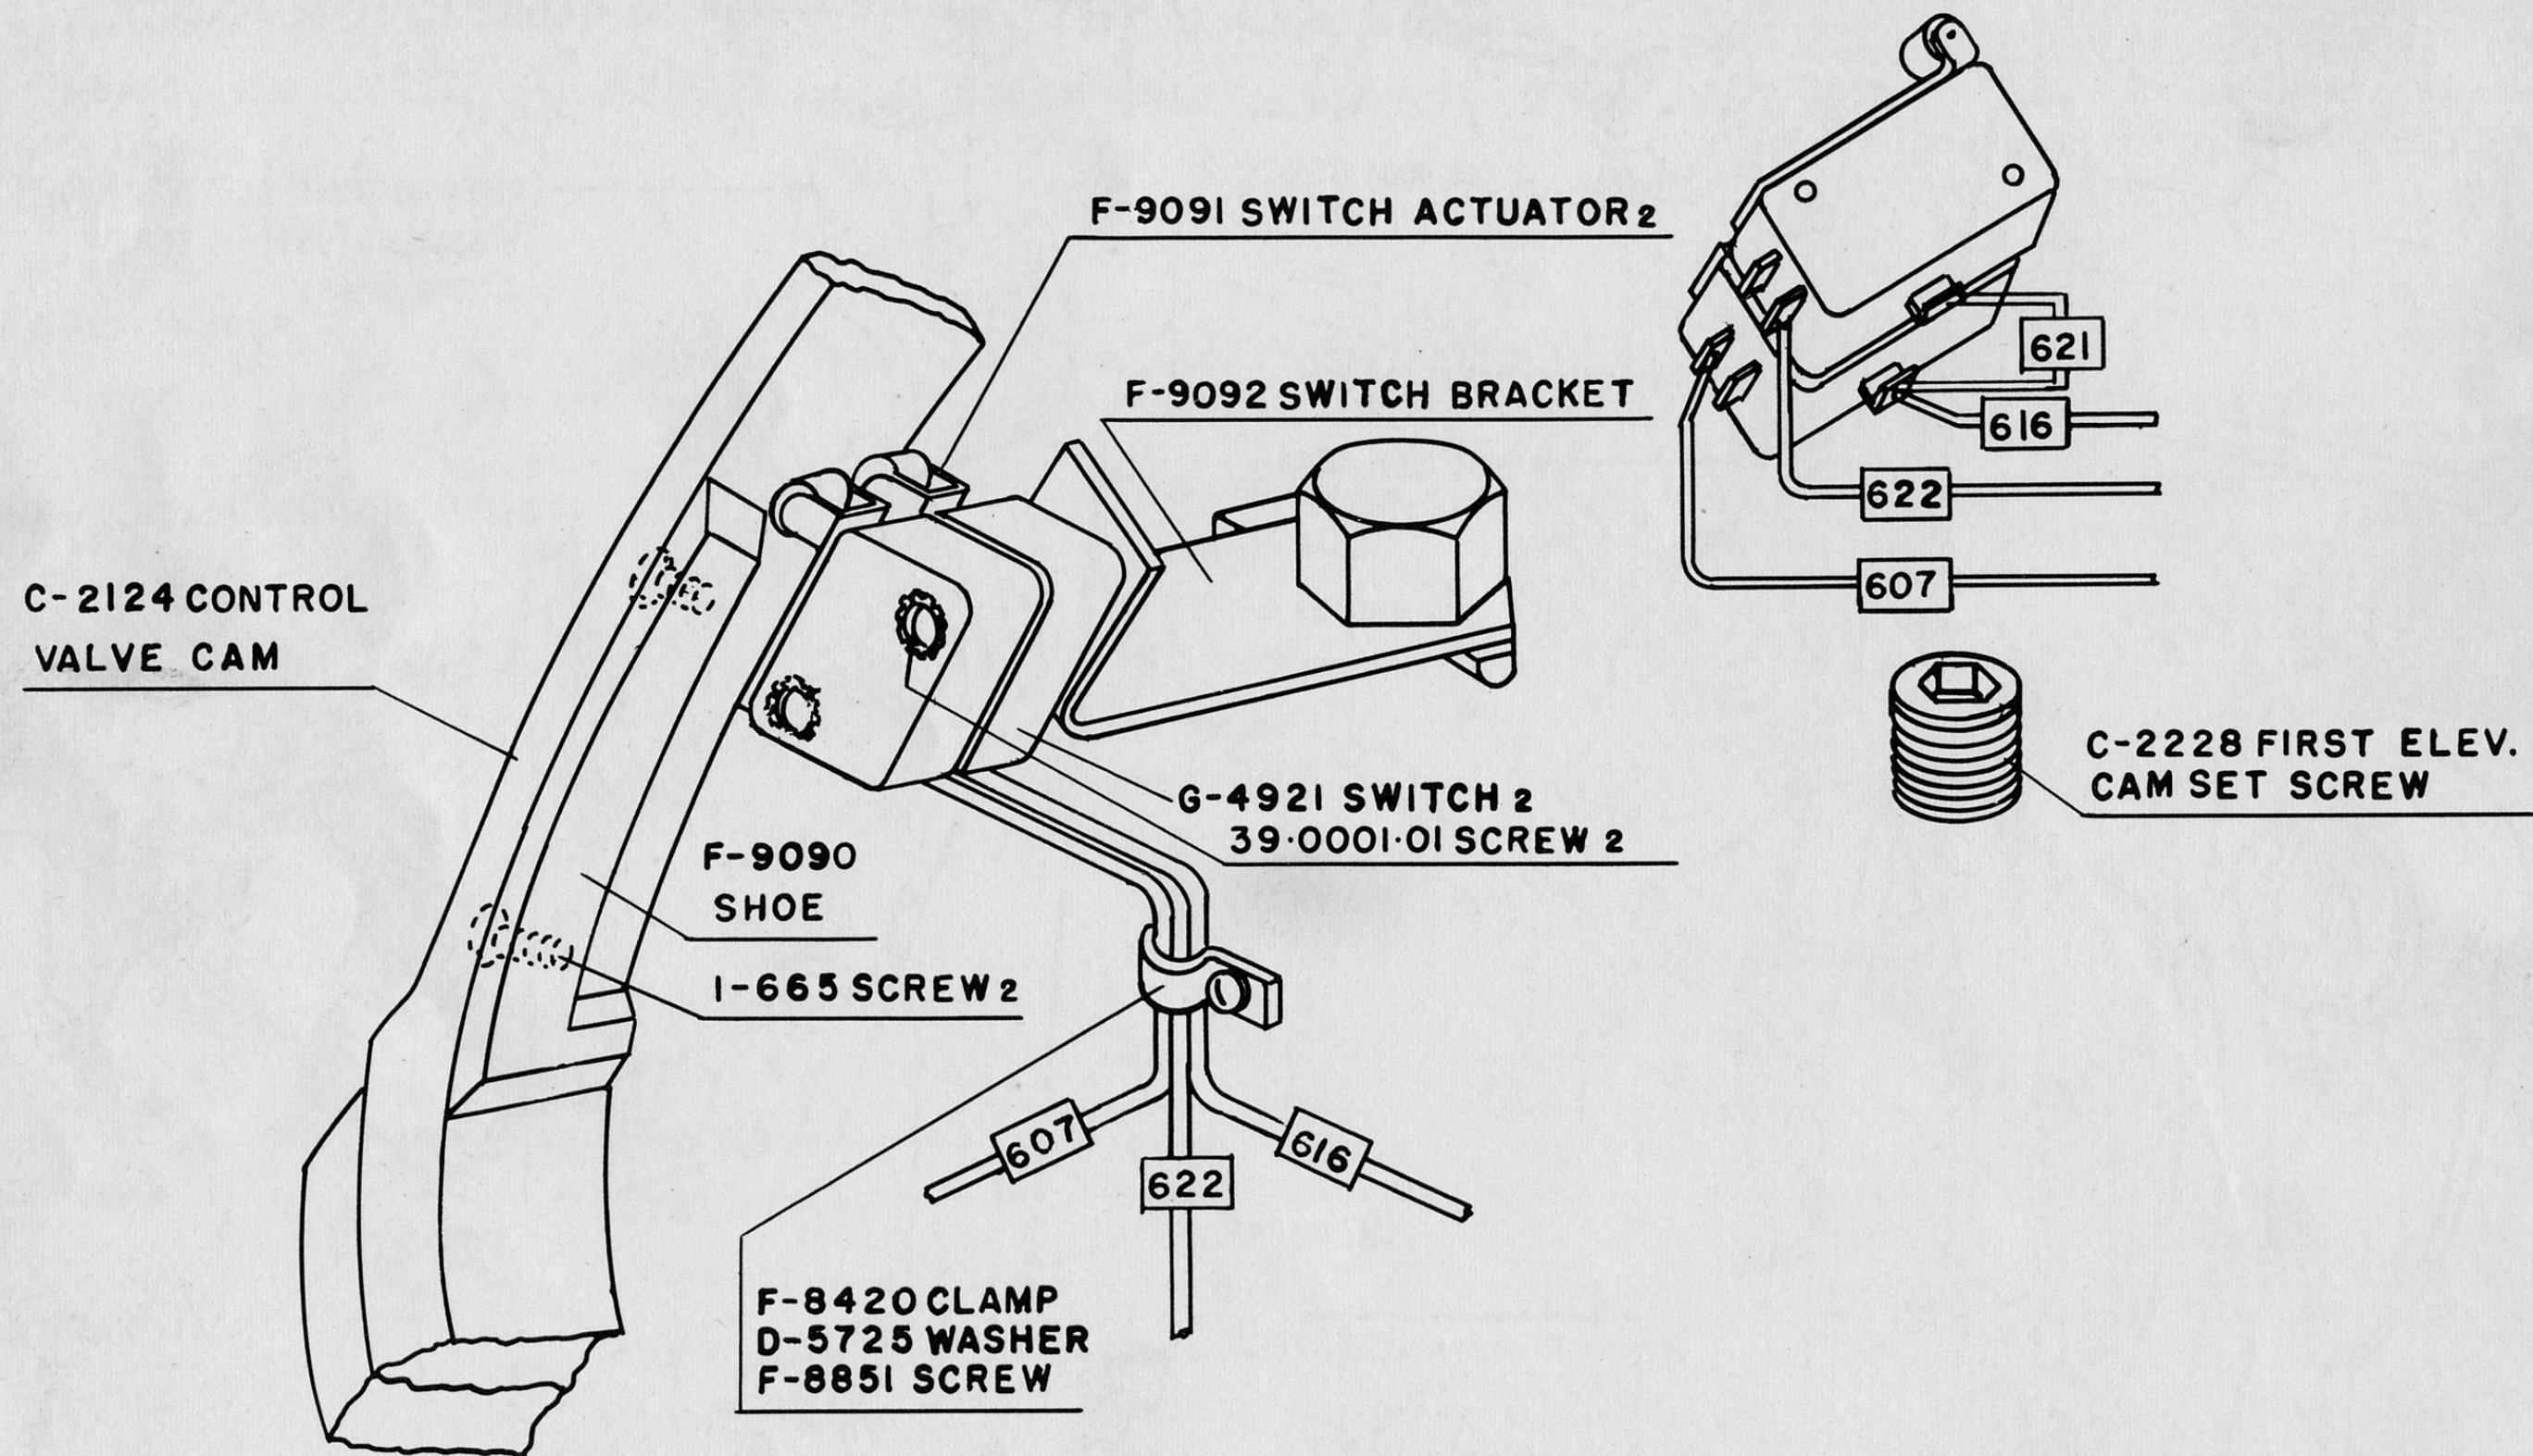 

INDEX TO PARTS

Linotype Electrically Controlled Hydraquadder

A		C		D		E		E		E	
Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
112	34	2113	24	4683	27	5648	27	5751	31	5844	26
464	24	2114	24	5255	27	5657	26	5767	31	5845	27
829	33	2122	24	5508	25	5664	27	5780	31	5846	27
998	31, 33	2124	24-36	5725	31, 34, 36	5681	27	5824	27	5847	25
B		2125	24	6190	26	5684	26	5825	27	5848	26
20	35	2126	24	7112	31	5685	26	5826	26	5849	26
99	34	2218	24	E		5698	26	5827	28	5850	24
331	35	2219	24	301	35	5699	26	5828	26	5851	25
592	35	2220	24	1126	25	5702	26, 29	5829	26	5852	25
964	35	2228	36	3524	27	5703	29	5831	27	5853	26
965	26	D		3816	34, 35	5704	26, 27, 29	5832	27	5854	26, 27
BB		34	30, 31	3696	27	5706	29	5833	27	5855	26
148	35	326	33, 34	4605	35	5712	26	5834	27	5856	27
C		534	33	4983	26	5713	26	5835	27	5857	27
199	24	802	34, 35	5614	26	5722	26, 28	5836	27	5858	24, 26
1131	31	1402	33	5633	27	5723	24, 26	5839	27	5859	26, 27
1502	32	1857	34	5647	27	5727	24	5840	27	5860	24, 27
		3626	27			5731	24, 26	5842	24, 25	5883	27
						5748	27	5843	27	5887	26


INDEX TO PARTS (Cont.)

Linotype Electrically Controlled Hydraquadder

F		F		F		F		G		I	
Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
26	24	8630	31	8987	30	9012	33	152	32	114	27
2399	31	8631	31	8988	30, 32	9014	33	274	32	665	36
2462	28	8635	31	8989	30	9015	35	939	25	6673	30, 34, 35
3260	28, 34	8657	27	8990	30	9016	34	1168	35	8070	35
3514	30-33	8658	31	8991	30	9017	30	3398	35		
4797	27	8678	31	8992	34	9028	34	3995	25		
5599	24	8710	27	8993	30	9031	35	4841	27		
6505	34	8805	31, 33	8994	30	9032	31, 32	4921	36		
6746	26	8851	31, 34, 36	8995	33	9034	34				
8191	31	8910	30, 31	8997	33	9035	34				
8240	25	8977	31, 32	8999	28	9036	34				
8402	31	8978	31	9000	35	9037	34				
8419	28, 31	8979	31	9003	35	9039	32				
8420	31, 34, 36	8980	33	9004	35	9048	34				
8423	31	8981	31	9005	30, 31, 33	9058	34				
8429	31	8982	31, 32	9006	28	9070	33				
8504	31	8983	30, 31, 33	9008	34	9071	33				
8532	27	8984	32	9009	34	9090	36				
8599	31	8985	31	9010	34	9091	36				
8614	35	8986	30	9011	33	9092	36				
8617	31										

H		J	
Part No.	Page	Part No.	Page
132	31	171	27
192	27	223	28
3721	26	1228	25-28
4438	35	5375	26
5275	26	5496	31
6567	30, 31, 34	5498	27
6825	34	6084	35

MISC.	
Part No.	Page
Q-1573	31
39-0001-01	36

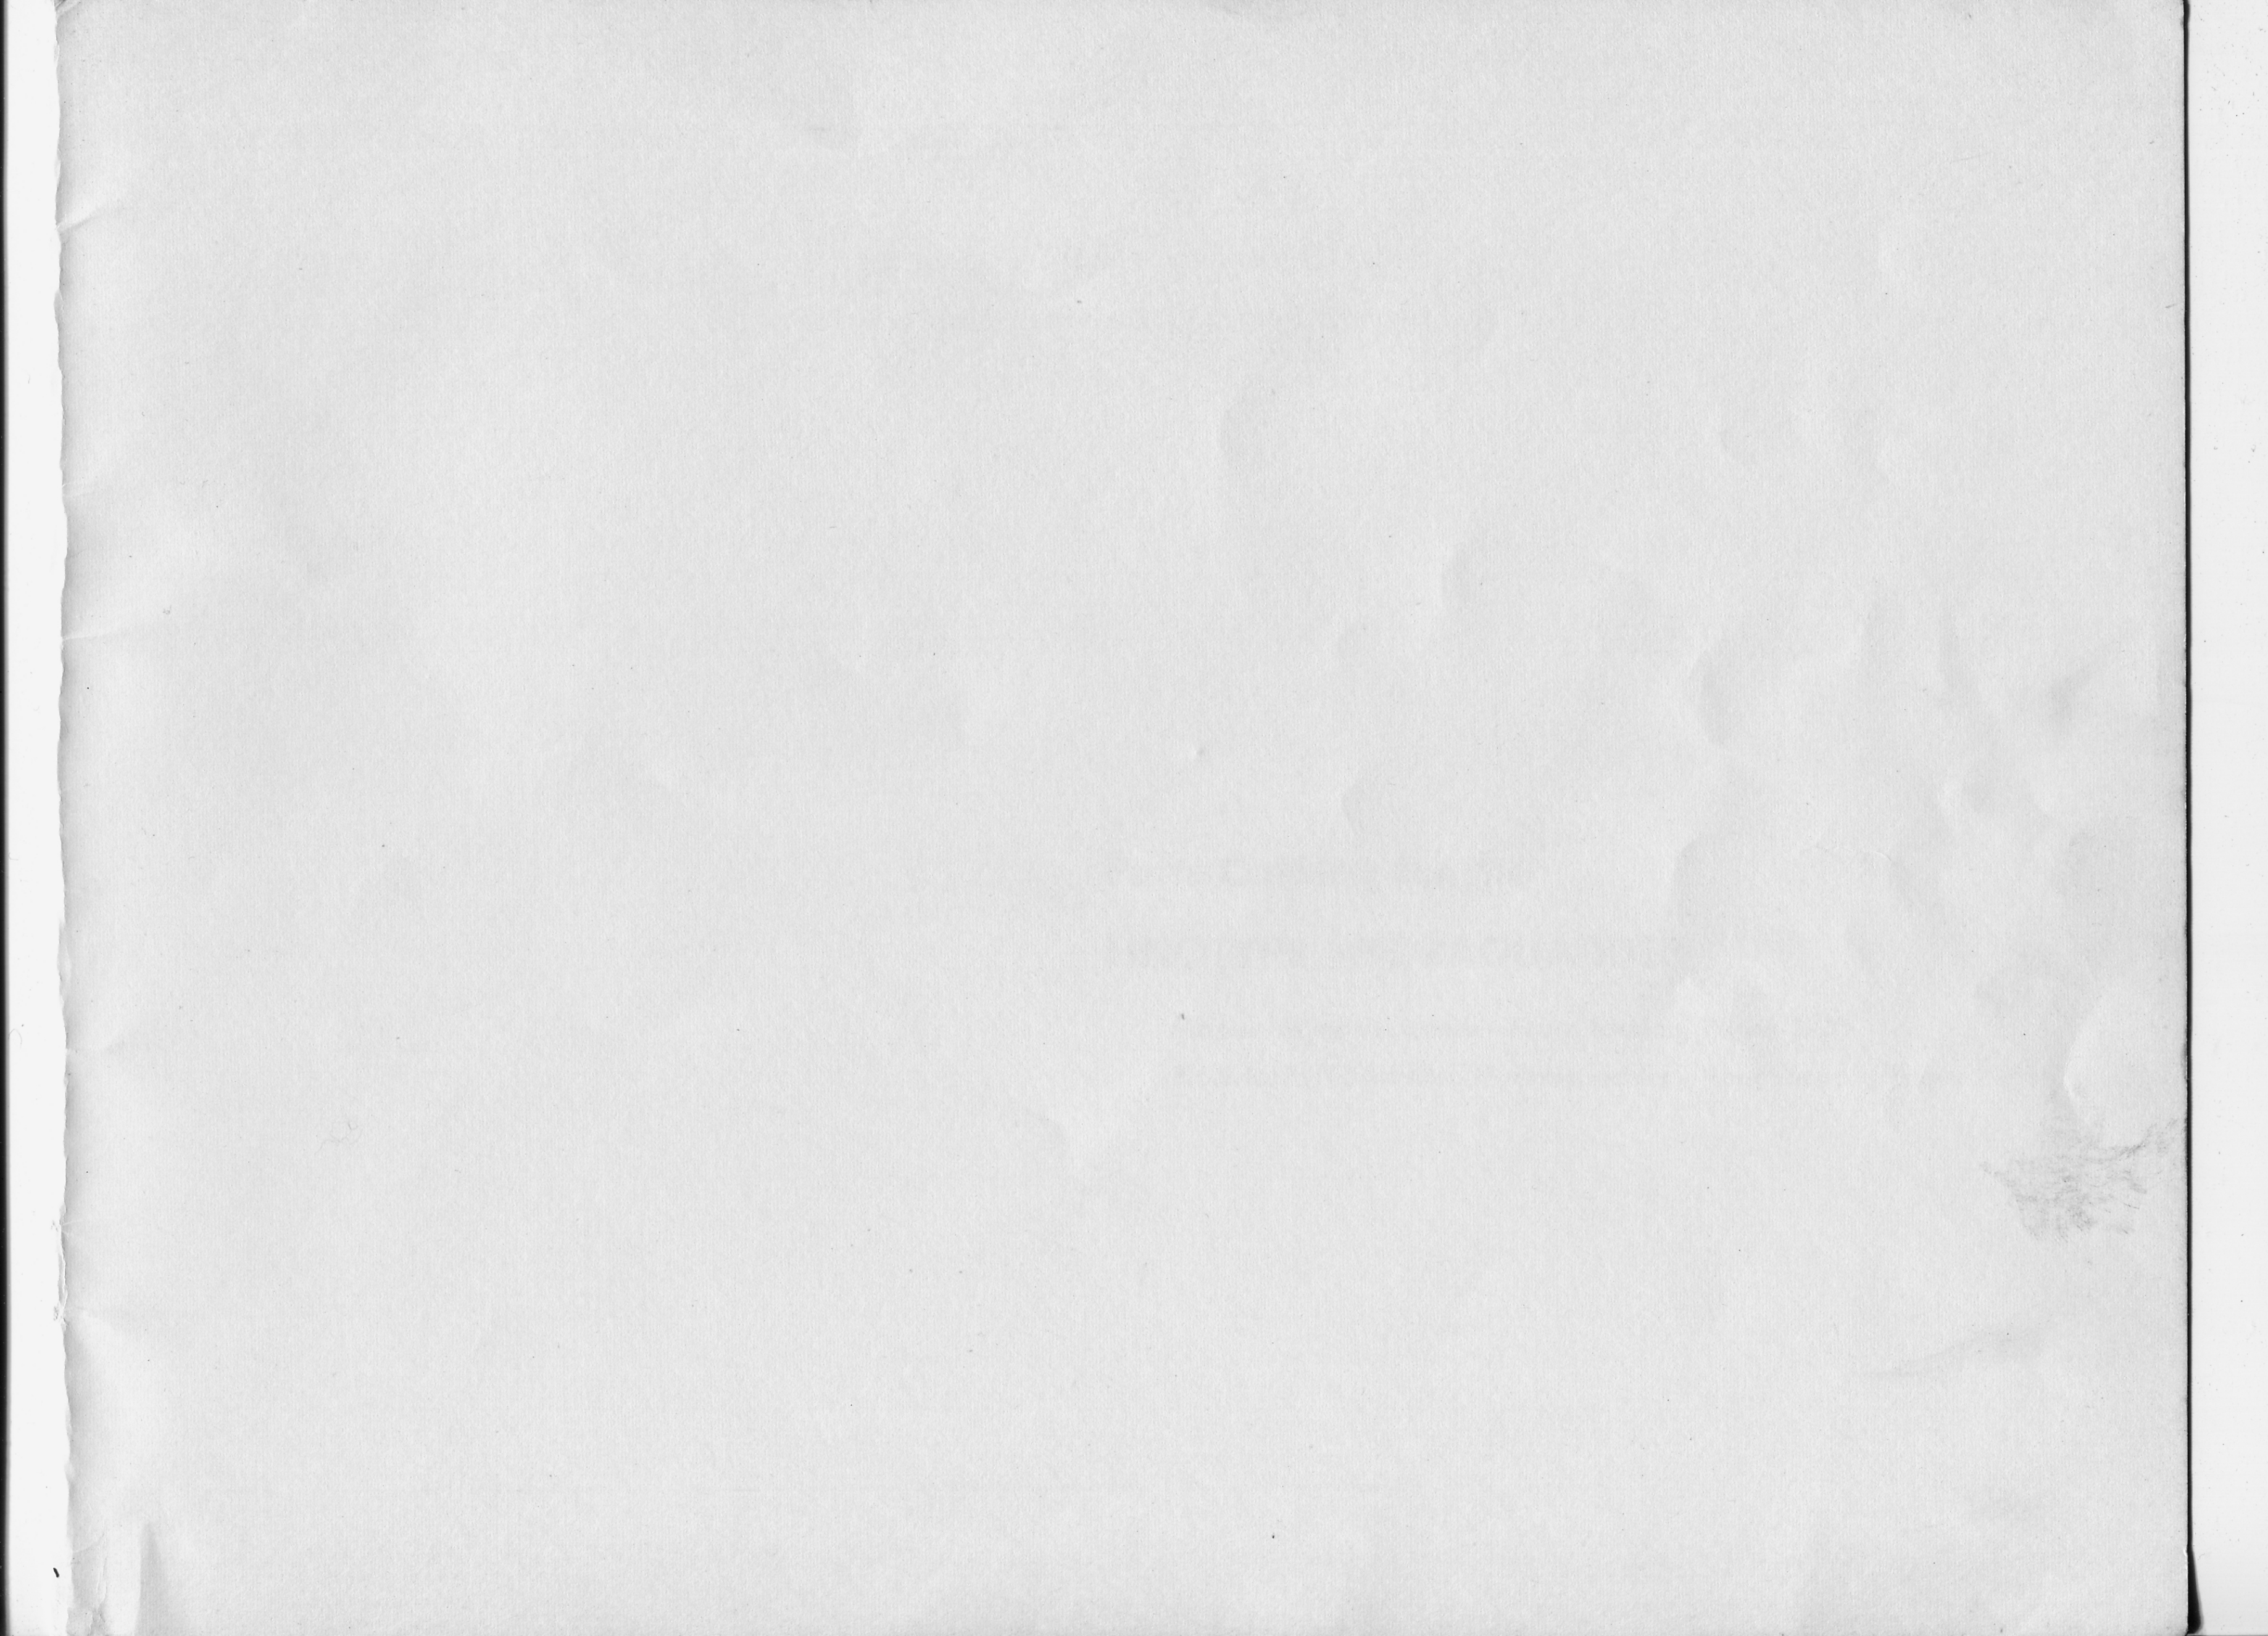 

THE UNIVERSITY OF CHICAGO PRESS

CHICAGO, ILL. 60607

ATLANTA 13 300 Luckie Street, N. W.
BOSTON 16 Suite 844, Park Square Building
CHICAGO 5 531 Plymouth Court
CLEVELAND 14 2536 St. Clair Avenue
DALLAS 7 1304 Dragon Street

• **LINOTYPE** •

MERGENTHALER LINOTYPE COMPANY
29 Ryerson Street, Brooklyn 5, New York

LOS ANGELES 15 1212 Albany Street
NEW YORK 29 Ryerson St., Brooklyn 5
SAN FRANCISCO 3 155 Twelfth Street
Canadian Linotype, Limited
TORONTO 2B 675 King Street, West

L E A D E R S H I P T H R O U G H R E S E A R C H

Printed in U. S. A. 741.58-D-WW-4X